

---

# CONTENTS

---

<b>1</b>	<b>GENERAL INFORMATION, AND BOATING SAFETY</b>	HOW TO USE THIS MANUAL	1-2		
		BOATING SAFETY	1-3		
		SAFETY IN SERVICE	1-11		
<b>2</b>	<b>TOOLS AND EQUIPMENT</b>	TOOLS AND EQUIPMENT	2-2		
		TOOLS	2-4		
		FASTENERS, MEASUREMENTS AND CONVERSIONS	2-12		
<b>3</b>	<b>MAINTENANCE AND TUNE-UP</b>	ENGINE MAINTENANCE	3-2		
		BOAT MAINTENANCE	3-21		
		TUNE-UP	3-25		
		WINTER STORAGE CHECKLIST	3-38		
		SPRING COMMISSIONING CHECKLIST	3-38		
<b>4</b>	<b>FUEL SYSTEM</b>	FUEL SYSTEM BASICS	4-2		
		CARBURETION	4-4		
		FUEL INJECTION	4-19		
<b>5</b>	<b>IGNITION AND ELECTRICAL SYSTEMS</b>	UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS	5-2		
		BREAKER POINTS IGNITION (MAGNETO IGNITION)	5-7		
		CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM	5-12		
		ELECTRONIC IGNITION	5-34		
		CHARGING CIRCUIT	5-35		
		STARTING CIRCUIT	5-43		
		COMPONENT LOCATIONS	5-48		
		IGNITION AND ELECTRICAL WIRING DIAGRAMS	5-52		
		<b>6</b>	<b>LUBRICATION AND COOLING</b>	LUBRICATION SYSTEM	6-2
				COOLING SYSTEM	6-9

---

# CONTENTS

ENGINE MECHANICAL ENGINE RECONDITIONING	7-2 7-31	POWERHEAD	7
LOWER UNIT LOWER UNIT OVERHAUL JET DRIVE	8-2 8-10 8-68	LOWER UNIT	8
MANUAL TILT GAS ASSISTED TILT POWER TRIM AND TILT	9-2 9-2 9-4	TRIM AND TILT	9
REMOTE CONTROL BOX TILLER HANDLE	10-2 10-11	REMOTE CONTROL	10
HAND REWIND STARTER	11-2	HAND REWIND STARTER	11
GLOSSARY	11-13	GLOSSARY	
MASTER INDEX	11-17	MASTER INDEX	
SUPPLEMENT—BF2D, BF75A AND BF90A	12-1	SUPPLEMENT	12

■ Throughout this manual you will find references to Honda models with the suffix "A" (BF#A). Procedures for later motors with a model suffix "D" (BF#D) are the same, unless noted or unless listed in the Supplement. For instance, most procedures on the BF2A apply to the BF2D, unless otherwise noted, but when working on a BF2D be sure to check the Supplement before starting a procedure. This Supplement also contains late production specifications for the BF75A/BF90A motors.

AIR CLEANER 3-13  
ALTERNATOR (STATOR) 5-38  
  REMOVING & INSTALLATION 5-39  
  TESTING 5-38  
AVOIDING THE MOST COMMON MISTAKES 1-3  
AVOIDING TROUBLE 1-2  
BASIC ELECTRICAL THEORY 5-2  
  HOW DOES ELECTRICITY WORK: THE WATER ANALOGY 5-2  
  OHM'S LAW 5-2  
BATTERY (BOAT MAINTENANCE) 3-23  
  BATTERY AND CHARGING SAFETY PRECAUTIONS 3-24  
  BATTERY CHARGERS 3-25  
  BATTERY TERMINALS 3-24  
  CHECKING SPECIFIC GRAVITY 3-23  
  CLEANING 3-23  
  REPLACING BATTERY CABLES 3-25  
BATTERY (CHARGING CIRCUIT) 5-40  
  BATTERY & CHARGING SAFETY PRECAUTIONS 5-42  
  BATTERY CABLES 5-43  
  BATTERY CHARGERS 5-43  
  BATTERY CONSTRUCTION 5-40  
  BATTERY LOCATION 5-41  
  BATTERY RATINGS 5-40  
  BATTERY SERVICE 5-41  
  BATTERY STORAGE 5-43  
  BATTERY TERMINALS 5-42  
  MARINE BATTERIES 5-40  
**BOAT MAINTENANCE 3-21**  
**BOATING SAFETY 1-3**  
BOLTS, NUTS AND OTHER THREADED RETAINERS 2-12  
BREAKER POINTS 5-9  
  GAP CHECK 5-9  
  REMOVAL & INSTALLATION 5-9  
**BREAKER POINTS IGNITION (MAGNETO  
IGNITION) 5-7**  
BREAKER POINTS IGNITION OVERHAUL 5-11  
  ASSEMBLY 5-12  
  CLEANING & INSPECTION 5-11  
  DISASSEMBLY 5-11  
BUY OR REBUILD? 7-32  
CAMSHAFT, BEARINGS AND LIFTERS 7-25  
  REMOVAL & INSTALLATION 7-25  
CAN YOU DO IT? 1-2  
CAPACITIES 3-11  
**CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM 5-12**  
**CARBURETION 4-4**  
CARBURETOR FLOAT HEIGHTS 4-13  
CARBURETOR IDENTIFICATION 4-4  
CARBURETOR PILOT SCREW SPECIFICATIONS 4-13  
CARBURETORS 4-6  
  ASSEMBLY 4-11  
  CLEANING & INSPECTION 4-11  
  DESCRIPTION AND OPERATION 4-6  
  DISASSEMBLY 4-9  
  REMOVAL & INSTALLATION 4-8  
CDI TEST CHARTS 5-26  
CDI UNIT 5-25  
  DESCRIPTION & OPERATION 5-25  
  REMOVAL & INSTALLATION 5-30  
  TESTING 5-26  
CHARGE COIL (BREAKER POINTS IGNITION) 5-10  
  DESCRIPTION & OPERATION 5-10  
  REMOVAL & INSTALLATION 5-10  
  TESTING 5-10  
CHARGE COIL (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-18  
  DESCRIPTION & OPERATION 5-18  
  REMOVAL & INSTALLATION 5-19  
  TESTING 5-18  
**CHARGING CIRCUIT 5-35**  
CHEMICALS 2-3  
  CLEANERS 2-4

# MASTER INDEX

# 11-18 MASTER INDEX

- LUBRICANTS & PENETRANTS 2-3
- SEALANTS 2-3
- CHOKE SWITCH 10-7
  - REMOVAL & INSTALLATION 10-7
  - TESTING 10-7
- COMBUSTION 4-3
  - ABNORMAL COMBUSTION 4-3
  - FACTORS AFFECTING COMBUSTION 4-3
- COMPONENT LOCATIONS (IGNITION & ELECTRICAL) 5-48**
- COMPRESSION CHECK 3-26
  - CHECKING COMPRESSION 3-26
  - LOW COMPRESSION 3-26
- CONDENSER 5-10
  - DESCRIPTION & OPERATION 5-10
  - REMOVAL & INSTALLATION 5-10
  - TESTING 5-10
- CONVERSION FACTORS 2-14
- COOLING SYSTEM 6-9**
- COURTESY MARINE EXAMINATIONS 1-11
- CYLINDER HEAD (ENGINE MECHANICAL) 7-11
  - REMOVAL & INSTALLATION 7-11
- CYLINDER HEAD (ENGINE RECONDITIONING) 7-34
  - ASSEMBLY 7-38
  - DISASSEMBLY 7-34
  - INSPECTION 7-35
  - REFINISHING & REPAIRING 7-37
- DESCRIPTION AND OPERATION (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-12
  - FOUR-CYLINDER CARBURETED IGNITION 5-13
  - FOUR-CYLINDER EFI IGNITION 5-13
  - SINGLE-CYLINDER IGNITION 5-12
  - TWO & THREE-CYLINDER IGNITION 5-13
- DESCRIPTION AND OPERATION (CHARGING CIRCUIT) 5-35
- DESCRIPTION AND OPERATION (COOLING SYSTEM) 6-9
  - OVERHEAT WARNING SYSTEM 6-9
  - THERMOSTAT & PRESSURE RELIEF 6-9
  - WATER PUMP 6-9
- DESCRIPTION AND OPERATION (ELECTRONIC IGNITION) 5-34
- DESCRIPTION AND OPERATION (GAS ASSISTED TILT) 9-2
- DESCRIPTION AND OPERATION (HAND REWIND STARTER) 11-2
- DESCRIPTION AND OPERATION (JET DRIVE) 8-68
- DESCRIPTION AND OPERATION (LUBRICATION SYSTEM) 6-2
  - FORCED LUBRICATION 6-2
  - SPLASH LUBRICATION 6-2
- DESCRIPTION AND OPERATION (MANUAL TILT) 9-2
  - SERVICING 9-2
- DESCRIPTION AND OPERATION (POWER TRIM AND TILT) 9-4
- DESCRIPTION AND OPERATION (REMOTE CONTROL BOX) 10-2
- DESCRIPTION AND OPERATION (STARTING CIRCUIT) 5-43
- DESCRIPTION AND OPERATION (TILLER HANDLE) 10-11
- DETERMINING ENGINE CONDITION 7-31
  - COMPRESSION TEST 7-31
  - OIL PRESSURE TEST 7-32
- DIAGNOSTIC TROUBLE CODE CHART 4-23
- DIAGNOSTIC TROUBLE CODES 4-22
  - CLEARING 4-24
  - READING 4-23
  - SERVICE PRECAUTIONS 4-22
- DIRECTIONS AND LOCATIONS 1-2
- DO'S 1-11
- DON'TS 1-11
- DRAINING THE FUEL SYSTEM 4-4
- ELECTRICAL COMPONENTS 5-2
  - CONNECTORS 5-4
  - GROUND 5-3
  - LOAD 5-3
  - POWER SOURCE 5-2
  - PROTECTIVE DEVICES 5-3
  - SWITCHES & RELAYS 5-3
  - WIRING & HARNESSSES 5-4
- ELECTRICAL SYSTEM PRECAUTIONS 5-7
- ELECTRONIC IGNITION 5-34**
- ENGINE BLOCK 7-39
  - ASSEMBLY 7-42
  - DISASSEMBLY 7-39
  - GENERAL INFORMATION 7-39
  - INSPECTION 7-40
  - REFINISHING 7-42
- ENGINE COOLANT TEMPERATURE (ECT) 4-27
  - DESCRIPTION & INSTALLATION 4-27
  - REMOVAL & INSTALLATION 4-27
  - TESTING 4-27
- ENGINE COVER 3-7
  - REMOVAL & INSTALLATION 3-7
- ENGINE MAINTENANCE 3-2**
- ENGINE MECHANICAL 7-2**
- ENGINE OIL 3-7
  - ENGINE OIL RECOMMENDATIONS 3-8
  - OIL & FILTER CHANGE 3-10
  - OIL LEVEL CHECK 3-8
- ENGINE OVERHAUL TIPS 7-32
  - CLEANING 7-33
  - OVERHAUL TIPS 7-32
  - REPAIRING DAMAGED THREADS 7-33
  - TOOLS 7-32
- ENGINE PREPARATION 7-34
- ENGINE REBUILDING SPECIFICATIONS 7-46
- ENGINE RECONDITIONING 7-31**
- ENGINE START-UP AND BREAK-IN 7-45
  - BREAKING IT IN 7-45
  - KEEP IT MAINTAINED 7-45
  - STARTING THE ENGINE 7-45
- ENGINE STOP SWITCH (REMOTE CONTROL SWITCH) 10-7
  - REMOVAL & INSTALLATION 10-8
  - TESTING 10-7
- ENGINE STOP SWITCH (TILLER HANDLE) 10-20
  - REMOVAL & INSTALLATION 10-20
  - TESTING 10-20
- EQUIPMENT NOT REQUIRED BUT RECOMMENDED 1-10
  - ANCHORS 1-10
  - BAILING DEVICES 1-10
  - FIRST AID KIT 1-10
  - SECOND MEANS OF PROPULSION 1-10
  - TOOLS AND SPARE PARTS 1-10
  - VHF-FM RADIO 1-10
- FASTENERS, MEASUREMENTS AND CONVERSIONS 2-12**
- FIBERGLASS HULLS 3-21
- FLYWHEEL 7-29
  - REMOVAL & INSTALLATION 7-29
- FUEL 4-2
  - ALCOHOL-BLENDED FUELS 4-3
  - HIGH ALTITUDE OPERATION 4-3
  - OCTANE RATING 4-2
  - RECOMMENDATIONS 4-2
  - THE BOTTOM LINE WITH FUELS 4-3
  - VAPOR PRESSURE AND ADDITIVES 4-2
- FUEL FILTER 3-13
  - RELIEVING FUEL SYSTEM PRESSURE 3-14
  - REMOVAL & INSTALLATION 3-14
- FUEL INJECTION 4-19**
- FUEL INJECTION BASICS 4-19
- FUEL INJECTORS 4-28
  - DESCRIPTION & OPERATION 4-28
  - REMOVAL & INSTALLATION 4-28
  - TESTING 4-28

- FUEL LINES (CARBURETION) 4-15
  - GENERAL INFORMATION 4-15
  - REPLACEMENT & ROUTING 4-15
- FUEL LINES (FUEL INJECTION) 4-32
  - COMMON PROBLEMS 4-34
  - GENERAL INFORMATION 4-32
  - REPLACEMENT & ROUTING 4-33
- FUEL PRESSURE REGULATOR 4-32
  - DESCRIPTION & OPERATION 4-32
  - INSPECTION 4-32
  - REMOVAL & INSTALLATION 4-32
- FUEL PUMP (CARBURETION) 4-14
  - ASSEMBLY 4-15
  - CLEANING & INSPECTION 4-15
  - DESCRIPTION & OPERATION 4-14
  - DISASSEMBLY 4-14
  - FUEL PRESSURE CHECK 4-14
  - REMOVAL & INSTALLATION 4-14
- FUEL PUMP (FUEL INJECTION) 4-31
  - DESCRIPTION & OPERATION 4-31
  - FUEL PRESSURE CHECK 4-31
  - OVERHAUL 4-32
  - REMOVAL & INSTALLATION 4-31
- FUEL SYSTEM BASICS 4-2**
- FUEL SYSTEM SERVICE 4-3
- FUEL/WATER SEPARATOR 3-15
- GAS ASSIST DAMPER 9-3
  - OVERHAUL 9-4
  - REMOVAL & INSTALLATION 9-3
  - TESTING 9-3
- GAS ASSISTED TILT 9-2**
- GENERAL ENGINE SPECIFICATIONS 3-3
- GENERAL INFORMATION (LOWER UNIT) 8-2
- HAND REWIND STARTER 11-2**
- BF2A AND BF20 11-2
  - ASSEMBLY 11-3
  - CLEANING & INSPECTION 11-3
  - DISASSEMBLY 11-3
  - REMOVAL & INSTALLATION 11-2
- BF5A AND BF50 11-4
  - ASSEMBLY 11-5
  - CLEANING & INSPECTION 11-4
  - DISASSEMBLY 11-4
  - REMOVAL & INSTALLATION 11-4
- BF9.9A AND BF15A 11-7
  - ADJUSTMENT 11-7
  - ASSEMBLY 11-9
  - CLEANING & INSPECTION 11-9
  - DISASSEMBLY 11-7
  - REMOVAL & INSTALLATION 11-7
- BF25A AND BF30A 11-9
  - ADJUSTMENT 11-10
  - ASSEMBLY 11-11
  - CLEANING & INSPECTION 11-10
  - DISASSEMBLY 11-10
  - REMOVAL & INSTALLATION 11-9
- BF75, BF100 AND BF8A 11-5
  - ASSEMBLY 11-7
  - CLEANING & INSPECTION 11-6
  - DISASSEMBLY 11-6
  - REMOVAL & INSTALLATION 11-5
- HAND TOOLS 2-4
  - ELECTRONIC TOOLS 2-9
  - GAUGES 2-9
  - HAMMERS 2-8
  - OTHER COMMON TOOLS 2-8
  - PLIERS 2-7
  - SCREWDRIVERS 2-8
- SOCKET SETS 2-4
- SPECIAL TOOLS 2-8
- WRENCHES 2-6
- HOW TO USE THIS MANUAL 1-2**
- HYDRAULIC UNIT 9-10
  - ASSEMBLY 9-15
  - BLEEDING THE SYSTEM 9-10
  - CHECKING FLUID LEVEL 9-10
  - CLEANING & INSPECTION 9-15
  - DISASSEMBLY 9-14
  - REMOVAL & INSTALLATION 9-11
  - TESTING 9-10
- IGNITION AND ELECTRICAL WIRING DIAGRAMS 5-52**
- IGNITION COIL (BREAKER POINTS IGNITION) 5-11
  - DESCRIPTION & OPERATION 5-11
  - REMOVAL & INSTALLATION 5-11
  - TESTING 5-11
- IGNITION COILS (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-20
  - DESCRIPTION & OPERATION 5-20
  - REMOVAL & INSTALLATION 5-22
  - TESTING 5-20
- IGNITION SWITCH 10-8
  - REMOVAL & INSTALLATION 10-8
  - TESTING 10-8
- IGNITION SYSTEM 3-36
- INDICATOR LIGHT (TILLER HANDLE) 10-20
  - REMOVAL & INSTALLATION 10-20
  - TESTING 10-20
- INDICATOR LIGHTS (REMOTE CONTROL BOX) 10-8
  - REMOVAL & INSTALLATION 10-8
  - TESTING 10-8
- INSIDE THE BOAT 3-21
- INTAKE AIR TEMPERATURE SENSOR (IAT) 4-27
  - DESCRIPTION & OPERATION 4-27
  - REMOVAL & INSTALLATION 4-27
  - TESTING 4-27
- INTAKE MANIFOLD 7-9
  - REMOVAL & INSTALLATION 7-9
- INTRODUCTION (TUNE-UP) 3-25
- JET DRIVE 8-68**
- JET DRIVE ASSEMBLY 8-69
  - ADJUSTMENT 8-72
  - ASSEMBLING 8-75
  - CLEANING & INSPECTING 8-74
  - DISASSEMBLY 8-74
  - REMOVAL & INSTALLATION 8-69
- LIGHTING COIL 5-20
  - DESCRIPTION & OPERATION 5-20
  - REMOVAL & INSTALLATION 5-20
  - TESTING 5-20
- LOWER UNIT 8-2**
- LOWER UNIT (ENGINE MAINTENANCE) 3-12
  - DRAINING AND FILLING 3-12
- LOWER UNIT OVERHAUL 8-10**
- LOWER UNIT—NO REVERSE GEAR 8-5
  - ASSEMBLY 8-11
  - CLEANING & INSPECTION 8-10
  - DISASSEMBLY 8-10
  - REMOVAL & INSTALLATION 8-5
- LOWER UNIT—WITH REVERSE GEAR 8-8
  - ASSEMBLY 8-33
  - CLEANING & INSPECTING 8-29
  - DISASSEMBLY 8-12
  - REMOVAL & INSTALLATION 8-8
  - SHIMMING PROCEDURE 8-50
- LUBRICATION SYSTEM 6-2**
- MAINTENANCE INTERVALS 3-6

# 11-20 MASTER INDEX

- MAINTENANCE OR REPAIR? 1-2
- MANUAL TILT 9-2**
- MEASURING TOOLS 2-10
  - DEPTH GAUGES 2-12
  - DIAL INDICATORS 2-11
  - MICROMETERS & CALIPERS 2-11
  - TELESCOPING GAUGES 2-12
- METRIC BOLTS 2-15
- MODEL IDENTIFICATION AND SERIAL NUMBERS 8-68
- OIL PAN 7-16
  - REMOVAL & INSTALLATION 7-16
- OIL PRESSURE SWITCH 6-6
  - REMOVAL & INSTALLATION 6-7
  - TESTING 6-6
- OIL PRESSURE WARNING LAMP 6-7
  - REMOVAL & INSTALLATION 6-7
  - TESTING 6-7
- OIL PUMP 6-3
  - OVERHAUL 6-4
  - REMOVAL & INSTALLATION 6-3
- OVERHEAT SENSOR 4-28
  - DESCRIPTION & OPERATION 4-28
  - REMOVAL & INSTALLATION 4-28
  - TESTING 4-28
- OVERHEAT THERMOSWITCH 6-16
  - REMOVAL & INSTALLATION 6-16
  - TESTING 6-16
- OVERHEAT WARNING LAMP 6-15
  - REMOVAL & INSTALLATION 6-16
  - TESTING 6-15
- POWER TRIM AND TILT 9-4**
- PRIMARY COIL 5-11
  - DESCRIPTION & OPERATION 5-11
  - REMOVAL & INSTALLATION 5-11
  - TESTING 5-11
- PROFESSIONAL HELP 1-2
- PROPELLER (ENGINE MAINTENANCE) 3-19
- PROPELLER (LOWER UNIT) 8-4
  - REMOVAL & INSTALLATION 8-4
- PULSAR COIL 5-16
  - DESCRIPTION & OPERATION 5-16
  - REMOVAL & INSTALLATION 5-17
  - TESTING 5-16
- PURCHASING PARTS 1-3
- RECTIFIER 5-31
  - REMOVAL & INSTALLATION 5-32
  - TESTING 5-31
- REGULATIONS FOR YOUR BOAT 1-3
  - CAPACITY INFORMATION 1-4
  - CERTIFICATE OF COMPLIANCE 1-4
  - DOCUMENTING OF VESSELS 1-4
  - HULL IDENTIFICATION NUMBER 1-4
  - LENGTH OF BOATS 1-4
  - NUMBERING OF VESSELS 1-4
  - REGISTRATION OF BOATS 1-4
  - SALES AND TRANSFERS 1-4
  - VENTILATION 1-4
  - VENTILATION SYSTEMS 1-5
- REGULATOR (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-33
  - DESCRIPTION & OPERATION 5-33
  - REMOVAL & INSTALLATION 5-33
  - TESTING 5-33
- REGULATOR/RECTIFIER (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-33
  - REMOVAL & INSTALLATION 5-34
  - TESTING 5-33
- REMOTE CONTROL BOX 10-2**
- REMOTE CONTROL BOX ASSEMBLY 10-2
  - EXPLODED VIEWS 10-3
  - REMOVAL & INSTALLATION 10-2
- REQUIRED SAFETY EQUIPMENT 1-5
  - FIRE EXTINGUISHERS 1-5
  - PERSONAL FLOTATION DEVICES 1-6
  - SOUND PRODUCING DEVICES 1-8
  - TYPES OF FIRES 1-5
  - VISUAL DISTRESS SIGNALS 1-8
  - WARNING SYSTEM 1-6
- ROCKER ARM/SHAFTS 7-5
  - REMOVAL & INSTALLATION 7-5
- SAE BOLTS 2-16
- SAFETY IN SERVICE 1-11**
- SAFETY SWITCH 10-9
  - REMOVAL & INSTALLATION 10-9
  - TESTING 10-9
- SAFETY TOOLS 2-2
  - EYE AND EAR PROTECTION 2-2
  - WORK CLOTHES 2-3
  - WORK GLOVES 2-2
- SELF DIAGNOSIS 5-34
- SERIAL NUMBER IDENTIFICATION 3-2
- SHIFTING PRINCIPLES 8-2
  - COUNTERROTATING UNIT 8-3
  - STANDARD ROTATING UNIT 8-2
- SINGLE PHASE CHARGING SYSTEM 5-36
  - DESCRIPTION AND OPERATION 5-36
- SPARK PLUG WIRES 3-30
  - CHECKING RESISTANCE 3-30
  - REMOVAL & INSTALLATION 3-30
  - TESTING 3-30
- SPARK PLUGS 3-27
  - INSPECTION & GAPPING 3-28
  - READING SPARK PLUGS 3-28
  - REMOVAL & INSTALLATION 3-27
  - SPARK PLUG HEAT RANGE 3-27
  - SPARK PLUG SERVICE 3-27
- SPECIFICATIONS CHARTS**
- CAPACITIES 3-11
- CARBURETOR FLOAT HEIGHTS 4-13
- CARBURETOR PILOT SCREW SPECIFICATIONS 4-13
- CDI TEST CHARTS 5-26
- CONVERSION FACTORS 2-14
- DIAGNOSTIC TROUBLE CODE CHART 4-23
- ENGINE REBUILDING SPECIFICATIONS 7-46
- GENERAL ENGINE SPECIFICATIONS 3-3
- MAINTENANCE INTERVALS 3-6
- METRIC BOLTS 2-15
- SAE BOLTS 2-16
- TUNEUP SPECIFICATIONS 3-26
- USING A VACUUM GAUGE 2-10
- VOLTAGE REGULATOR RECTIFIER 5-32
- SPRING COMMISSIONING CHECKLIST 3-38**
- STANDARD AND METRIC MEASUREMENTS 2-13
- STARTER BUTTON 10-20
  - REMOVAL & INSTALLATION 10-20
  - TESTING 10-20
- STARTER MOTOR 5-44
  - DESCRIPTION & OPERATION 5-44
  - REMOVAL & INSTALLATION 5-45
  - TESTING 5-44
- STARTER MOTOR SOLENOID SWITCH 5-46
  - DESCRIPTION AND OPERATION 5-46
  - REMOVAL & INSTALLATION 5-47
  - TESTING 5-46
- STARTING CIRCUIT 5-43**

- SYSTEM TESTING (BREAKER POINTS IGNITION) 5-8
  - SPARK CHECK 5-8
- SYSTEM TESTING (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-16
  - PROCEDURE 5-16
- TEST EQUIPMENT 5-4
  - JUMPER WIRES 5-4
  - MULTIMETERS 5-5
  - TEST LIGHTS 5-5
- TESTING 5-6
  - OPEN CIRCUITS 5-7
  - RESISTANCE 5-6
  - SHORT CIRCUITS 5-7
  - VOLTAGE 5-6
  - VOLTAGE DROP 5-6
- THE FOUR-STROKE CYCLE 7-3
  - COMPRESSION STROKE 7-3
  - EXHAUST STROKE 7-3
  - INTAKE STROKE 7-3
  - POWER STROKE 7-3
- THREE-PHASE CHARGING SYSTEM 5-36
  - DESCRIPTION AND OPERATION 5-36
  - PRECAUTIONS 5-37
  - SERVICING 5-37
  - TROUBLESHOOTING 5-37
- THROTTLE CABLE 10-14
  - ADJUSTMENT 10-17
  - REMOVAL & INSTALLATION 10-14
- THROTTLE POSITION SENSOR (TPS) 4-26
  - DESCRIPTION & OPERATION 4-26
  - REMOVAL & INSTALLATION 4-26
  - TESTING 4-26
- THROTTLE SWITCH 10-9
  - REMOVAL & INSTALLATION 10-9
  - TESTING 10-9
- TILLER HANDLE 10-11**
- TILLER HANDLE 10-12
  - REMOVAL & INSTALLATION 10-12
- TIMING AND SYNCHRONIZATION 3-36
  - CARBURETOR SYNCHRONIZATION 3-37
  - IDLE SPEED ADJUSTMENT 3-37
  - PREPARATION 3-36
  - SYNCHRONIZATION 3-36
  - TIMING 3-36
- TIMING BELT (ENGINE MAINTENANCE) 3-15
  - ADJUSTMENT 3-16
  - INSPECTION 3-15
- TIMING BELT (ENGINE MECHANICAL) 7-19
  - ADJUSTMENT 7-22
  - INSPECTION 7-19
  - REMOVAL & INSTALLATION 7-20
- TIMING BELT COVER 7-19
  - REMOVAL & INSTALLATION 7-19
- TOOLS 2-4**
- TOOLS AND EQUIPMENT 2-2**
- TORQUE (FASTENERS, MEASUREMENTS AND CONVERSIONS) 2-13
- TRIM ANGLE SENSOR 9-16
  - REMOVAL & INSTALLATION 9-16
  - TESTING 9-16
- TRIM TABS, ANODES AND LEAD WIRES 3-22
- TRIM, TILT & PIVOT POINTS 3-19
  - INSPECTION AND LUBRICATION 3-19
- TRIM/TILT MOTOR 9-8
  - ASSEMBLY 9-10
  - CLEANING & INSPECTION 9-9
  - DISASSEMBLY 9-8
  - REMOVAL & INSTALLATION 9-8
  - TESTING 9-8
- TRIM/TILT SWITCH (POWER TRIM AND TILT) 9-16
- TRIM/TILT SWITCH (REMOTE CONTROL BOX) 10-9
  - REMOVAL & INSTALLATION 10-10
  - TESTING 10-9
- TRIM/TILT SWITCH (TILLER HANDLE) 10-20
  - REMOVAL & INSTALLATION 10-20
  - TESTING 10-20
- TROUBLESHOOTING (TILLER HANDLE) 10-11
- TROUBLESHOOTING ELECTRICAL SYSTEMS 5-6
- TROUBLESHOOTING THE CARBURETED FUEL SYSTEM 4-4
  - COMMON PROBLEMS 4-5
  - COMMON SYMPTOMS 4-5
  - LOGICAL TROUBLESHOOTING 4-4
- TROUBLESHOOTING THE CHARGING SYSTEM 5-38
- TROUBLESHOOTING THE COOLING SYSTEM 6-10
- TROUBLESHOOTING THE FUEL INJECTION SYSTEM 4-20
  - COMMON PROBLEMS 4-22
  - DIAGNOSIS BY SYMPTOM 4-21
  - LOGICAL TROUBLESHOOTING 4-20
  - PRELIMINARY INSPECTION 4-20
- TROUBLESHOOTING THE HAND REWIND STARTER 11-2
- TROUBLESHOOTING THE LOWER UNIT 8-4
- TROUBLESHOOTING THE LUBRICATION SYSTEM 6-2
- TROUBLESHOOTING THE STARTING SYSTEM 5-44
- TUNE-UP 3-25**
- TUNE-UP SEQUENCE 3-25
- TUNEUP SPECIFICATIONS 3-26
- UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS 5-2**
- USING A VACUUM GAUGE 2-10
- VALVE (ROCKER) COVER 7-3
  - REMOVAL & INSTALLATION 7-3
- VALVE CLEARANCE 3-30
  - ADJUSTMENT 3-30
- VAPOR SEPARATOR 4-29
  - CLEANING & INSPECTION 4-30
  - DESCRIPTION & OPERATION 4-29
  - REMOVAL & INSTALLATION 4-30
- VOLTAGE REGULATOR RECTIFIER 5-32
- WARNING BUZZER (COOLING SYSTEM) 6-16
  - REMOVAL & INSTALLATION 6-16
  - TESTING 6-16
- WARNING BUZZER (LUBRICATION SYSTEM) 6-8
  - REMOVAL & INSTALLATION 6-8
  - TESTING 6-8
- WARNING BUZZER (REMOTE CONTROL BOX) 10-10
  - REMOVAL & INSTALLATION 10-10
  - TESTING 10-10
- WATER PUMP 6-10
  - REMOVAL & INSTALLATION 6-10
- WHERE TO BEGIN 1-2
- WINTER STORAGE CHECKLIST 3-38**
- WIRE AND CONNECTOR REPAIR 5-7