



Presents

Repair Manuals from **SELOC**

Contents of this manual:

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-16
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-27
		<hr/>	
2	MAINTENANCE & TUNE-UP	GENERAL INFORMATION	2-2
		ENGINE MAINTENANCE	2-6
		BOAT MAINTENANCE	2-54
		TUNE-UP	2-57
		VALVE CLEARANCE	2-65
		TIMING AND SYNCHRONIZATION	2-82
		STORAGE	2-113
		CLEARING A SUBMERGED MOTOR	2-116
		SPECIFICATIONS	2-117
		<hr/>	
3	FUEL SYSTEMS	FUEL SYSTEM BASICS	3-2
		FUEL TANK & LINES	3-6
		CARBURETED FUEL SYSTEM	3-12
		ELECTRONIC FUEL INJECTION (EFI)	3-46
		TROUBLESHOOTING CHARTS - CARBURETED	3-111
		TROUBLESHOOTING CHARTS - PGM-FFI/EFI	3-124
		SPECIFICATIONS	
<hr/>			
4	IGNITION & ELECTRICAL SYSTEMS	UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS SPECIFICATIONS	4-2
		IGNITION COILS	4-21
		CHARGING CIRCUIT	4-39
		STARTING CIRCUIT	4-55
		WARNING SYSTEM	4-74
		TROUBLESHOOTING CHARTS	4-79
		WIRING DIAGRAMS	4-92
		<hr/>	
5	LUBRICATION & COOLING	LUBRICATION SYSTEM	5-2
		COOLING SYSTEM	5-11
		SPECIFICATIONS	5-28

CONTENTS

POWERHEAD 6-2
ENGINE RECONDITIONING 6-108
POWERHEAD BREAK-IN 6-126
SPECIFICATIONS 6-127

POWERHEAD

6

GEARCASE 7-2
JET DRIVE 7-72

LOWER UNIT

7

TRIM & TILT SYSTEMS 8-2
GAS ASSIST TILT ASSEMBLY 8-3
MANUAL TILT 8-3
POWER TRIM & TILT 8-5

TRIM & TILT SYSTEMS

8

REMOTE CONTROL BOX 9-2
TILLER HANDLE 9-20

REMOTE CONTROLS

9

HAND REWIND STARTERS 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-15

MASTER INDEX

<p>AIR INTAKE SILENCER 3-70 REMOVAL & INSTALLATION 3-70 ALTERNATOR 4-46 OVERHAUL & CHECKING 4-48 REMOVAL & INSTALLATION 4-47 ALTERNATOR DRIVE BELTS 2-51 INSPECTION & ADJUSTMENT 2-51 REMOVAL & INSTALLATION 2-52 ANCHORS 1-10 ANODES 2-42 GENERAL INFORMATION 2-42 INSPECTION 2-42 LOCATION 2-42 SERVICING 2-43 AVOIDING COMMON MISTAKES 1-3 AVOIDING TROUBLE 1-2 BAILING DEVICES 1-10 BALANCER CHAIN & ASSEMBLY 6-80 REMOVAL & INSTALLATION 6-80 BALANCER DRIVE BELT 2-52 INSPECTION & ADJUSTMENT 2-52 REMOVAL & INSTALLATION 2-53 BARO SENSOR 3-106 SERVICING 3-106 BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK 4-2 OHM'S LAW 4-2 BASIC OPERATING PRINCIPLES 1-13 2-STROKE MOTORS 1-13 4-STROKE MOTORS 1-15 COMBUSTION 1-16 BATTERY CONSTRUCTION 4-54 LOCATION 4-55 MAINTENANCE 2-54 MARINE BATTERIES 4-54 RATINGS 4-54 RECOMMENDATIONS 4-54 SERVICE 4-55 STORAGE 2-56 TESTING 2-55 BATTERY CHARGE COIL/STATOR 4-42 DESCRIPTION & OPERATION 4-42 REMOVAL & INSTALLATION 4-45 TESTING 4-45 BEFORE/AFTER EACH USE 2-5 VISUALLY INSPECTING THE BOAT & MOTOR 2-5 BOAT MAINTENANCE 2-54 BATTERIES 2-54 FIBERGLASS HULL 2-57 BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-10 FIRST AID KIT 1-10 OAR/PADDLE 1-10 TOOLS & SPARE PARTS 1-12 VHF-FM RADIO 1-10 BOATING SAFETY 1-14 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 REQUIRED SAFETY EQUIPMENT 1-5 BOLTS, NUTS & OTHER THREADED RETAINERS 1-26 BREAKING IN A POWERHEAD 6-126 BUY OR REBUILD? 6-108 CAMSHAFT, BEARINGS & LIFTERS 6-72 REMOVAL & INSTALLATION 6-72 CAMSHAFT POSITION SENSOR 4-16 DESCRIPTION & OPERATION 4-16 REMOVAL & INSTALLATION 4-18 TESTING 4-16 CARB CLEANING & INSPECTION 3-41 CARBURETED FUEL SYSTEM 3-12 CARB CLEANING & INSPECTION 3-41 CARBURETOR SERVICE 3-16</p>	<p>DESCRIPTION & OPERATION 3-12 FUEL PUMP 3-42 TROUBLESHOOTING 3-14 CARBURETOR SERVICE 3-16 BF2D MOTORS 3-16 BF5A MOTORS 3-18 BF8A MOTORS 3-20 BF15A MOTORS 3-22 BF8D/BF9.9D & BF15D/BF20D MOTORS 3-25 25-90 HP MOTORS 3-29 CHARGING CIRCUIT 4-39 ALTERNATOR 4-46 BATTERY 4-53 BATTERY CHARGE COIL/STATOR 4-42 DESCRIPTION & OPERATION 4-39 RECTIFIER 4-49 REGULATOR/RECTIFIER 4-50 TROUBLESHOOTING 4-40 CHEMICALS 1-17 CLEANERS 1-18 LUBRICANTS & PENETRANTS 1-17 SEALANTS 1-17 CLEARING A SUBMERGED MOTOR 2-116 COMPASS 1-10 INSTALLATION 1-11 PRECAUTIONS 1-11 SELECTION 1-10 COMPRESSION TESTS 2-58 COMPRESSION CHECK 2-58 LEAKAGE CHECK 2-60 COOLING SYSTEM DESCRIPTION & OPERATION 5-11 ENGINE THERMO-SWITCH/THERMO-SENSOR & WARNING SYSTEM 5-27 FLUSHING THE SYSTEM 2-20 THERMOSTAT 5-23 TROUBLESHOOTING 5-13 WATER PRESSURE RELIEF VALVE 5-26 WATER PUMP 5-15 COURTESY MARINE EXAMINATIONS 1-10 CRANKSHAFT, PISTON(S) & BEARINGS 6-81 REMOVAL & INSTALLATION 6-81 CYLINDER HEAD 6-47 REMOVAL & INSTALLATION 6-47 DESCRIPTION & OPERATION BATTERY CHARGE COIL/STATOR 4-42 CARBURETOR 3-12 CHARGING CIRCUIT 4-39 EFI 3-47 GAS ASSIST TILT 8-3 GEARCASE 7-4 HAND REWIND STARTERS 10-2 IGNITION COILS 4-21 IGNITION MODULE/CDI UNIT 4-29 IGNITION SYSTEM - CARB 4-9 IGNITION SYSTEM - EFI MOTORS 4-10 JET DRIVE 7-72 LUBRICATION SYSTEM 5-2 MANUAL TILT 8-3 POWER TRIM & TILT 8-5 REMOTE 9-2 STARTER MOTOR 4-60 STARTING CIRCUIT 4-55 TILLER HANDLE 9-7 WARNING SYSTEM 4-74 DIAGNOSTIC TROUBLE CODES 3-51 CLEARING CODES 3-55 ECM CIRCUIT, PINOUTS & COMPONENT LOCATIONS 3-56 GENERAL INFORMATION 3-51 READING CODES 3-52 SERVICE PRECAUTIONS 3-52 TROUBLE CODE CHARTS 3-54 ELECTRICAL COMPONENTS 4-2 CONNECTORS 4-4 GROUND 4-3</p>
--	--

10-16 MASTER INDEX

LOAD	4-4	OIL LEVEL CHECK	2-14
POWER SOURCE	4-2	OIL & FILTER CHANGE	2-17
PROTECTIVE DEVICES	4-3	ENGINE OVERHAUL TIPS	6-109
STARTING CIRCUIT	4-55	OVERHAUL TIPS	6-109
SWITCHES & RELAYS	4-4	REPAIRING DAMAGED THREADS	6-109
WIRING & HARNESSSES	4-4	TOOLS	6-109
ELECTRICAL SYSTEM PRECAUTIONS	4-8	ENGINE PREPARATION	6-109
ELECTRICAL TESTING	4-7	ENGINE RECONDITIONING	6-108
OPEN CIRCUITS	4-7	BUY OR REBUILD?	6-108
RESISTANCE	4-7	CLEANING	6-110
SHORT CIRCUITS	4-8	ENGINE BLOCK, CRANK & PISTONS	6-117
VOLTAGE	4-7	ENGINE OVERHAUL TIPS	6-109
VOLTAGE DROP	4-7	ENGINE PREPARATION	6-109
ELECTRONIC FUEL INJECTION (EFI)	3-46	HEAD & VALVES	6-112
AIR/FUEL RATIO SENSOR	3-104	ENGINE THERMO-SWITCH/THERMO-SENSOR	
AIR INTAKE SILENCER	3-70	& WARNING SYSTEM 5-27	
BARO SENSOR	3-106	EXCITER COIL	4-13
DESCRIPTION & OPERATION	3-47	DESCRIPTION & OPERATION	4-13
DIAGNOSTIC TROUBLE CODES	3-51	REMOVAL & INSTALLATION	4-15
ENGINE CONTROL MODULE (ECM)	3-102	TESTING	4-13
FUEL INJECTION BASICS	3-47	FASTENERS, MEASUREMENTS & CONVERSIONS	1-26
FUEL LINE CUT SOLENOID VALVE	3-109	BOLTS, NUTS & OTHER THREADED RETAINERS	1-26
FUEL PRESSURE REGULATOR	3-100	STANDARD & METRIC MEASUREMENTS	1-27
FUEL PUMP LOW PRESSURE	3-81	TORQUE	1-27
FUEL PUMP -HIGH PRESSURE	3-83	FIRE EXTINGUISHERS	1-5
FUEL RAIL & INJECTORS	3-97	CARE & TREATMENT	1-6
GENERAL INFORMATION	3-46	CONTENTS OF EXTINGUISHERS	1-6
IDLE AIR CONTROL (IAC) VALVE	3-107	EXTINGUISHER APPROVAL	1-6
INTAKE AIR BYPASS (IAB) CONTROL SOLENOID VALVE	3-109	HALON EXTINGUISHERS	1-6
KNOCK SENSOR	3-107	LEGAL REQUIREMENTS	1-6
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-105	USING A EXTINGUISHER	1-6
O2 SENSOR	3-104	FIRST AID KIT	1-10
OIL PRESSURE SWITCH	3-109	FIBERGLASS HULL	2-57
TEMPERATURE SENSORS	3-103	INSPECTION & CARE	2-57
THROTTLE BODY & INTAKE MANIFOLD	3-73	FLYWHEEL	6-78
THROTTLE POSITION SENSOR (TPS)	3-106	REMOVAL & INSTALLATION	6-78
TIMING SENSORS	3-100	FUEL	3-2
TROUBLESHOOTING	3-49	ALCOHOL-BLENDED FUELS	3-3
VAPOR SEPARATOR TANK (VST)	3-83	HIGH ALTITUDE OPERATION	3-3
VTEC OIL CONTROL VALVE	3-108	OCTANE RATING	3-2
WATER LEVEL SWITCH	3-109	RECOMMENDATIONS	3-3
ELECTRONIC TOOLS	1-23	STALE/CONTAMINATED FUEL	3-3
BATTERY CHARGERS	1-23	VAPOR PRESSURE	3-3
BATTERY TESTERS	1-23	FUEL FILTER	2-25
GAUGES	1-24	HIGH-PRESSURE	2-29
MULTI-METERS (DVOMS)	1-24	LOW-PRESSURE	2-25
EMISSION CONTROL LABEL	2-5	FUEL INJECTION BASICS	3-47
ENGINE BLOCK, CRANK & PISTONS	6-117	FUEL LINE CUT SOLENOID VALVE	3-109
CYLINDER BLOCK COMPONENT INSPECTION	6-118	SERVICING	3-109
CYLINDER RIDGE REMOVAL	6-117	FUEL LINES & FITTINGS	3-9
GENERAL INFORMATION & TIPS	6-117	SERVICE	3-10
ENGINE CONTROL MODULE (ECM)	3-102	TESTING	3-9
SERVICING	3-102	FUEL PRESSURE REGULATOR	3-100
ENGINE COVERS	2-6	DESCRIPTION & OPERATION	3-100
REMOVAL & INSTALLATION	2-6	REMOVAL & INSTALLATION	3-100
ENGINE MAINTENANCE	2-6	TESTING	3-100
ALTERNATOR DRIVE BELTS	2-51	FUEL PUMP	
ANODES (ZINCS)	2-42	CARBURETOR	3-42
BALANCER DRIVE BELT	2-52	EFI - HIGH PRESSURE FUEL	3-83
COOLING SYSTEM	2-20	EFI - LOW PRESSURE	3-81
ENGINE COVERS	2-6	FUEL PUMP - CARB	3-42
ENGINE OIL	2-13	DESCRIPTION & OPERATION	3-42
FUEL FILTER	2-25	OVERHAUL	3-45
FUEL/WATER SEPARATOR	2-31	REMOVAL & INSTALLATION	3-44
GEARCASE (LOWER UNIT) OIL	2-22	TESTING	3-43
JET DRIVE BEARING	2-34	FUEL PUMP- EFI (HIGH PRESSURE)	3-83
JET DRIVE IMPELLER	2-40	CLEANING & INSPECTION	3-96
LUBRICATION POINTS	2-32	DESCRIPTION & OPERATION	3-83
PROPELLER	2-35	DISCHARGE TEST	3-84
SWIVEL CASE LINER, BUSHING & WATER SEAL	2-49	ELECTRICAL TEST	3-83
TIMING BELT	2-43	PRESSURE/REGULATOR TEST	3-84
ENGINE OIL	2-13	REMOVAL & INSTALLATION	3-85
ENGINE OIL RECOMMENDATIONS	2-13	FUEL PUMP - EFI (LOW PRESSURE)	3-81

<p>DESCRIPTION & OPERATION 3-81</p> <p>REMOVAL & INSTALLATION 3-82</p> <p>TESTING 3-82</p> <p>FUEL RAIL & INJECTORS 3-97</p> <p>DESCRIPTION & OPERATION 3-97</p> <p>REMOVAL & INSTALLATION 3-98</p> <p>TESTING 3-97</p> <p>FUEL SYSTEM BASICS 3-2</p> <p>FUEL 3-2</p> <p>FUEL SYSTEM PRESSURIZATION 3-5</p> <p>SERVICE CAUTIONS 3-2</p> <p>FUEL SYSTEM PRESSURIZATION 3-5</p> <p>PRESSURIZING THE FUEL SYSTEM 3-6</p> <p>RELIEVING FUEL SYSTEM PRESSURE 3-5</p> <p>FUEL TANK 3-6</p> <p>SERVICE 3-7</p> <p>FUEL TANK & LINES 3-6</p> <p>FUEL LINES & FITTINGS 3-9</p> <p>FUEL TANK 3-6</p> <p>FUEL/WATER SEPARATOR 2-31</p> <p>GAS ASSISTED TILT 8-3</p> <p>GAS ASSIST TILT ASSEMBLY 8-3</p> <p>GAS ASSIST TILT ASSEMBLY 8-3</p> <p>DESCRIPTION & OPERATION 8-3</p> <p>DISPOSAL 8-5</p> <p>REMOVAL & INSTALLATION 8-3</p> <p>GEARCASE 7-2</p> <p>DESCRIPTION & OPERATION 7-2</p> <p>GEARCASE - BF2D 7-7</p> <p>GEARCASE - BF5A 7-10</p> <p>GEARCASE - BF8A 7-15</p> <p>GEARCASE - BF8D/BF9.9D & BF15D/BF20D 7-18</p> <p>GEARCASE - BF15A 7-22</p> <p>GEARCASE - 25-50 HP 7-27</p> <p>GEARCASE - 75-225 HP 7-40</p> <p>GEARCASE ASSEMBLY - BF2D 7-7</p> <p>ASSEMBLY 7-10</p> <p>CLEANING & INSPECTION 7-8</p> <p>DISASSEMBLY 7-8</p> <p>REMOVAL & INSTALLATION 7-7</p> <p>GEARCASE ASSEMBLY - BF5A 7-10</p> <p>ASSEMBLY 7-14</p> <p>CLEANING & INSPECTION 7-12</p> <p>DISASSEMBLY 7-11</p> <p>REMOVAL & INSTALLATION 7-10</p> <p>SHIMMING 7-13</p> <p>GEARCASE ASSEMBLY - BF8A 7-15</p> <p>ASSEMBLY 7-18</p> <p>CLEANING & INSPECTION 7-17</p> <p>DISASSEMBLY 7-15</p> <p>REMOVAL & INSTALLATION 7-15</p> <p>SHIMMING 7-17</p> <p>GEARCASE ASSEMBLY - BF8D/BF9.9D & BF15D/BF20D 7-18</p> <p>ASSEMBLY 7-21</p> <p>CLEANING & INSPECTION 7-20</p> <p>DISASSEMBLY 7-19</p> <p>REMOVAL & INSTALLATION 7-18</p> <p>SHIMMING 7-21</p> <p>GEARCASE ASSEMBLY - BF15A 7-22</p> <p>ASSEMBLY 7-26</p> <p>CLEANING & INSPECTION 7-25</p> <p>DISASSEMBLY 7-23</p> <p>REMOVAL & INSTALLATION 7-22</p> <p>SHIMMING 7-25</p> <p>GEARCASE ASSEMBLY - 25-50 HP 7-27</p> <p>ASSEMBLY 7-38</p> <p>CLEANING & INSPECTION 7-32</p> <p>DISASSEMBLY 7-28</p> <p>REMOVAL & INSTALLATION 7-27</p> <p>SHIMMING 7-32</p> <p>GEARCASE ASSEMBLY - 75-225 HP 7-40</p> <p>ASSEMBLY 7-54</p> <p>CLEANING & INSPECTING 7-47</p>	<p>DISASSEMBLY 7-41</p> <p>REMOVAL & INSTALLATION 7-40</p> <p>SHIMMING 7-59</p> <p>GEARCASE OIL 2-22</p> <p>CHECKING LEVEL & CONDITION 2-23</p> <p>DRAINING & FILLING 2-24</p> <p>RECOMMENDATIONS 2-23</p> <p>GENERAL INFORMATION 2-2</p> <p>BEFORE/AFTER EACH USE 2-5</p> <p>EMISSION CONTROL LABEL 2-5</p> <p>MAINTENANCE COVERAGE 2-2</p> <p>MAINTENANCE EQUALS SAFETY 2-2</p> <p>OUTBOARDS ON SAIL BOATS 2-2</p> <p>SERIAL NUMBER IDENTIFICATION 2-3</p> <p>HAND REWIND STARTERS 10-2</p> <p>BF2D 10-3</p> <p>BF5A 10-4</p> <p>BF8A 10-6</p> <p>BF15A 10-7</p> <p>BF8D/BF9.9D & BF15D/BF20D 10-9</p> <p>BF25A/BF30A & BF25D/BF30D 10-11</p> <p>DESCRIPTION & OPERATION 10-2</p> <p>TROUBLESHOOTING 10-2</p> <p>HAND TOOLS 1-19</p> <p>BREAKER BARS 1-20</p> <p>HAMMERS 1-22</p> <p>PLIERS 1-21</p> <p>SCREWDRIVERS 1-21</p> <p>SOCKET SETS 1-19</p> <p>TORQUE WRENCHES 1-20</p> <p>WRENCHES 1-21</p> <p>HEAD & VALVES 6-112</p> <p>CHECKING FOR VALVE LEAKAGE 6-112</p> <p>GENERAL INFORMATION 6-112</p> <p>HEAD COMPONENT INSPECTION 6-114</p> <p>REMOVING THE VALVES 6-113</p> <p>HOW TO USE THIS MANUAL 1-2</p> <p>AVOIDING COMMON MISTAKES 1-3</p> <p>AVOIDING TROUBLE 1-2</p> <p>CAN YOU DO IT? 1-2</p> <p>DIRECTIONS & LOCATIONS 1-2</p> <p>MAINTENANCE OR REPAIR? 1-2</p> <p>PROFESSIONAL HELP 1-3</p> <p>PURCHASING PARTS 1-3</p> <p>WHERE TO BEGIN 1-2</p> <p>IDLE AIR CONTROL (IAC) VALVE 3-107</p> <p>SERVICING 3-107</p> <p>IGNITION COILS 4-21</p> <p>DESCRIPTION & OPERATION 4-21</p> <p>REMOVAL & INSTALLATION 4-25</p> <p>TESTING 4-22</p> <p>IGNITION MODULE/CDI UNIT 4-29</p> <p>DESCRIPTION & OPERATION 4-29</p> <p>TESTING 4-30</p> <p>IGNITION SYSTEMS 4-8</p> <p>DESCRIPTION & OPERATION 4-9</p> <p>EXCITER COIL 4-13</p> <p>IGNITION COILS 4-21</p> <p>IGNITION MODULE/CDI UNIT 4-29</p> <p>PULSER/TRIGGER COIL/CAMSHAFT POSITION SENSOR 4-16</p> <p>TROUBLESHOOTING 4-11</p> <p>INTAKE AIR BYPASS (IAB) CONTROL SOLENOID VALVE 3-109</p> <p>SERVICING 3-109</p> <p>INTAKE MANIFOLD 3-73,6-44</p> <p>REMOVAL & INSTALLATION 3-73,6-44</p> <p>JET DRIVE 7-72</p> <p>DESCRIPTION & OPERATION 7-72</p> <p>IMPELLER 7-72</p> <p>JET DRIVE ADJUSTMENTS 7-79</p> <p>JET DRIVE ASSEMBLY 7-74</p> <p>JET DRIVE ADJUSTMENTS 7-79</p> <p>GATE LINKAGE 7-79</p> <p>TRIM ADJUSTMENT 7-80</p>
--	--

10-18 MASTER INDEX

JET DRIVE ASSEMBLY	7-74	CLEANING & INSPECTION	8-17
ASSEMBLY	7-78	DISASSEMBLY	8-14
CLEANING & INSPECTION	7-75	REMOVAL & INSTALLATION	8-9
DISASSEMBLY	7-75	TESTING	8-8
REMOVAL & INSTALLATION	7-74	POWER TRIM/TILT MOTOR	8-18
JET DRIVE BEARING	2-34	OVERHAUL & INSPECTION	8-19
GREASE REPLACEMENT	2-35	REMOVAL & INSTALLATION	8-18
LUBRICATION	2-34	TESTING	8-18
RECOMMENDED LUBRICANT	2-34	POWER TRIM/TILT SWITCH	8-20
JET DRIVE IMPELLER	2-40	TESTING	8-20
IMPELLER CLEARANCE	2-41	POWERHEAD	6-2
INSPECTION	2-40	REMOVAL & INSTALLATION	6-2
REMOVAL, SHIMMING & INSTALLATION	7-72	POWERHEAD	6-2
KNOCK SENSOR	3-107	BALANCER CHAIN & ASSEMBLY	6-80
SERVICING	3-107	CAMSHAFT, BEARINGS & LIFTERS	6-72
LOWER UNIT OIL	2-22	CRANKSHAFT, PISTON(S) & BEARINGS	6-81
CHECKING LEVEL & CONDITION	2-23	CYLINDER HEAD	6-47
DRAINING & FILLING	2-24	FLYWHEEL	6-78
RECOMMENDATIONS	2-23	INTAKE MANIFOLD	6-44
LUBRICATION POINTS	2-32	POWERHEAD	6-2
BOAT	2-34	ROCKER ARMS/SHAFTS	6-31
MOTOR	2-32	TIMING BELT OR CHAIN	6-58
LUBRICATION SYSTEM	5-2	VALVE (ROCKER) COVER	6-31
DESCRIPTION & OPERATION	5-2	POWERHEAD BREAK-IN	6-126
OIL PRESSURE SWITCH & WARNING SYSTEM	5-11	BREAKING IN A POWERHEAD	6-126
OIL PRESSURE TEST	5-2	PROFESSIONAL HELP	1-3
OIL PUMP	5-3	PROPELLER	2-35
MAINTENANCE COVERAGE	2-2	GENERAL INFORMATION	2-35
MAINTENANCE EQUALS SAFETY	2-2	INSPECTION	2-37
MAINTENANCE OR REPAIR?	1-2	REMOVAL & INSTALLATION	2-38
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-105	PULSER COIL	4-16
SERVICING	3-105	DESCRIPTION & OPERATION	4-16
MANUAL TILT	8-3	REMOVAL & INSTALLATION	4-18
DESCRIPTION & OPERATION	8-3	TESTING	4-16
SERVICING	8-2	PURCHASING PARTS	1-3
MANUALLY TILTING THE ENGINE	8-6	RECTIFIER	4-49
MEASURING TOOLS	1-25	REMOVAL & INSTALLATION	4-50
DEPTH GAUGES	1-26	TESTING	4-5-
DIAL INDICATORS	1-25	REGULATIONS FOR YOUR BOAT	1-4
MICROMETERS & CALIPERS	1-25	CAPACITY INFORMATION	1-4
TELESCOPING GAUGES	1-26	CERTIFICATE OF COMPLIANCE	1-4
O ₂ SENSOR OR AIR/FUEL RATIO SENSOR	3-104	DOCUMENTING OF VESSELS	1-4
SERVICING	3-104	HULL IDENTIFICATION NUMBER	1-4
OAR/PADDLE	1-10	LENGTH OF BOATS	1-4
OIL PRESSURE SWITCH		NUMBERING OF VESSELS	1-4
SERVICE	4-77, 3-109	REGISTRATION OF BOATS	1-4
OIL PRESSURE SWITCH & WARNING SYSTEM	5-11	SALES & TRANSFERS	1-4
OIL PRESSURE TEST	5-2	VENTILATION	1-4
OIL PUMP	5-3	REGULATOR/RECTIFIER	4-50
REMOVAL, OVERHAUL & INSTALLATION	5-3	DESCRIPTION	4-50
OTHER COMMON TOOLS	1-22	REMOVAL & INSTALLATION	4-53
OUTBOARDS ON SAIL BOATS	2-2	TESTING	4-50
OVERHEAT THERMO-SWITCH/THERMO-SENSOR	4-75	REMOTE CONTROL BOX	9-2
SERVICE	4-75	DESCRIPTION & OPERATION	9-2
PERSONAL FLOTATION DEVICES	1-7	REMOTE CONTROL BOX ASSEMBLY	9-3
CARE OF LIFE JACKETS	1-8	REMOTE CONTROL CABLES	9-7
GENERAL CONSIDERATIONS	1-8	TROUBLESHOOTING	9-3
LEGAL REQUIREMENTS	1-8	REMOTE CONTROL BOX ASSEMBLY	9-3
POWER TRIM & TILT	8-5	EXPLODED VIEWS	9-3
DESCRIPTION & OPERATION	8-5	REMOVAL & INSTALLATION	9-3
MANUALLY TILTING THE ENGINE	8-6	REMOTE CONTROL CABLES	9-7
TRIM ANGLE SENSOR	8-21	RIGGING/REPLACEMENT	9-7
TRIM/TILT ASSEMBLY	8-7	REQUIRED SAFETY EQUIPMENT	1-5
TRIM/TILT MOTOR	8-18	FIRE EXTINGUISHERS	1-5
TRIM/TILT SWITCH	8-20	PERSONAL FLOTATION DEVICES	1-7
TROUBLESHOOTING	8-6	SOUND PRODUCING DEVICES	1-8
POWER TRIM ANGLE SENSOR	8-21	TYPES OF FIRES	1-5
REMOVAL & INSTALLATION	8-22	VISUAL DISTRESS SIGNALS	1-8
TESTING	8-21	WARNING SYSTEM	1-6
POWER TRIM/TILT ASSEMBLY	8-7	RE-COMMISSIONING	2-115
ASSEMBLY	8-17	REMOVAL FROM STORAGE	2-115
BLEEDING THE SYSTEM	8-8	ROCKER ARMS/SHAFTS	6-31
CHECKING FLUID LEVEL	8-7		

REMOVAL & INSTALLATION	6-31	TEST EQUIPMENT	4-5
ROCKER COVER	6-31	JUMPER WIRES	4-5
REMOVAL & INSTALLATION	6-31	MULTI-METERS	4-6
SAFETY IN SERVICE	1-12	TEST LIGHTS	4-5
DO'S	1-12	THERMOSTAT	5-23
DON'TS	1-12	REMOVAL & INSTALLATION	5-24
SAFETY TOOLS	1-16	THROTTLE BODY	3-73
EYE & EAR PROTECTION	1-16	REMOVAL & INSTALLATION	3-73
WORK CLOTHES	1-17	THROTTLE POSITION SENSOR (TPS)	3-106
WORK GLOVES	1-16	SERVICING	3-106
SERIAL NUMBER IDENTIFICATION	2-3	TILLER HANDLE	9-8
SHOP EQUIPMENT	1-16	REMOVAL & INSTALLATION	9-8
CHEMICALS	1-17	TILLER HANDLE	9-7
SAFETY TOOLS	1-16	DESCRIPTION & OPERATION	9-7
SPARK PLUG WIRES	2-65	TILLER HANDLE	9-8
TESTING	2-65	TROUBLESHOOTING	9-7
SPARK PLUGS	2-60	TIMING BELT	2-43
HEAT RANGE	2-61	ADJUSTMENT	2-44
INSPECTION & GAPPING	2-64	INSPECTION	2-44
READING	2-63	TIMING BELT OR CHAIN	6-58
REMOVAL & INSTALLATION	2-61	REMOVAL & INSTALLATION	6-58
SPECIAL TOOLS	1-23	TIMING SENSORS (CMP/CKP/PULSER COIL)	3-100
SPECIFICATIONS	2-117	SERVICING	3-100
BOLT TORQUE - TYPICAL METRIC BOLT TORQUE VALUES	1-28	TIMING & SYNCHRONIZATION	2-82
BOLT TORQUE - TYPICAL U.S. STANDARD BOLT TORQUE VALUES 1-28	1-28	CARBURETOR PILOT SCREW ADJUSTMENTS	2-83
CAPACITIES	2-119	BF2D MOTORS	2-83
CARBURETOR	3-46	BF5A MOTORS	2-84
CONVERSION FACTORS	1-27	BF8A MOTORS	2-85
COOLING SYSTEM	5-28	BF15A MOTORS	2-86
EFI	3-110	BF8D/BF9.9D & BF15D/BF20D	2-88
ENGINE - 2D	6-127	25-50 HP3-CYL MOTORS	2-90
ENGINE - 5A	6-128	BF75D/BF90D MOTORS	2-96
ENGINE - 8A	6-129	BF75A/BF90A MOTORS	2-99
ENGINE - 8D/9.9D	6-130	BF115A/BF130A MOTORS	2-103
ENGINE - 15A	6-132	BF135A/BF150A MOTORS	2-105
ENGINE - 15D/BF20D	6-133	BF200A/BF225A MOTORS	2-108
ENGINE - 25A/BF30A	6-134	TOOLS	1-18
ENGINE - 25D/BF30D	6-136	ELECTRONIC TOOLS	1-23
ENGINE - 40A/BF50A	6-137	HAND TOOLS	1-19
ENGINE - 75D/BF90D	6-139	MEASURING TOOLS	1-25
ENGINE - 75A/BF90A	6-140	OTHER COMMON TOOLS	1-22
ENGINE - 115A/BF130A	6-142	SPECIAL TOOLS	1-23
ENGINE - 135A/BF150A	6-144	TOOLS & SPARE PARTS	1-12
ENGINE - 200A/BF225A	6-145	TORQUE	1-27
GENERAL ENGINE	2-117	TRIGGER COIL	4-16
IGNITION TESTING	4-13	DESCRIPTION & OPERATION	4-16
MAINTENANCE INTERVALS	2-118	REMOVAL & INSTALLATION	4-18
TUNE-UP	2-120	TESTING	4-16
STANDARD & METRIC MEASUREMENTS	1-27	TRIM/TILT SYSTEMS	8-2
STARTER MOTOR	4-60	INTRODUCTION	8-2
CLEANING & INSPECTION	4-70	TROUBLESHOOTING	1-13
DESCRIPTION & OPERATION	4-60	BASIC OPERATING PRINCIPLES	1-13
DISASSEMBLY & ASSEMBLY	4-66	CHARGING CIRCUIT	4-40
REMOVAL & INSTALLATION	4-62	CARBURETOR	3-14
TESTING	4-60	COOLING SYSTEM EFFICIENCY	5-14
STARTER MOTOR SOLENOID SWITCH/RELAY	4-71	EFI	3-49
REMOVAL & INSTALLATION	4-72	ELECTRICAL SYSTEMS	4-6
TESTING	4-72	GEARCASE	7-4
STARTING CIRCUIT	4-55	HAND REWIND STARTERS	10-2
DESCRIPTION & OPERATION	4-55	IGNITION SYSTEM	4-11
STARTER MOTOR	4-60	POWER TRIM/TILT	8-6
STARTER MOTOR SOLENOID SWITCH/RELAY	4-71	REMOTE CONTROL	9-3
TROUBLESHOOTING	4-56	STARTING CIRCUIT	4-56
STORAGE	2-113	THERMOSTAT	5-14
RE-COMMISSIONING	2-115	TILLER HANDLE	9-7
WINTERIZATION	2-113	TUNE-UP	2-57
SWIVEL CASE LINER, BUSHING & WATER SEAL	2-49	COMPRESSION TESTS	2-58
REMOVAL & INSTALLATION	2-49	INTRODUCTION	2-57
WATER SEAL	2-51	SPARK PLUG WIRES	2-65
TEMPERATURE SENSORS	3-103	SPARK PLUGS	2-60
SERVICING	3-103	TUNE-UP SEQUENCE	2-58
		TUNE-UP SEQUENCE	2-58

10-20 MASTER INDEX

UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS . . .	4-2	DESCRIPTION & OPERATION	4-74
BASIC ELECTRICAL THEORY	4-2	OIL PRESSURE SWITCH	4-77
ELECTRICAL COMPONENTS	4-2	OVERHEAT THERMO-SWITCH/THERMO-SENSOR	4-75
ELECTRICAL TESTING	4-7	WARNING BUZZER	4-78
PRECAUTIONS	4-8	WARNING CIRCUITS	4-74
TEST EQUIPMENT	4-5	WARNING SYSTEM ALERTS	4-75
TROUBLESHOOTING ELECTRICAL SYSTEMS	4-6	WARNING SYSTEM ALERTS	4-75
WIRE & CONNECTOR REPAIR	4-8	WATER LEVEL SWITCH	3-109
VALVE CLEARANCE	2-65	SERVICING	3-109
VALVE LASH ADJUSTMENT	2-66	WATER PRESSURE RELIEF VALVE	5-26
VALVE COVER	6-31	WATER PUMP	5-15
REMOVAL & INSTALLATION	6-31	CLEANING & INSPECTION	5-22
VALVE LASH ADJUSTMENT	2-66	REMOVAL & INSTALLATION	5-15
VAPOR SEPARATOR TANK (VST)	3-83	WINTERIZATION	2-113
CLEANING & INSPECTION	3-96	GREAT ETHANOL DEBATE	2-113
DESCRIPTION & OPERATION	3-83	PREPPING FOR STORAGE	2-113
DISCHARGE TEST	3-84	STORAGE CHECKLIST	2-114
ELECTRICAL TEST	3-83	WHERE TO STORE	2-113
PRESSURE/REGULATOR TEST	3-84	WIRE & CONNECTOR REPAIR	4-8
REMOVAL & INSTALLATION	3-85	WIRING DIAGRAMS	4-92
VHF-FM RADIO	1-10	INDEX	4-92
VTEC OIL CONTROL VALVE	3-108	ZINCS	2-42
SERVICING	3-108	GENERAL INFORMATION	2-42
WARNING BUZZER	4-78	INSPECTION	2-42
TESTING	4-78	LOCATION	2-42
WARNING CIRCUITS	4-74	SERVICING	2-43
WARNING SYSTEM	4-74		