



Presents

# Repair Manuals from **SELOC.**

## Contents of this manual:

### 1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, & POLISHING	1-1
CONTROLLING CORROSION	1-2
PROPELLERS	1-2
LOADING	1-7
HORSEPOWER	1-8
FLOTATION	1-8
ANCHORS	1-10
BOATING ACCIDENT REPORTS	1-10

### 2 TUNING

INTRODUCTION	2-1
TUNE-UP SEQUENCE	2-1
COMPRESSION CHECK	2-3
SPARK PLUG INSPECTION	2-3
IGNITION SYSTEM	2-3
TIMING AND SYNCHRONIZING	2-4
ELECTRICAL POWER SUPPLY	2-5
CARBURETOR ADJUSTMENT	2-6
FUEL PUMPS	2-7
CRANKING MOTOR TEST	2-8
INTERNAL WIRING HARNESS	2-8
WATER PUMP CHECK	2-9
PROPELLER	2-9
LOWER UNIT	2-10
BOAT TESTING	2-10

### 3 MAINTENANCE

INTRODUCTION	3-1
OUTBOARD SERIAL NUMBERS	3-2
LUBRICATION - COMPLETE UNIT	3-3
EMERGENCY TETHER	3-3
PRE-SEASON PREPARATION	3-3
FIBERGLASS HULLS	3-6
BELOW WATERLINE SERVICE	3-6
SUBMERGED ENGINE SERVICE	3-7
PROPELLER SERVICE	3-8
INSIDE THE BOAT	3-9
LOWER UNIT	3-15
WINTER STORAGE	3-16

### 4 FUEL

INTRODUCTION	4-1
GENERAL CARBURETION INFORMATION	4-1
FUEL SYSTEM	4-3
Leaded Gasoline & Gasohol	4-3
Removing Fuel From System	4-4
TROUBLESHOOTING	4-5
"Sour" Fuel	4-5
Fuel Pump Test	4-5
Fuel Line Test	4-7
Rough Engine Idle	4-7
Excessive Fuel Consumption	4-8
Engine Surge	4-8
CARBURETOR IDENTIFICATION	4-9
CARBURETOR "A"	
Removal & Disassembling	4-10
Cleaning & Inspecting	4-14
Assembling & Installation	4-15
Adjustments	4-19
CARBURETOR "B"	
Removal & Disassembling	4-20
Cleaning & Inspecting	4-23
Assembling & Installation	4-23
Adjustments	4-25
CARBURETOR "C"	
Removal & Disassembling	4-27
Cleaning & Inspecting	4-30
Assembling & Installation	4-31
Adjustments	4-34
CARBURETOR "D"	
Removal & Disassembling	4-35
Cleaning & Inspecting	4-37
Assembling & Installation	4-39
Adjustments	4-42
CARBURETOR "E"	
Removal & Disassembling	4-43
Cleaning & Inspecting	4-45
Assembling & Installation	4-47
Adjustments	4-49

## 4 FUEL (Continued)

CARBURETOR "F"	
Removal & Disassembling	4-50
Cleaning & Inspecting	4-53
Assembling & Installation	4-56
Adjustments	4-61
CARBURETOR "G"	
Removal & Disassembling	4-61
Cleaning & Inspecting	4-65
Assembling & Installation	4-66
Adjustments	4-70
CARBURETOR "H"	
Removal & Disassembling	4-71
Cleaning & Inspecting	4-73
Assembling & Installation	4-75
Adjustments	4-77
CARBURETOR "J"	
Removal & Disassembling	4-79
Cleaning & Inspecting	4-82
Assembling & Installation	4-84
Adjustments	4-88
CARBURETOR "K"	
Removal & Disassembling	4-89
Cleaning & Inspecting	4-93
Assembling & Installation	4-94
Adjustments	4-99
CARBURETOR "L"	
Removal & Disassembling	4-100
Cleaning & Inspecting	4-102
Assembling & Installation	4-104
Adjustments	4-107
FUEL PUMP	
Theory of Operation	4-108
Pump Pressure Check	4-109
Pump Removal	4-110
Cleaning & Inspecting	4-110
Assembling	4-111
INTRODUCTION	4-113
AUTO BLEND	
Description	4-113
Operation	4-115
Troubleshooting	4-115
System Storage	4-117
Preparation for Use	4-118

## 5 IGNITION

INTRODUCTION AND CHAPTER COVERAGE	5-1
--------------------------------------	-----

SPARK PLUG EVALUATION	5-2
POLARITY CHECK	5-4

TYPE I IGNITION SYSTEM - MAGNETO WITH BREAKER POINT SET	5-4
Description & Operation	5-4
Troubleshooting	5-6
Disassembling	5-9
Testing Components	5-12
Assembling & Installation	5-14
Breaker Point Adjustment	5-15

TYPE II IGNITION SYSTEM - CDI (CAPACITOR DISCHARGE)	5-17
Description & Operation	5-17
Troubleshooting	5-18
Testing One-Cylinder Components	5-20
Testing Two-Cylinder Components	5-23

FLYWHEEL AND STATOR PLATE SERVICE	5-31
"Pulling" the Flywheel	5-31
Stator Plate Removal	5-33
Cleaning & Inspecting	5-34
Assembling & Installation	5-35

## 6 TIMING AND SYNCHRONIZING

INTRODUCTION AND PREPARATION	6-1
Tachometer Connections	6-2
MODELS W/BREAKER POINT TYPE IGNITION	6-4
MODEL 4HP & 5HP	6-5
MODEL 8C	6-7
MODEL 9.9HP, 15HP, & ALL OTHER 8HP AFTER 1979	6-8
MODEL 20HP, 25HP, & 30HP	6-11
MODEL 40HP /SINGLE CARB	6-14
MODEL 40HP /DUAL CARB	6-17
MODEL 48HP, 55HP, & 60HP	6-21

## 7 POWERHEAD

INTRODUCTION AND CHAPTER ORGANIZATION	7-1
TWO-STROKE POWERHEAD DESCRIPTION & OPERATION	7-2
SERVICING POWERHEAD "A"	
MODEL 2HP	7-3
Removal & Disassembling	7-3
Cleaning & Inspecting	7-67
Assembling & Installation	7-8

SERVICING POWERHEAD "B"	
SINGLE-CYLINDER AIR-COOLED	
MODEL 3.5HP AND 5HP	7-13
Removal & Disassembling	7-13
Cleaning & Inspecting	7-67
Assembling & Installation	7-18

SERVICING POWERHEAD "C"	
SINGLE-CYLINDER	
WATER-COOLED	
MODEL 4HP & 5HP	7-22
Removal & Disassembling	7-22
Cleaning & Inspecting	7-67
Assembling & Installation	7-26

SERVICING POWERHEAD "D"	
TWO-CYLINDER,	
WATER-COOLED	
MODEL 8HP, 9.9HP, 15HP, 20HP,	
25HP, 28HP, 30HP, 40HP, 48HP,	
55HP, AND 60HP	7-33
Powerhead Preparation	7-33
Removal & Disassembling	7-36
Cleaning & Inspecting	7-67
Assembling & Installation	7-42
Closing Tasks	7-66

CLEANING & INSPECTING	7-67
Reed Block Service	7-67
Exhaust Cover	7-68
Crankshaft Service	7-69
Connecting Rod Service	7-72
Piston Service	7-73
Ring End Gap Clearance	7-74
Piston Ring Side Clearance	7-76
Oversize Pistons & Rings	7-76
Cylinder Block Service	7-77
Honing Cylinder Walls	7-79
Block & Cylinder Head	
Warpage	7-80

## 8 ELECTRICAL

INTRODUCTION	8-1
BATTERIES	8-1
Jumper Cables	8-5
Storage	8-6
THERMOMELT STICKS	8-6
TACHOMETER	8-6
ELECTRICAL SYSTEM	
GENERAL INFORMATION	8-7
CHARGING CIRCUIT SERVICE	8-9
CRANKING MOTOR	
CIRCUIT SERVICE	8-9
Motor Troubleshooting	8-10
Relay Testing	8-11

CRANKING MOTOR SERVICE	8-13
Description	8-13
Removal	8-14
Disassembling	8-14
Cleaning & Inspecting	8-17
Testing Cranking Motor Parts	8-17
Assembling	8-19
Installation	8-21
TESTING OTHER	
ELECTRICAL PARTS	8-21

## 9 LOWER UNIT

DESCRIPTION	9-1
CHAPTER COVERAGE	9-1
TROUBLESHOOTING	9-2
PROPELLER REMOVAL	9-3
PROPELLER INSTALLATION	9-5

LOWER UNIT TYPE "A"	
NO REVERSE GEAR	9-6
Removal	9-6
Disassembling	9-7
Cleaning & Inspecting	9-11
Assembling	9-13
Installation	9-18

LOWER UNIT TYPE "B"	
FORWARD, NEUTRAL & REVERSE,	
ONE-PIECE GEARCASE	9-20
Description	9-20
Removal	9-21
Disassembling	9-23
Water Pump	9-23
Cleaning & Inspecting	9-33
Assembling	9-43
Pinion Gear Depth	9-49
Backlash Measurement	9-54
Water Pump	9-58
Installation	9-60
Propeller Installation	9-63
Trim Tab Adjustment	9-64
Closing Tasks	9-64
Lower Unit Capacities	9-64

LOWER UNIT TYPE "C"	
FORWARD, NEUTRAL & REVERSE,	
TWO-PIECE GEARCASE	9-65
Description	9-65
Removal	9-65
Disassembling	9-66
Water Pump	9-67
Cleaning & Inspecting	9-72
Assembling	9-75
Pinion Gear Depth	9-78
Backlash Measurement	9-78
Water Pump	9-79

## 9 LOWER UNIT (Continued)

LOWER UNIT TYPE "C" (Cont.)	
Installation	9-80
Propeller Installation	9-82
Trim Tab Adjustment	9-82
Closing Tasks	9-82

## 10 REMOTE CONTROLS

INTRODUCTION	10-1
DISASSEMBLING	10-2
CLEANING & INSPECTING	10-9
ASSEMBLING	10-11

## 11 HAND REWIND STARTER

INTRODUCTION AND CHAPTER COVERAGE	11-1
STARTER IDENTIFICATION	11-1
SERVICING TYPE "A"	
Removal & Disassembling	11-1
Cleaning & Inspecting	11-4
Assembling & Installation	11-5
SERVICING TYPE "B"	
Removal & Disassembling	11-8
Cleaning & Inspecting	11-9
Assembling & Installation	11-10
SERVICING TYPE "C"	
Removal & Disassembling	11-11
Cleaning & Inspecting	11-15
Assembling & Installation	11-15

## SERVICING TYPE "D"

Removal & Disassembling	11-19
Cleaning & Inspecting	11-20
Assembling & Installation	11-20

## SERVICING TYPE "E"

Removal & Disassembling	11-22
Cleaning & Inspecting	11-24
Assembling & Installation	11-24

## SERVICING TYPE "F"

Removal & Disassembling	11-25
Cleaning & Inspecting	11-27
Assembling & Installation	11-28

## APPENDIX

METRIC CONVERSION CHART	A-1
ENGINE SPECIFICATIONS AND TUNE-UP ADJUSTMENTS	A-2
WIRING DIAGRAMS	
Model 2hp	A-10
Model 3.5hp & 5hp (Air-Cooled)	A-10
Model 4hp & 5hp (Water-Cooled)	A-11
Model 8hp, 15hp, 20hp, & 28hp (Breaker Point Ignition System)	A-12
Model 8hp, 15hp, & 20hp (Electric Start System)	A-13
Model 8hp, 9.9hp, & 15hp (CDI Ignition System)	A-14
Model 20hp, 25hp, & 30hp (CDI Ignition System)	A-15
Model 28hp (Electric Start System)	A-16
Model 48hp, 55hp, & 60hp	A-18