



Presents

# Repair Manuals from **SELOC**

Contents of this manual:

<b>1</b>	<b>GENERAL INFORMATION AND BOATING SAFETY</b>	<b>1-2</b> HOW TO USE THIS MANUAL	<b>1-10</b> SAFETY IN SERVICE
		<b>1-3</b> BOATING SAFETY	
<b>2</b>	<b>TOOLS AND EQUIPMENT</b>	<b>2-2</b> TOOLS AND EQUIPMENT	<b>2-11</b> FASTENERS, MEASUREMENTS AND CONVERSIONS
		<b>2-4</b> TOOLS	
<b>3</b>	<b>MAINTENANCE</b>	<b>3-2</b> ENGINE MAINTENANCE	<b>3-38</b> WINTER STORAGE CHECKLIST
		<b>3-8</b> BOAT MAINTENANCE	<b>3-39</b> SPRING COMMISSIONING CHECKLIST
		<b>3-10</b> TUNE-UP	
<b>4</b>	<b>FUEL SYSTEM</b>	<b>4-2</b> FUEL AND COMBUSTION	<b>4-50</b> ELECTRONIC FUEL INJECTION (EFI)
		<b>4-3</b> CARBURETED FUEL SYSTEM	<b>4-66</b> OPTIMAX DIRECT FUEL INJECTION (DFI)
<b>5</b>	<b>IGNITION AND ELECTRICAL SYSTEMS</b>	<b>5-2</b> UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS	<b>5-30</b> CHARGING CIRCUIT
		<b>5-8</b> BREAKER POINTS IGNITION (MAGNETO IGNITION)	<b>5-40</b> STARTER CIRCUIT
		<b>5-14</b> CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM	<b>5-42</b> IGNITION AND ELECTRICAL WIRING DIAGRAMS
<b>6</b>	<b>LUBRICATION AND COOLING</b>	<b>6-2</b> OIL INJECTION SYSTEM	<b>6-27</b> OPTIMAX WARNING SYSTEMS
		<b>6-8</b> COOLING SYSTEM	
		<b>6-22</b> WARNING SYSTEMS	

# Contents

---

<b>7-2</b> ENGINE MECHANICAL	<b>7-19</b> POWERHEAD RECONDITIONING	<b>POWERHEAD</b>	<b>7</b>
------------------------------	--------------------------------------	------------------	----------

---

<b>8-2</b> LOWER UNIT	<b>8-11</b> JET DRIVE	<b>LOWER UNIT</b>	<b>8</b>
-----------------------	-----------------------	-------------------	----------

---

<b>9-2</b> MANUAL TILT	<b>9-7</b> SINGLE RAM INTEGRAL POWER TILT/TRIM	<b>TRIM AND TILT</b>	<b>9</b>
<b>9-5</b> GAS ASSIST TILT SYSTEM	<b>9-12</b> THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM		
<b>9-6</b> POWER TRIM/TILT			

---

<b>10-2</b> REMOTE CONTROL BOX	<b>10-6</b> TILLER HANDLE	<b>REMOTE CONTROL</b>	<b>10</b>
--------------------------------	---------------------------	-----------------------	-----------

---

<b>11-2</b> HAND REWIND STARTER	<b>11-2</b> OVERHEAD TYPE STARTER	<b>HAND REWIND STARTER</b>	<b>11</b>
---------------------------------	-----------------------------------	----------------------------	-----------

---

<b>11-25</b> GLOSSARY		<b>GLOSSARY</b>	
-----------------------	--	-----------------	--

---

<b>11-27</b> INDEX		<b>MASTER INDEX</b>	
--------------------	--	---------------------	--

---

AIR COMPRESSOR 4-70  
REMOVAL & INSTALLATION 4-70  
TESTING 4-70  
AIR PRESSURE REGULATOR 4-72  
REMOVAL & INSTALLATION 4-72  
AIR TEMPERATURE SENSOR (ELECTRONIC FUEL INJECTION) 4-60  
REMOVAL & INSTALLATION 4-60  
TESTING 4-60  
AIR TEMPERATURE SENSOR (OPTIMAX DIRECT FUEL INJECTION) 4-72  
REMOVAL & INSTALLATION 4-72  
TESTING 4-72  
ANODES (ZINCS) 3-6  
INSPECTION 3-7  
SERVICING 3-7  
AVOIDING THE MOST COMMON MISTAKES 1-3  
AVOIDING TROUBLE 1-2  
BASIC ELECTRICAL THEORY 5-2  
HOW ELECTRICITY WORKS: THE WATER ANALOGY 5-2  
OHM'S LAW 5-2  
BATTERIES (BOAT MAINTENANCE) 3-8  
CLEANING 3-8  
MAINTENANCE 3-8  
STORAGE 3-9  
TESTING 3-8  
BATTERY (CHARGING CIRCUIT) 5-38  
BATTERY CABLES 5-40  
BATTERY CHARGERS 5-39  
BATTERY CONSTRUCTION 5-38  
BATTERY LOCATION 5-39  
BATTERY RATINGS 5-38  
MARINE BATTERIES 5-38  
BEARINGS 7-29  
GENERAL INFORMATION 7-29  
INSPECTION 7-30  
BLEEDING THE OIL INJECTION SYSTEM 6-3  
PROCEDURE 6-3  
**BOAT MAINTENANCE 3-8**  
**BOATING SAFETY 1-3**  
BOLTS, NUTS AND OTHER THREADED RETAINERS 2-11  
BREAKER POINTS 5-9  
POINT GAP CHECK 5-9  
REMOVAL & INSTALLATION 5-11  
**BREAKER POINTS IGNITION (MAGNETO IGNITION) 5-8**  
BUY OR REBUILD? 7-19  
CAN YOU DO IT? 1-2  
CAPACITIES 3-42  
**CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM 5-14**  
CAPACITOR DISCHARGE MODULE (SWITCH BOX) 5-27  
REMOVAL & INSTALLATION 5-28  
TESTING 5-27  
**CARBURETED FUEL SYSTEM 4-3**  
2.5, 3 AND 3.3 HP 4-8  
ASSEMBLY 4-10  
CLEANING & INSPECTION 4-10  
DISASSEMBLY 4-8  
REMOVAL & INSTALLATION 4-8  
4 AND 5 HP 4-11  
ASSEMBLY 4-13  
CLEANING & INSPECTION 4-13  
DISASSEMBLY 4-12  
REMOVAL & INSTALLATION 4-11  
6, 8, 9.9, 10 AND 15 HP 4-14  
ASSEMBLY 4-19  
CLEANING & INSPECTION 4-17  
DISASSEMBLY 4-15  
REMOVAL & INSTALLATION 4-14  
20 AND 25 HP 4-20  
ASSEMBLY 4-22  
CLEANING & INSPECTION 4-21  
DISASSEMBLY 4-20  
REMOVAL & INSTALLATION 4-20

# MASTER INDEX

# 11-28 MASTER INDEX

- 30 AND 40 HP 4-23
  - ASSEMBLY 4-25
  - CLEANING & INSPECTION 4-25
  - DISASSEMBLY 4-24
  - REMOVAL & INSTALLATION 4-23
- 40-125 HP 4-26
  - ASSEMBLY 4-31
  - CLEANING & INSPECTION 4-30
  - DISASSEMBLY 4-28
  - REMOVAL & INSTALLATION 4-27
- 1990 135-200 HP 4-33
  - ASSEMBLY 4-36
  - CLEANING & INSPECTION 4-35
  - DISASSEMBLY 4-35
  - REMOVAL & INSTALLATION 4-33
- 1991-00 135-200 HP 4-37
  - ASSEMBLY 4-40
  - CLEANING & INSPECTION 4-40
  - DISASSEMBLY 4-38
  - REMOVAL & INSTALLATION 4-37
- 1991-00 275 HP 4-41
  - ASSEMBLY 4-44
  - CLEANING & INSPECTION 4-44
  - DISASSEMBLY 4-43
  - REMOVAL & INSTALLATION 4-42
- CARBURETION 4-3
  - BASIC FUNCTIONS 4-3
  - CARBURETOR CIRCUITS 4-4
  - FUEL & AIR METERING 4-4
  - FUEL PUMP 4-5
- CHARGING CIRCUIT 5-30**
- CHEMICALS 2-2
  - CLEANERS 2-3
  - LUBRICANTS & PENETRANTS 2-2
  - SEALANTS 2-3
- COMBUSTION 4-2
- COMPRESSION TEST 3-10
  - PRIMARY COMPRESSION TEST 3-10
  - SECONDARY COMPRESSION TEST 3-10
- CONDENSER 5-12
  - REMOVAL & INSTALLATION 5-12
  - TESTING 5-12
- CONNECTING RODS 7-27
  - GENERAL INFORMATION 7-27
  - INSPECTION 7-27
- CONTROL CABLES 10-10
  - REMOVAL & INSTALLATION 10-10
- CONVERSION FACTORS 2-12
- COOLANT TEMPERATURE SENSOR 4-60
  - REMOVAL & INSTALLATION 4-60
  - TESTING 4-60
- COOLING SYSTEM 6-8**
- COURTESY MARINE EXAMINATIONS 1-10
- CRANKSHAFT 7-28
  - GENERAL INFORMATION 7-28
  - INSPECTION 7-29
- CRANKSHAFT POSITION SENSOR (CPS) 4-72
  - REMOVAL & INSTALLATION 4-72
  - TESTING 4-72
- CYLINDER BLOCK AND HEAD 7-22
  - GENERAL INFORMATION 7-22
  - INSPECTION 7-23
- CYLINDER BORES 7-23
  - GENERAL INFORMATION 7-23
  - INSPECTION 7-23
  - REFINISHING 7-24
- DESCRIPTION & OPERATION (BREAKER POINTS IGNITION) 5-8
  - SYSTEM COMPONENTS 5-8
- DESCRIPTION AND OPERATION (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-14
  - 2.5-3.3 HP 5-15
  - 4-275 HP 5-15
- DESCRIPTION AND OPERATION (CHARGING CIRCUIT) 5-30
- DESCRIPTION AND OPERATION (COOLING SYSTEM) 6-8
  - OPTIMAX 6-8
- DESCRIPTION AND OPERATION (ELECTRONIC FUEL INJECTION) 4-50
  - FUEL INJECTION BASICS 4-50
  - MERCURY ELECTRONIC FUEL INJECTION 4-50
- DESCRIPTION AND OPERATION (GAS ASSIST TILT SYSTEM) 9-5
- DESCRIPTION AND OPERATION (HAND REWIND STARTER) 11-2
- DESCRIPTION AND OPERATION (JET DRIVE) 8-11
- DESCRIPTION AND OPERATION (MANUAL TILT) 9-2
  - SERVICING 9-2
- DESCRIPTION AND OPERATION (OIL INJECTION SYSTEM) 6-2
  - MERCURY OIL INJECTION 6-2
  - OPTIMAX OIL INJECTION 6-2
- DESCRIPTION AND OPERATION (OPTIMAX DIRECT FUEL INJECTION) 4-66
  - OPTIMAX COMPONENTS 4-68
- DESCRIPTION AND OPERATION (OPTIMAX WARNING SYSTEMS) 6-27
  - 1998-99 MODEL YEARS 6-27
  - GUARDIAN PROTECTION SYSTEM—2000 6-27
- DESCRIPTION AND OPERATION (POWER TRIM/TILT) 9-6
- DESCRIPTION AND OPERATION (REMOTE CONTROL BOX) 10-2
- DESCRIPTION AND OPERATION (SINGLE RAM INTEGRAL POWER TILT/TRIM) 9-7
- DESCRIPTION AND OPERATION (STARTER CIRCUIT) 5-40
- DESCRIPTION AND OPERATION (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-12
- DESCRIPTION AND OPERATION (TILLER HANDLE) 10-6
- DESCRIPTION AND OPERATION (WARNING SYSTEMS) 6-22
  - OIL QUANTITY INDICATOR 6-22
  - OVERHEAT TEMPERATURE WARNING 6-23
- DETERMINING POWERHEAD CONDITION 7-19
- DETONATION SENSOR AND MODULE 4-66
  - TESTING 4-66
- DIRECT INJECTOR 4-73
  - CLEANING & INSPECTION 4-74
  - REMOVAL & INSTALLATION 4-73
  - TESTING 4-73
- DIRECTIONS AND LOCATIONS 1-2
- DO'S (SAFETY IN SERVICE) 1-10
- DON'TS (SAFETY IN SERVICE) 1-10
- ELECTRIC FUEL PUMP 4-61
  - REMOVAL & INSTALLATION 4-62
  - TESTING 4-61
- ELECTRICAL COMPONENTS 5-2
  - CONNECTORS 5-4
  - GROUND 5-3
  - LOAD 5-4
  - POWER SOURCE 5-2
  - PROTECTIVE DEVICES 5-3
  - SWITCHES & RELAYS 5-3
  - WIRING & HARNESSSES 5-4
- ELECTRONIC CONTROL MODULE (ECM) 4-74
  - REMOVAL & INSTALLATION 4-74
- ELECTRONIC FUEL INJECTION (EFI) 4-50**
- ELECTRONIC TOOLS 2-8
- EMERGENCY STOP SWITCH (TILLER HANDLE) 10-12
  - REMOVAL & INSTALLATION 10-12
  - TESTING 10-12
- EMERGENCY STOP SWITCH, LANYARD (REMOTE CONTROL BOX) 10-5
  - REMOVAL & INSTALLATION 10-5
  - TESTING 10-5
- ENGINE MAINTENANCE 3-2**

**ENGINE MECHANICAL 7-2**

- 2.5-3.3 HP 7-14
  - REMOVAL & INSTALLATION 7-14
- 4-5 HP 7-14
  - REMOVAL & INSTALLATION 7-14
- 6-15 HP 7-15
  - REMOVAL & INSTALLATION 7-15
- 20-25 HP 7-15
  - REMOVAL & INSTALLATION 7-15
- 30 AND 40 HP 7-15
  - REMOVAL & INSTALLATION 7-15
- 40 HP (3-CYLINDER), 50 AND 60 HP 7-16
  - REMOVAL & INSTALLATION 7-17
- 40 HP (4-CYLINDER) 7-16
  - REMOVAL & INSTALLATION 7-16
- 75-125 HP 7-17
  - REMOVAL & INSTALLATION 7-17
- 135-225 DFI OPTIMAX 7-18
  - REMOVAL & INSTALLATION 7-18
- 135-250 HP 7-17
  - REMOVAL & INSTALLATION 7-17
- 275 HP 7-18
  - REMOVAL & INSTALLATION 7-19
- ENGINE REBUILDING SPECIFICATIONS 7-41
- ENGINE START SWITCH 10-12
  - REMOVAL & INSTALLATION 10-12
  - TESTING 10-12
- ENGINE STOP SWITCH (REMOTE CONTROL BOX) 10-5
  - REMOVAL & INSTALLATION 10-5
  - TESTING 10-5
- ENGINE STOP SWITCH (TILLER HANDLE) 10-12
  - REMOVAL & INSTALLATION 10-12
  - TESTING 10-12
- ENGINE TORQUE SPECIFICATIONS 7-39
- EQUIPMENT NOT REQUIRED BUT RECOMMENDED 1-9
  - ANCHORS 1-9
  - BAILING DEVICES 1-9
  - FIRST AID KIT 1-9
  - SECOND MEANS OF PROPULSION 1-9
  - TOOLS AND SPARE PARTS 1-10
  - VHF-FM RADIO 1-10
- FASTENERS, MEASUREMENTS AND CONVERSIONS 2-11**
- FIBERGLASS HULL 3-9
- FUEL 4-2
  - ALCOHOL-BLENDED FUELS 4-2
  - HIGH ALTITUDE OPERATION 4-2
  - OCTANE RATING 4-2
  - RECOMMENDATIONS 4-2
  - VAPOR PRESSURE 4-2
- FUEL AND COMBUSTION 4-2**
- FUEL FILTER 3-4
  - CLEANING & INSPECTION 3-5
  - RELIEVING FUEL SYSTEM PRESSURE 3-4
  - REMOVAL & INSTALLATION 3-5
- FUEL INJECTOR (OPTIMAX DIRECT FUEL INJECTION) 4-74
  - CLEANING & INSPECTION 4-74
  - REMOVAL & INSTALLATION 4-74
  - TESTING 4-74
- FUEL INJECTORS (ELECTRONIC FUEL INJECTION) 4-54
  - CLEANING & INSPECTION 4-60
  - REMOVAL & INSTALLATION 4-56
  - TESTING 4-54
- FUEL LINES 4-49
- FUEL PRESSURE REGULATOR (ELECTRONIC FUEL INJECTION) 4-64
  - REMOVAL & INSTALLATION 4-64
- FUEL PRESSURE REGULATOR (OPTIMAX DIRECT FUEL INJECTION) 4-75
  - CLEANING & INSPECTION 4-75
  - REMOVAL & INSTALLATION 4-75

- FUEL PUMP (CARBURETED FUEL SYSTEM) 4-45
  - OVERHAUL 4-48
  - REMOVAL & INSTALLATION 4-47
  - TESTING 4-45
- FUEL PUMP (OPTIMAX DIRECT FUEL INJECTION) 4-75
  - TESTING 4-75
- FUEL RAIL 4-76
  - CLEANING & INSPECTION 4-76
  - REMOVAL & INSTALLATION 4-76
- FUEL/WATER SEPARATOR 3-5
  - SERVICE 3-5
- GAS ASSIST DAMPER 9-5
  - REMOVAL & INSTALLATION 9-6
  - TESTING 9-5

**GAS ASSIST TILT SYSTEM 9-5**

- GAUGES 2-9
- GENERAL ENGINE SPECIFICATIONS 3-40
- GENERAL INFORMATION (LOWER UNIT) 8-2

**HAND REWIND STARTER 11-2**

- HAND TOOLS 2-4
  - HAMMERS 2-7
  - PLIERS 2-7
  - SCREWDRIVERS 2-7
  - SOCKET SETS 2-4
  - WRENCHES 2-6

**HOW TO USE THIS MANUAL 1-2**

**IGNITION AND ELECTRICAL WIRING DIAGRAMS 5-42**

- IGNITION COIL (BREAKER POINTS IGNITION) 5-13
  - REMOVAL & INSTALLATION 5-14
  - TESTING 5-13
- IGNITION COIL (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-25
  - REMOVAL & INSTALLATION 5-26
  - TESTING 5-25
- IGNITION SWITCH 10-5
  - REMOVAL & INSTALLATION 10-5
  - TESTING 10-5
- IGNITION SYSTEM 3-14
- IGNITION TESTING SPECIFICATIONS 5-17
- INTRODUCTION (TUNE-UP) 3-10

**JET DRIVE 8-11**

- JET DRIVE ASSEMBLY 8-12
  - ADJUSTMENT 8-15
  - ASSEMBLY 8-18
  - CLEANING AND INSPECTING 8-17
  - DISASSEMBLY 8-16
  - REMOVAL & INSTALLATION 8-12
  - SHIMMING 8-19
- LOWER UNIT 8-5
  - REMOVAL & INSTALLATION 8-5

**LOWER UNIT 8-2**

- LOWER UNIT (ENGINE MAINTENANCE) 3-3
  - DRAINING AND FILLING 3-3
  - OIL RECOMMENDATIONS 3-3
- LOWER UNIT SPECIFICATIONS 8-20
- LUBRICATION POINTS 3-6
  - INSPECTION & LUBRICATION 3-6
- MAINTENANCE INTERVAL CHART 3-42
- MAINTENANCE OR REPAIR? 1-2
- MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR 4-76
  - REMOVAL & INSTALLATION 4-76
  - TESTING 4-76

**MANUAL TILT 9-2**

- MEASURING TOOLS 2-9
  - DEPTH GAUGES 2-10
  - DIAL INDICATORS 2-10
  - MICROMETERS & CALIPERS 2-9
  - TELESCOPING GAUGES 2-10

# 11-30 MASTER INDEX

- MECHANICAL FUEL PUMP 4-61
  - REMOVAL & INSTALLATION 4-61
  - TESTING 4-61
- MODEL IDENTIFICATION AND SERIAL NUMBERS 8-11
- NEUTRAL START SWITCH 10-4
  - REMOVAL & INSTALLATION 10-4
  - TESTING 10-4
- OIL GAUGE 6-26
  - TESTING 6-26
- OIL INJECTION SYSTEM 6-2**
- OIL LEVEL SWITCH 6-26
  - REMOVAL & INSTALLATION 6-26
  - TESTING 6-26
- OIL LINES 6-7
  - OIL LINE CAUTIONS 6-7
- OIL PUMP 6-6
  - REMOVAL & INSTALLATION 6-6
- OIL PUMP CONTROL ROD 6-7
  - ADJUSTMENT 6-7
- OIL PUMP DISCHARGE RATE 6-7
  - TESTING 6-7
- OIL TANK 6-4
  - CLEANING & INSPECTION 6-6
  - REMOVAL & INSTALLATION 6-4
- OPTIMAX DIRECT FUEL INJECTION (DFI) 4-66**
- OPTIMAX WARNING SYSTEMS 6-27**
- OTHER COMMON TOOLS 2-7
- OVERHEAD TYPE STARTER 11-2**
  - 2.5, 3 AND 3.3 HP 11-2
    - ASSEMBLY 11-4
    - CLEANING & INSPECTION 11-4
    - DISASSEMBLY 11-3
    - REMOVAL & INSTALLATION 11-2
  - 4 AND 5 HP 11-6
    - ASSEMBLY 11-8
    - CLEANING & INSPECTION 11-8
    - DISASSEMBLY 11-7
    - REMOVAL & INSTALLATION 11-6
  - 6-15 HP 11-11
    - ASSEMBLY 11-14
    - CLEANING & INSPECTION 11-13
    - DISASSEMBLY 11-12
    - REMOVAL & INSTALLATION 11-11
  - 20 AND 25 HP 11-15
    - ASSEMBLY 11-18
    - CLEANING & INSPECTION 11-17
    - DISASSEMBLY 11-16
    - REMOVAL & INSTALLATION 11-15
  - 30 AND 40 HP 11-19
    - ASSEMBLY 11-22
    - CLEANING & INSPECTION 11-22
    - DISASSEMBLY 11-20
    - REMOVAL & INSTALLATION 11-19
- PISTON PINS 7-25
  - GENERAL INFORMATION 7-25
  - INSPECTION 7-25
- PISTON RINGS 7-26
  - GENERAL INFORMATION 7-26
  - INSPECTION 7-27
- PISTONS 7-24
  - GENERAL INFORMATION 7-24
  - INSPECTION 7-24
- POWER TRIM/TILT 9-6**
- POWERHEAD 7-2
  - REMOVAL & INSTALLATION 7-2
- POWERHEAD EXPLODED VIEWS 7-30
- POWERHEAD OVERHAUL TIPS 7-20
  - CAUTIONS 7-20
- CLEANING 7-20
  - REPAIRING DAMAGED THREADS 7-21
  - TOOLS 7-20
- POWERHEAD PREPARATION 7-21
- POWERHEAD RECONDITIONING 7-19**
- PRIMARY COIL 5-13
  - REMOVAL & INSTALLATION 5-13
  - TESTING 5-13
- PROFESSIONAL HELP 1-2
- PROPELLER (ENGINE MAINTENANCE) 3-6
- PROPELLER (LOWER UNIT) 8-3
  - REMOVAL & INSTALLATION 8-3
- PURCHASING PARTS 1-3
- RECTIFIER 5-34
  - REMOVAL & INSTALLATION 5-34
  - TESTING 5-34
- RECTIFIER TROUBLESHOOTING - TEST "A" 5-37
- RECTIFIER TROUBLESHOOTING - TEST "B" 5-37
- REED VALVE 7-13
- REGULATIONS FOR YOUR BOAT 1-3
  - CAPACITY INFORMATION 1-4
  - CERTIFICATE OF COMPLIANCE 1-4
  - DOCUMENTING OF VESSELS 1-4
  - HULL IDENTIFICATION NUMBER 1-4
  - LENGTH OF BOATS 1-4
  - NUMBERING OF VESSELS 1-4
  - REGISTRATION OF BOATS 1-4
  - SALES AND TRANSFERS 1-4
  - VENTILATION 1-4
  - VENTILATION SYSTEMS 1-5
- REGULATOR/RECTIFIER 5-34
  - REMOVAL & INSTALLATION 5-38
  - TESTING 5-34
- REMOTE CONTROL BOX 10-2**
- REMOTE CONTROL BOX 10-2
  - REMOVAL & INSTALLATION 10-2
- REMOTE CONTROL CABLES 10-3
  - ADJUSTMENT 10-3
- REQUIRED SAFETY EQUIPMENT 1-5
  - FIRE EXTINGUISHERS 1-5
  - PERSONAL FLOTATION DEVICES 1-6
  - SOUND PRODUCING DEVICES 1-8
  - TYPES OF FIRES 1-5
  - VISUAL DISTRESS SIGNALS 1-8
  - WARNING SYSTEM 1-6
- SAFETY IN SERVICE 1-10**
- SAFETY TOOLS 2-2
  - EYE & EAR PROTECTION 2-2
  - WORK CLOTHES 2-2
  - WORK GLOVES 2-2
- SERIAL NUMBER IDENTIFICATION 3-2
- SHIFT INTERRUPT SWITCH 4-76
  - REMOVAL & INSTALLATION 4-76
  - TESTING 4-76
- SHIFTING PRINCIPLES 8-2
  - COUNTER-ROTATING UNIT 8-2
  - STANDARD ROTATING UNIT 8-2
- SINGLE RAM INTEGRAL POWER TILT/TRIM 9-7**
- SMALL VOLTAGE REGULATOR TEST (STATIC) 5-35
- SPARK PLUG WIRES 3-14
  - REMOVAL & INSTALLATION 3-14
  - TESTING 3-14
- SPARK PLUGS 3-11
  - INSPECTION & GAPPING 3-13
  - READING SPARK PLUGS 3-12
  - REMOVAL & INSTALLATION 3-11
  - SPARK PLUG HEAT RANGE 3-11
  - SPARK PLUG SERVICE 3-11

SPECIAL TOOLS 2-8

**SPECIFICATION CHARTS**

- CAPACITIES 3-42
- CONVERSION FACTORS 2-12
- ENGINE REBUILDING SPECIFICATIONS 7-41
- ENGINE TORQUE SPECIFICATIONS 7-39
- GENERAL ENGINE SPECIFICATIONS 3-40
- IGNITION TESTING SPECIFICATIONS 5-17
- LOWER UNIT SPECIFICATIONS 8-20
- MAINTENANCE INTERVAL CHART 3-42
- OIL PUMP DISCHARGE RATE 6-7
- SMALL VOLTAGE REGULATOR TEST (STATIC) 5-35
- STATOR ALTERNATOR RESISTANCE SPECIFICATIONS 5-30
- TUNEUP SPECIFICATIONS CHART 3-41
- WME CARBURETOR SPECIFICATIONS 4-26

**SPRING COMMISSIONING CHECKLIST 3-39**

STANDARD AND METRIC MEASUREMENTS 2-11

**STARTER CIRCUIT 5-40**

- STARTER MOTOR 5-41
  - REMOVAL & INSTALLATION 5-41
- STARTER SOLENOID 5-41
  - TESTING 5-41
- STATOR (ALTERNATOR) 5-30
  - REMOVAL & INSTALLATION 5-31
  - TESTING 5-30
- STATOR ALTERNATOR RESISTANCE SPECIFICATIONS 5-30
- TEST EQUIPMENT 5-4
  - JUMPER WIRES 5-4
  - MULTIMETERS 5-5
  - TEST LIGHTS 5-5
- THE TWO-STROKE CYCLE 7-2
- THERMOSTAT 6-20
  - CLEANING & INSPECTION 6-22
  - REMOVAL & INSTALLATION 6-20
  - TESTING 6-22

**THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM 9-12**

- THROTTLE PLATE ASSEMBLY 4-77
  - REMOVAL & INSTALLATION 4-77
- THROTTLE POSITION SENSOR (ELECTRONIC FUEL INJECTION) 4-65
  - ADJUSTMENT 4-65
  - REMOVAL & INSTALLATION 4-65
  - TESTING 4-65
- THROTTLE POSITION SENSOR (OPTIMAX DIRECT FUEL INJECTION) 4-73
  - REMOVAL & INSTALLATION 4-73
  - TESTING 4-73

**TILLER HANDLE 10-6**

- TILLER HANDLE 10-6
  - REMOVAL & INSTALLATION 10-6
- TILT/TRIM CYLINDER (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-10
  - CLEANING & INSPECTION 9-11
  - REMOVAL & INSTALLATION 9-10
- TILT/TRIM CYLINDER (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-18
  - CLEANING & INSPECTION 9-18
  - DISASSEMBLY 9-18
- TILT/TRIM MOTOR (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-8
  - CLEANING & INSPECTION 9-9
  - REMOVAL & INSTALLATION 9-8
  - TESTING 9-8
- TILT/TRIM MOTOR (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-16
  - REMOVAL & INSTALLATION 9-16
  - TESTING 9-16
- TILT/TRIM PUMP 9-13
  - HYDRAULIC SYSTEM BLEEDING 9-15
  - REMOVAL & INSTALLATION 9-13

- TILT/TRIM RELAY (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-12
  - TESTING 9-12
- TILT/TRIM RELAY (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-20
  - TESTING 9-20
- TILT/TRIM SOLENOID 9-18
  - TESTING 9-18
- TILT/TRIM SWITCH (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-11
  - TESTING 9-11
- TILT/TRIM SWITCH (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-18
  - TESTING 9-18
- TIMING AND SYNCHRONIZATION 3-14

**TOOLS 2-4**

**TOOLS AND EQUIPMENT 2-2**

- TORQUE 2-11
- TORQUE SEQUENCE DIAGRAMS 7-36
- TRACKER VALVE 4-77
  - REMOVAL & INSTALLATION 4-77
- TRIGGER (CHARGE) COIL 5-16
  - REMOVAL & INSTALLATION 5-18
  - TESTING 5-16
- TRIM/TILT PUMP 9-7
  - HYDRAULIC SYSTEM BLEEDING 9-8
  - REMOVAL & INSTALLATION 9-7
- TRIM/TILT SWITCH 10-6
  - REMOVAL & INSTALLATION 10-6
  - TESTING 10-6

**TROUBLESHOOTING CHARTS**

- RECTIFIER TROUBLESHOOTING - TEST "A" 5-37
- RECTIFIER TROUBLESHOOTING - TEST "B" 5-37
- TROUBLESHOOTING ELECTRONIC FUEL INJECTION 4-53
- TROUBLESHOOTING THE BREAKER POINTS IGNITION SYSTEM 5-8
  - COMPRESSION TEST 5-9
  - SPARK PLUGS 5-9
- TROUBLESHOOTING THE CDI SYSTEM 5-15
  - TROUBLESHOOTING ALTERNATOR DRIVEN IGNITIONS 5-16
  - TROUBLESHOOTING BATTERY CD IGNITIONS 5-16
  - TROUBLESHOOTING WITH MINIMAL TEST EQUIPMENT 5-15
- TROUBLESHOOTING THE CHARGING SYSTEM 5-30
- TROUBLESHOOTING THE COOLING SYSTEM 6-9
- TROUBLESHOOTING THE ELECTRICAL SYSTEM 5-6
  - OPEN CIRCUITS 5-6
  - RESISTANCE 5-6
  - SHORT CIRCUITS 5-7
  - VOLTAGE 5-6
  - VOLTAGE DROP 5-6
- TROUBLESHOOTING THE FUEL SYSTEM 4-6
  - COMBUSTION RELATED PISTON FAILURES 4-7
  - COMMON PROBLEMS 4-6
- TROUBLESHOOTING THE LOWER UNIT 8-2
- TROUBLESHOOTING THE OIL INJECTION SYSTEM 6-3
- TROUBLESHOOTING THE OPTIMAX FUEL INJECTION SYSTEM 4-69
  - WITH THE DIGITAL DIAGNOSTIC TERMINAL (DDT) 4-70
  - WITHOUT THE DIGITAL DIAGNOSTIC TERMINAL (DDT) 4-69
- TROUBLESHOOTING THE POWER TRIM/TILT SYSTEM 9-6
- TROUBLESHOOTING THE REMOTE CONTROLS 10-2
- TROUBLESHOOTING THE REWIND STARTER 11-2
- TROUBLESHOOTING THE STARTING SYSTEM 5-40
- TROUBLESHOOTING THE TILLER HANDLE 10-6
- TROUBLESHOOTING THE WARNING SYSTEMS (OPTIMAX WARNING SYSTEMS) 6-28
- TROUBLESHOOTING THE WARNING SYSTEMS (WARNING SYSTEMS) 6-24

# 11-32 MASTER INDEX

## TUNE-UP 3-10

- 2.5, 3 AND 3.3 HP 3-15
  - IDLE MIXTURE 3-15
  - IDLE SPEED 3-15
  - IGNITION TIMING 3-15
  - THROTTLE JET NEEDLE 3-16
- 4 AND 5 HP 3-16
  - IDLE SPEED & MIXTURE 3-17
  - IGNITION TIMING 3-16
  - PRELIMINARY ADJUSTMENTS 3-16
- 6, 8, 9.9 AND 15 HP 3-17
  - FAST IDLE SPEED 3-18
  - IDLE SPEED & MIXTURE 3-18
  - IGNITION TIMING 3-18
  - PRELIMINARY ADJUSTMENTS 3-17
- 20 AND 25 HP 3-19
  - CARBURETOR THROTTLE CAM 3-21
  - DASHPOT ADJUSTMENT 3-21
  - FAST IDLE SPEED 3-21
  - FULL THROTTLE STOP 3-19
  - IDLE SPEED & MIXTURE 3-20
  - IGNITION TIMING 3-19
  - PRELIMINARY ADJUSTMENTS 3-19
  - STARTER INTERLOCK ADJUSTMENT 3-21
- 30 AND 40 HP 3-22
  - CAM FOLLOWER 3-22
  - IDLE SPEED & MIXTURE 3-22
  - IGNITION TIMING 3-22
  - OIL PUMP 3-23
  - PRELIMINARY ADJUSTMENTS 3-22
- 40 (3-CYLINDER), 1994-00 50 AND 60 HP 3-26
  - CARBURETOR SYNCHRONIZATION 3-26
  - IDLE SPEED & MIXTURE 3-26
  - IGNITION TIMING 3-26
  - OIL PUMP 3-27
  - PRELIMINARY ADJUSTMENTS 3-26
  - THROTTLE CAM 3-26
- 40 HP (4-CYLINDER) 3-23
  - CARBURETOR SYNCHRONIZATION 3-23
  - FULL THROTTLE STOP 3-24
  - IDLE SPEED & MIXTURE 3-24
  - IGNITION TIMING 3-23
  - PRELIMINARY ADJUSTMENTS 3-23
- 1990-93 50-60 HP 3-25
  - CARBURETOR SYNCHRONIZATION 3-25
  - IDLE SPEED & MIXTURE 3-25
  - IGNITION TIMING 3-25
  - PRELIMINARY ADJUSTMENTS 3-25
- 75 AND 90 HP 3-27
  - CARBURETOR SYNCHRONIZATION 3-27
  - IDLE SPEED & MIXTURE 3-28
  - IGNITION TIMING 3-27
  - OIL PUMP 3-28
  - PRELIMINARY ADJUSTMENTS 3-27
  - THROTTLE CAM 3-28
- 100-125 HP 3-28
  - ACCELERATOR PUMP 3-29
  - CARBURETOR SYNCHRONIZATION 3-28
  - IDLE SPEED & MIXTURE 3-29
  - IGNITION TIMING 3-29
  - OIL PUMP 3-29
  - PRELIMINARY ADJUSTMENTS 3-28
  - THROTTLE CABLE PRELOAD 3-29
  - THROTTLE CAM 3-28

- 115-225 DIRECT FUEL INJECTION (DFI) OPTIMAX 3-37
  - CRANK POSITION SENSOR 3-37
  - FULL THROTTLE STOP 3-37
  - THROTTLE CAM 3-37
  - THROTTLE PLATE SCREW 3-38
- 135-225 HP CARBURETED 3-30
  - CARBURETOR SYNCHRONIZATION 3-30
  - FULL THROTTLE STOP 3-30
  - IDLE SPEED & MIXTURE 3-31
  - IGNITION TIMING 3-30
  - OIL PUMP 3-30
  - PRELIMINARY ADJUSTMENTS 3-30
  - THROTTLE CABLE PRELOAD 3-31
  - THROTTLE CAM 3-30
- 150-200 HP ELECTRONIC FUEL INJECTION 3-35
  - FULL THROTTLE STOP 3-36
  - IDLE SPEED 3-36
  - IGNITION TIMING 3-35
  - OIL PUMP 3-36
  - THROTTLE CAM 3-36
  - THROTTLE POSITION SENSOR (TPS) 3-37
- 225 HP (3.0L) CARBURETED 3-31
  - CARBURETOR SYNCHRONIZATION 3-32
  - CRANKSHAFT POSITION SENSOR 3-33
  - IDLE SPEED 3-33
  - IGNITION TIMING 3-32
  - OIL PUMP 3-32
  - THROTTLE CAM 3-32
  - THROTTLE POSITION SENSOR (TPS) 3-33
- 250 AND 275 HP 3-33
  - CARBURETOR SYNCHRONIZATION 3-34
  - FULL THROTTLE STOP 3-34
  - IDLE SPEED 3-34
  - IGNITION TIMING 3-33
  - OIL PUMP 3-34
- TUNEUP SPECIFICATIONS CHART 3-41
- 2-STROKE OIL 3-2
  - FILLING 3-2
  - OIL RECOMMENDATIONS 3-2
- UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS 5-2**
- VAPOR SEPARATOR (ELECTRONIC FUEL INJECTION) 4-62
  - CLEANING & INSPECTION 4-63
  - REMOVAL & INSTALLATION 4-62
- VAPOR SEPARATOR (OPTIMAX DIRECT FUEL INJECTION) 4-77
  - ASSEMBLY 4-78
  - CLEANING & INSPECTION 4-77
  - DISASSEMBLY 4-77
  - REMOVAL & INSTALLATION 4-77
- WARNING SYSTEMS 6-22**
- WATER PUMP 6-9
  - CLEANING & INSPECTION 6-20
  - REMOVAL & INSTALLATION 6-9
- WATER TEMPERATURE SENSOR (OPTIMAX DIRECT FUEL INJECTION) 4-78
  - REMOVAL & INSTALLATION 4-78
  - TESTING 4-78
- WATER TEMPERATURE SENSOR (WARNING SYSTEMS) 6-24
  - REMOVAL & INSTALLATION 6-24
  - TESTING 6-26
- WHERE TO BEGIN 1-2
- WINTER STORAGE CHECKLIST 3-38**
- WIRE AND CONNECTOR REPAIR 5-7
- WME CARBURETOR SPECIFICATIONS 4-26