

CONTENTS

1

GENERAL INFORMATION, SAFETY & TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE & TUNE-UP

GENERAL INFORMATION (WHAT EVERYONE SHOULD KNOW ABOUT MAINTENANCE)	2-2
LUBRICATION	2-4
ENGINE MAINTENANCE	2-10
BOAT MAINTENANCE	2-29
TUNE-UP	2-32
STORAGE (WHAT TO DO BEFORE AND AFTER)	2-76
CLEARING A SUBMERGED MOTOR	2-79
SPECIFICATIONS	2-81

3

FUEL SYSTEM

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES	3-6
CARBURETED FUEL SYSTEM	3-12
ELECTRONIC FUEL INJECTION (EFI)	3-45
OPTIMAX DIRECT FUEL INJECTION (DFI)	3-73
FUEL/OIL ROUTING DIAGRAMS (EFI)	3-115
AIR/FUEL ROUTING DIAGRAMS	3-117
SPECIFICATIONS	3-121

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING CIRCUIT	4-39
DESCRIPTION & OPERATION	
SPECIFICATIONS	
STARTER CIRCUIT	4-51
ELECTRICAL SWITCH/SOLENOID SERVICE	4-61
WIRING DIAGRAMS	4-64

5

COOLING & LUBRICATION

OIL INJECTION SYSTEM	5-2
COOLING SYSTEM	5-11
WARNING SYSTEMS	5-31
COOLING SYSTEM FLOW SCHEMATICS	5-41
SPECIFICATIONS	5-44

CONTENTS

POWERHEAD MECHANICAL	6-2
POWERHEAD RECONDITIONING	6-60
POWERHEAD BREAK-IN	6-71
SPECIFICATION CHARTS	6-73

POWERHEAD

6

LOWER UNIT	7-2
TROUBLESHOOTING	7-3
JET DRIVE	7-88

LOWER UNIT

7

MECHANICAL TILT (UNASSISTED)	8-2
GAS ASSIST TILT SYSTEM	8-6
POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14
POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM	8-19
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL	8-24
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL	8-29

TRIM & TILT

8

REMOTE CONTROLS - MECHANICAL UNITS	9-2
REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS	9-11
TILLER HANDLE	9-16
REMOTE CONTROL WIRING	9-22

REMOTE CONTROL

9

HAND REWIND STARTER	10-2
---------------------	------

HAND REWIND STARTER

10

MASTER INDEX	10-15
--------------	-------

MASTER INDEX

ADDITIONAL REMOTE UNITS	9-6	4/5 HP MODELS	3-21
EXPLODED VIEWS	9-6	CLEANING & INSPECTION	3-24
AIR/FUEL ROUTING DIAGRAMS (OPTIMAX)	3-117	OVERHAUL	3-23
AIR COMPRESSOR	3-78	REMOVAL & INSTALLATION	3-21
DESCRIPTION & OPERATION	3-78	6/8, 9.9/10/15 & 20/20 JET/25 HP MODELS	3-25
OVERHAUL	3-84	CLEANING & INSPECTION	3-28
REMOVAL & INSTALLATION	3-83	OVERHAUL	3-26
TESTING	3-78	REMOVAL & INSTALLATION	3-25
AIR FILTER	2-27	30/40 HP 2-CYLINDER MODELS	3-28
REMOVAL & INSTALLATION	2-27	CLEANING & INSPECTION	3-31
AIR PRESSURE REGULATOR	3-87	OVERHAUL	3-29
DESCRIPTION & OPERATION	3-87	REMOVAL & INSTALLATION	3-28
REMOVAL & INSTALLATION	3-88	40-125 HP 3 & 4-CYLINDER MODELS	3-32
TESTING	3-88	OVERHAUL	3-33
AIR TEMPERATURE SENSOR (ATS)	3-58	REMOVAL & INSTALLATION	3-32
DESCRIPTION & OPERATION	3-58	150/200 HP (2.5L) V6 MODELS	3-34
REMOVAL & INSTALLATION	3-58	CLEANING & INSPECTION	3-37
TESTING	3-58	OVERHAUL	3-35
ALTERNATOR (EXTERNAL)	4-45	REMOVAL & INSTALLATION	3-34
DESCRIPTION & OPERATION	4-45	CHARGING CIRCUIT	4-39
REMOVAL & INSTALLATION	4-46	ALTERNATOR (EXTERNAL)	4-45
TESTING	4-45	BATTERY	4-42
ANODES (ZINCS)	2-24	DESCRIPTION & OPERATION	4-39
INSPECTION	2-24	RECTIFIER	4-47
SERVICING	2-25	REGULATOR/RECTIFIER	4-49
BASIC ELECTRICAL THEORY	4-2	SERVICE PRECAUTIONS	4-39
HOW DOES ELECTRICITY WORK: THE WATER ANALOGY	4-2	STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL)	4-44
OHM'S LAW	4-2	TROUBLESHOOTING	4-40
BATTERIES		CLEARING A SUBMERGED MOTOR	2-79
BATTERY CHARGERS	4-44	COMBUSTION	3-6
CONSTRUCTION	4-43	ABNORMAL COMBUSTION	3-6
LOCATION	4-43	COMBUSTION RELATED PISTON FAILURES	3-6
MAINTENANCE	2-29	FACTORS AFFECTING COMBUSTION	3-6
CLEANING	2-30	COMMANDER SIDE MOUNT REMOTE CONTROL BOX (MERCURY)	9-2
ELECTROLYTE LEVEL	2-29	ASSEMBLY	9-5
MARINE BATTERIES	4-42	CLEANING & INSPECTING	9-5
RATINGS	4-43	DESCRIPTION & OPERATION	9-2
REPLACING CABLES	4-44	DISASSEMBLY	9-3
SAFETY PRECAUTIONS	4-43	REMOVAL & INSTALLATION	9-2
STORAGE	2-31	TROUBLESHOOTING	9-2
TESTING	2-30	COMPRESSION TESTING	2-33
BEARINGS	6-70	LEAK TESTING	2-35
INSPECTION	6-70	LOW COMPRESSION	2-34
BEFORE/AFTER EACH USE	2-2	TUNE-UP COMPRESSION CHECK	2-33
VISUALLY INSPECTING THE BOAT & MOTOR	2-3	CONNECTING RODS	6-68
BOAT MAINTENANCE	2-29	INSPECTION	6-68
BATTERIES	2-29	CONTROL CABLES	9-20
FIBERGLASS HULL	2-31	REMOVAL & INSTALLATION	9-20
INTERIOR	2-32	2.5/3.3 HP MODELS	9-20
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) ...	1-10	4/5 HP MODELS	9-20
ANCHORS	1-10	6-25 HP MODELS	9-20
BAILING DEVICES	1-10	30/40 HP & 40/50 HP (2- AND 3-CYL) MODELS	9-21
COMPASS	1-10	55 HP & LARGER MODELS	9-21
FIRST AID KIT	1-10	COOLING SYSTEM	
OAR/PADDLE	1-10	DESCRIPTION & OPERATION	5-12
TOOLS AND SPARE PARTS	1-12	FLUSHING THE COOLING SYSTEM	2-10
VHF-FM RADIO	1-10	FLUSHING JET DRIVES	2-12
BOATING SAFETY	1-4	THERMOSTAT	5-15
COURTESY MARINE EXAMINATIONS	1-10	TROUBLESHOOTING	5-12
REGULATIONS FOR YOUR BOAT	1-4	WATER PUMP	5-19
REQUIRED SAFETY EQUIPMENT	1-5	COOLING SYSTEM FLOW SCHEMATICS	5-41
BUY OR REBUILD?	6-60	CRANKSHAFT	6-69
CARBURETED FUEL SYSTEM	3-12	INSPECTION	6-69
DESCRIPTION & OPERATION	3-12	CRANKSHAFT POSITION SENSOR (CPS)	
ENRICHENER SYSTEMS	3-41	DESCRIPTION & OPERATION	4-27
FUEL PUMP	3-37	EFI	3-60
TROUBLESHOOTING THE FUEL SYSTEM	3-15	OPTIMAX	3-91
2.5/3.3 HP MODELS	3-18	TESTING	4-27
CLEANING & INSPECTION	3-20	CYLINDER BLOCK & HEAD	6-62
OVERHAUL	3-19	GENERAL INFORMATION	6-62
REMOVAL & INSTALLATION	3-18	INSPECTION	6-63

10-16 MASTER INDEX

CYLINDER BORES	6-63	DRIVE BELT	2-25
INSPECTION	6-64	INSPECTION	2-26
REFINISHING	6-64	REMOVAL & INSTALLATION	2-26
DESCRIPTION & OPERATION		ELECTRIC FUEL PUMP	
AIR COMPRESSOR	3-78	EFI	3-67
AIR PRESSURE REGULATOR	3-87	OPTIMAX	3-104
AIR TEMPERATURE SENSOR (ATS)	3-58	ELECTRICAL COMPONENTS	4-2
ALTERNATOR (EXTERNAL)	4-45	GROUND	4-3
CARBURETED FUEL SYSTEM	3-12	LOAD	4-3
CDI & MODULAR CDI SYSTEMS	4-10	POWER SOURCE	4-2
CHARGING CIRCUIT	4-39	PROTECTIVE DEVICES	4-3
COMMANDER SIDE MOUNT REMOTE CONTROL BOX	9-2	SWITCHES & RELAYS	4-3
COOLING SYSTEM	5-11	WIRING & HARNESSSES	4-4
CRANKSHAFT POSITION SENSOR (CPS)	4-27	ELECTRICAL SWITCH/SOLENOID SERVICE	4-61
DETONATION (KNOCK) SENSOR & MODULE	3-61	IGNITION KEY SWITCH	4-61
DIRECT INJECTOR	3-96	KILL SWITCH	4-62
ELECTRIC FUEL PUMP - EFI	3-67	NEUTRAL SAFETY SWITCH	4-63
ELECTRIC FUEL PUMP(S) - OPTIMAX	3-104	START BUTTON	4-63
ELECTRONIC/ENGINE CONTROL MODULE (ECM)	3-62	ELECTRICAL TESTING	4-6
ELECTRONIC FUEL INJECTION (EFI)	3-45	OPEN CIRCUITS	4-6
ENGINE TEMPERATURE SENSORS (ETS)	3-55	RESISTANCE	4-6
ENRICHENER SYSTEMS	3-41	SHORT CIRCUITS	4-6
FUEL INJECTOR - OPTIMAX	3-97	VOLTAGE	4-6
FUEL INJECTORS, FUEL RAIL, REED ASSEMBLY & AIR INTAKE PLENUM		VOLTAGE DROP	4-6
EFI	3-47	ELECTRONIC ENGINE/PROPULSION CONTROL MODULE (ECM)	
FUEL PRESSURE REGULATOR - EFI	3-72	EFI	3-62
FUEL PRESSURE REGULATOR - OPTIMAX	3-98	OPTIMAX	3-95
FUEL (AND AIR) RAIL	3-106	ELECTRONIC FUEL INJECTION (EFI)	3-45
GAS ASSIST TILT SYSTEM	8-6	AIR TEMPERATURE SENSOR (ATS)	3-58
HAND REWIND STARTER	10-2	CRANKSHAFT POSITION SENSOR (CPS)	3-60
IGNITION COILS	4-28	DESCRIPTION & OPERATION	3-45
IGNITION MODULE (CD UNIT/CDM)	4-331	DETONATION (KNOCK) SENSOR & MODULE	3-61
INJECTION SYSTEM	5-4	ELECTRIC FUEL PUMP	3-67
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - EFI	3-58	ELECTRICAL SYSTEM CHECKS	2-40
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - OPTIMAX	3-92	BATTERY	2-40
MECHANICAL FUEL PUMP - EFI	3-63	INTERNAL WIRING HARNESS	2-40
MECHANICAL TILT (UNASSISTED)	8-2	STARTER MOTOR	2-40
OIL LEVEL SENSOR (SWITCH)	5-40	ELECTRONIC/ENGINE CONTROL MODULE (ECM) - EFI	3-62
OPTIMAX DIRECT FUEL INJECTION (DFI)	3-73	ELECTRONIC/PROPULSION CONTROL MODULE (ECM/PCM) - OPTIMAX	3-95
PCM & DIGITAL INDUCTIVE SYSTEMS	4-11	ENGINE TEMPERATURE SENSORS (ETS)	3-55
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10	FUEL INJECTORS, FUEL RAIL, REED ASSEMBLY & AIR INTAKE PLENUM	3-47
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14	FUEL PRESSURE REGULATOR	3-72
PTT - 3 RAM INTEGRAL	8-24	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-58
RECTIFIER	4-47	MECHANICAL FUEL PUMP - EFI	3-63
REMOTE CONTROLS - DTS UNITS	9-11	MECHANICAL FUEL PUMP - OPTIMAX	3-100
SHIFT INTERRUPT SWITCH	3-94	THROTTLE POSITION SENSOR (TPS)	3-60
STARTER MOTOR	4-55	TROUBLESHOOTING	3-45
STARTER MOTOR CIRCUITS	4-51	VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-68
STARTER RELAY/SOLENOID	4-53	WATER SENSOR	3-62
STATOR/CHARGE COIL	4-22	ELECTRONIC IGNITION SYSTEMS	4-8
STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL)	4-44	COMPONENT TESTING	4-12
TEMPERATURE SENSORS (ATS, CTS AND ETS)	3-89	DESCRIPTION & OPERATION	4-10
TEMPERATURE SWITCH (WARNING SYSTEM)	5-38	CDI & MODULAR CDI SYSTEMS	4-10
THROTTLE POSITION SENSOR (TPS) - EFI	3-60	PCM & DIGITAL INDUCTIVE SYSTEMS	4-11
THROTTLE POSITION SENSOR (TPS) - OPTIMAX	3-91	DIAGNOSTIC CHARTS	4-13
TILLER HANDLE	9-16	SYSTEM TYPES & COMPONENTS	4-8
TRACKER VALVE (V6 ONLY)	3-107	1-CYLINDER IGNITION	4-8
TRIGGER COILS	4-25	2-CYLINDER IGNITION	4-8
VAPOR SEPARATOR - OPTIMAX	3-108	3- & 4-CYL IGNITION SYSTEMS (EXC. OPTIMAX MOTORS)	4-8
VAPOR SEPARATOR TANK (VST) ASSEMBLY - EFI	3-68	CARBURETED V6 & 2001 EFI IGNITION SYSTEMS	4-10
WATER SENSOR	3-62	OPTIMAX & 2002 AND LATER EFI IGNITION SYSTEMS	4-10
DETERMINING POWERHEAD CONDITION	6-60	TROUBLESHOOTING	4-11
DETONATION (KNOCK) SENSOR & MODULE		SPARK PLUGS & CHECKING FOR SPARK	4-11
DESCRIPTION & OPERATION	3-61	TROUBLESHOOTING WITH MINIMAL TEST EQUIPMENT	4-11
TESTING	3-61	TROUBLESHOOTING BATTERY-DRIVEN IGNITIONS	4-12
DIGITAL REMOTE UNITS	9-14	TROUBLESHOOTING ALTERNATOR-DRIVEN IGNITIONS	4-12
EXPLODED VIEWS	9-14	ELECTRONIC SHIFT CONTROL (ESC)	9-12
DIRECT INJECTOR	3-96	ACTUATOR ADJUSTMENT	9-13
DESCRIPTION & OPERATION	3-96	SHIFT ACTUATOR REMOVAL & INSTALLATION	9-12
REMOVAL & INSTALLATION	3-96	SHIFT OVERRIDE PROCEDURE	9-13
TESTING	3-96		

ELECTRONIC THROTTLE CONTROL (ETC)	9-13	FUEL LINES & FITTINGS	3-8
REMOVAL & INSTALLATION	9-13	SERVICE	3-11
ENGINE COVERS (TOP COVER & COWLING)	2-10	TESTING	3-9
REMOVAL & INSTALLATION	2-10	FUEL PRESSURE REGULATOR	
ENGINE MAINTENANCE	2-10	EFI	3-72
AIR FILTER	2-27	OPTIMAX	3-98
ANODES (ZINCS)	2-24	FUEL PUMP - CARBURETTED	3-37
COOLING SYSTEM	2-10	REMOVAL & INSTALLATION	3-39
DRIVE BELT	2-25	OVERHAUL	3-40
ENGINE COVERS	2-10	TESTING	3-37
FUEL FILTER/FUEL WATER SEPARATOR	2-14	FUEL SYSTEM PRESSURIZATION	3-4
JET DRIVE IMPELLER	2-23	PRESSURIZING THE FUEL SYSTEM	3-5
OIL FILTER	2-28	RELEASING FUEL SYSTEM PRESSURE	3-5
PROPELLER	2-17	FUEL SYSTEM SERVICE CAUTIONS	3-2
2-STROKE OIL	2-12	FUEL TANK	3-7
ENGINE & SERIAL NUMBER IDENTIFICATION	2-2	SERVICE	3-7
ENGINE TEMPERATURE SENSORS (ETS)	3-55	FUEL TANK & LINES	3-6
DESCRIPTION & OPERATION	3-55	FUEL LINES & FITTINGS	3-8
REMOVAL & INSTALLATION	3-57	FUEL TANK	3-7
TESTING	3-56	GAS ASSIST DAMPER	8-6
ENRICHENER SYSTEMS	3-41	OVERHAUL (55-90 HP ONLY)	8-8
DESCRIPTION & OPERATION	3-41	REMOVAL & INSTALLATION	8-6
FUEL PRIMER HOSE ROUTING DIAGRAMS	3-42	TESTING	8-6
TESTING THE ELECTRIC PRIMER	3-42	GAS ASSIST TILT SYSTEM	8-6
THERMAL AIR VALVE CIRCUIT	3-44	DESCRIPTION & OPERATION	8-6
EXHAUST GASES	7-3	GAS ASSIST DAMPER	8-6
FASTENERS, MEASUREMENTS AND CONVERSIONS	1-27	INTRODUCTION	8-6
BOLTS, NUTS AND OTHER THREADED RETAINERS	1-27	GEARCASE REPAIR & OVERHAUL TIPS	7-4
STANDARD AND METRIC MEASUREMENTS	1-27	GEARCASE - 2.5/3.3 HP MODELS (W/NON-SHIFTING GEARCASES)	7-4
TORQUE	1-27	ASSEMBLY	7-6
FIBERGLASS HULL	2-31	CLEANING & INSPECTION	7-6
INSPECTION & CARE	2-31	DISASSEMBLY	7-5
FLYWHEEL	4-18	REMOVAL & INSTALLATION	7-4
REMOVAL & INSTALLATION	4-18	SHIMMING	7-7
1 & 2-CYLINDER POWERHEADS	4-18	GEARCASE - 2.5/3.3 HP & 4/5 HP MODELS	
3- AND 4-CYLINDER POWERHEADS	4-19	(W/SHIFTING GEARCASES)	7-8
6-CYLINDER POWERHEADS	4-21	ASSEMBLY	7-11
FUEL	3-2	BEARING CARRIER & PROPELLER SHAFT	7-15
ALCOHOL-BLENDED FUELS	3-3	DRIVESHAFT NEEDLE BEARING	7-14
HIGH ALTITUDE OPERATION	3-3	DRIVESHAFT, PINION GEAR & WATER PUMP BASE	7-15
OCTANE RATING	3-2	FORWARD GEAR & BEARING	7-13
RECOMMENDATIONS	3-3	SLIDING CLUTCH ASSEMBLY - 2.5/3.3 HP MODELS	7-11
STALE/CONTAMINATED FUEL	3-3	SLIDING CLUTCH ASSEMBLY - 4/5 HP MODELS	7-13
VAPOR PRESSURE	3-3	WATER PUMP BASE PLATE	7-15
FUEL (AND AIR) RAIL	3-106	CLEANING & INSPECTION	7-11
DESCRIPTION & OPERATION	3-106	DISASSEMBLY	7-9
REMOVAL & INSTALLATION	3-106	BEARING CARRIER & PROPELLER SHAFT	7-9
FUEL & COMBUSTION BASICS	3-2	DRIVESHAFT & WATER PUMP BASE	7-10
COMBUSTION	3-6	FORWARD GEAR & BEARING	7-111
FUEL	3-2	REMOVAL & INSTALLATION	7-8
FUEL SYSTEM PRESSURIZATION	3-4	SHIMMING	7-16
FUEL SYSTEM SERVICE CAUTIONS	3-2	GEARCASE - 6-25 HP MODELS	7-17
FUEL/OIL ROUTING DIAGRAMS (EFI)	3-115	ASSEMBLY	7-23
FUEL FILTER/FUEL WATER SEPARATOR	2-14	BEARING CARRIER	7-26
FUEL FILTER SERVICE	2-15	DRIVESHAFT NEEDLE BEARING(S)	7-24
DISPOSABLE INLINE FILTERS	2-15	DRIVESHAFT & PINION GEAR	7-25
DISPOSABLE INLINE FUEL/WATER SEPARATORS	2-16	FORWARD GEAR & BEARING	7-24
SERVICEABLE CANISTER-TYPE INLINE FILTERS	2-16	SLIDING CLUTCH	7-23
RELEASING FUEL SYSTEM PRESSURE	2-14	WATER PUMP PLATE	7-25
FUEL INJECTOR - OPTIMAX	3-97	CLEANING & INSPECTION	7-21
DESCRIPTION & OPERATION	3-97	DISASSEMBLY	7-18
REMOVAL & INSTALLATION	3-98	DRIVESHAFT & PINION GEAR REMOVAL	7-19
TESTING	3-98	FORWARD GEAR & BEARING	7-19
FUEL INJECTORS, FUEL RAIL, REED ASSEMBLY &		DRIVESHAFT SEALS, BUSHINGS AND/OR NEEDLE BEARINGS	7-20
AIR INTAKE PLENUM - EFI	3-47	PROPELLER SHAFT & BEARING CARRIER	7-18
DESCRIPTION & OPERATION	3-47	REMOVAL & INSTALLATION	7-17
CLEANING & INSPECTION	3-55	SHIMMING	7-27
REMOVAL & INSTALLATION	3-49	GEARCASE - 30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS	7-28
TESTING THE INJECTORS	3-48	ASSEMBLY	7-32
		BEARING CARRIER ASSEMBLY	7-34
		DRIVESHAFT, SHIFT SHAFT & BEARINGS	7-33
		FORWARD GEAR, BEARING & RACE	7-32

10-18 MASTER INDEX

PROPELLER SHAFT ASSEMBLY	7-35	DISASSEMBLY - 2005 & LATER MODELS	
PROPELLER SHAFT & BEARING CARRIER INSTALLATION	7-36	W/SERIAL #1B504989 AND ABOVE	7-74
CLEANING & INSPECTION	7-30	BEARING CARRIER REMOVAL & DISASSEMBLY	7-74
DISASSEMBLY	7-28	DRIVESHAFT & BEARINGS REMOVAL/SERVICE	7-74
BEARING CARRIER & PROPELLER SHAFT	7-28	NOSE CONE GEAR BEARING & RACE/ADAPTER REMOVAL	7-75
DRIVESHAFT, SHIFT SHAFT & BEARINGS	7-29	PROPELLER SHAFT REMOVAL & DISASSEMBLY	7-75
FORWARD GEAR & BEARING	7-30	SHIFT SHAFT DISASSEMBLY	7-75
REMOVAL & INSTALLATION	7-28	REMOVAL & INSTALLATION	7-69
SHIMMING	7-36	SHIMMING - 2001-05 MODELS THRU SERIAL #1B504988	7-85
GEARCASE - 55/60 (3-CYL) NON-BIGFOOT,		GEARCASE - 3.0L V6 OPTIMAX PRO/SPORT XS MODELS	7-90
60 HP BIGFOOT & 75-125 HP MODELS	7-36	ASSEMBLY	7-95
ASSEMBLY	7-45	BEARING CARRIER ASSEMBLY	7-96
BEARING CARRIER ASSEMBLY & INSTALLATION	7-49	BEARING CARRIER INSTALLATION	7-97
DRIVESHAFT & BEARINGS	7-47	DRIVESHAFT PINION NEEDLE BEARING INSTALLATION	7-95
FORWARD GEAR, BEARING & RACE	7-47	NOSE CONE GEAR BEARING RACE OR ADAPTER	7-95
PROPELLER SHAFT ASSEMBLY	7-49	PROPELLER SHAFT ASSEMBLY	7-96
SHIFT SHAFT INSTALLATION	7-46	PROPELLER SHAFT, DRIVESHAFT & PINION GEAR	7-96
CLEANING & INSPECTION	7-42	SHIFT SHAFT ASSEMBLY	7-95
DISASSEMBLY	7-38	CLEANING & INSPECTION	7-93
BEARING CARRIER REMOVAL & DISASSEMBLY	7-38	DISASSEMBLY	7-90
DRIVESHAFT & BEARINGS	7-39	BEARING CARRIER REMOVAL & DISASSEMBLY	7-91
FORWARD GEAR, BEARING & RACE	7-41	DRIVESHAFT & BEARINGS REMOVAL/SERVICE	7-92
GENERAL	7-38	NOSE CONE GEAR BEARING & RACE/ADAPTER REMOVAL	7-93
PROPELLER SHAFT DISASSEMBLY	7-39	PRE-DISASSEMBLY INSPECTION	7-91
SHIFT SHAFT REMOVAL	7-42	PROPELLER SHAFT REMOVAL & DISASSEMBLY	7-92
GENERAL INFORMATION	7-36	SHIFT SHAFT DISASSEMBLY	7-93
REMOVAL & INSTALLATION	7-36	REMOVAL & INSTALLATION	7-90
SHIMMING	7-51	SHIMMING	7-97
GEARCASE - 135-200 HP (2.5L) V6 MODELS	7-54	GENERAL INFORMATION (WHAT EVERYONE SHOULD	
ASSEMBLY	7-62	KNOW ABOUT MAINTENANCE)	2-2
BEARING CARRIER ASSEMBLY	7-72	BEFORE/AFTER EACH USE	2-2
BEARING CARRIER, PROPELLER SHAFT & SHIFT SHAFT		ENGINE & SERIAL NUMBER IDENTIFICATION	2-2
DRIVESHAFT LOWER NEEDLE BEARING INSTALLATION	7-62	MAINTENANCE COVERAGE IN THIS MANUAL	2-2
DRIVESHAFT & PINION GEAR	7-63	MAINTENANCE EQUALS SAFETY	2-2
NOSE CONE GEAR, BEARING & RACE	7-62	OUTBOARDS ON SAILBOATS	2-2
PROPELLER SHAFT ASSEMBLY	7-64	HAND REWIND STARTER	10-2
SHIFT SHAFT ASSEMBLY	7-64	DESCRIPTION & OPERATION	10-2
CLEANING & INSPECTION	7-58	TROUBLESHOOTING	10-2
DISASSEMBLY	7-55	HAND REWIND STARTER - 2.5/3.3 HP	10-2
BEARING CARRIER REMOVAL & DISASSEMBLY	7-55	ASSEMBLY & INSTALLATION	10-3
DRIVESHAFT & BEARINGS	7-57	CLEANING & INSPECTION	10-2
GENERAL INFORMATION	7-55	REMOVAL & DISASSEMBLY	10-2
NOSE CONE GEAR, BEARING & RACE	7-58	HAND REWIND STARTER - 4/5 HP	10-4
PROPELLER SHAFT DISASSEMBLY	7-56	ASSEMBLY & INSTALLATION	10-6
SHIFT SHAFT DISASSEMBLY	7-56	CLEANING & INSPECTION	10-6
REMOVAL & INSTALLATION	7-54	REMOVAL & DISASSEMBLY	10-4
SHIMMING	7-65	HAND REWIND STARTER - 6-25 HP	10-8
GEARCASE - CONVENTIONAL 200-250 HP (3.0L) V6 MODELS	7-68	ASSEMBLY	10-11
ASSEMBLY - 2001-05 MODELS THRU SERIAL #1B504988	7-79	CLEANING & INSPECTION	10-10
BEARING CARRIER ASSEMBLY	7-80	DISASSEMBLY	10-10
BEARING CARRIER INSTALLATION	7-82	REMOVAL & ROPE REPLACEMENT	10-8
DRIVESHAFT PINION NEEDLE BEARING INSTALLATION	7-79	ROPE REPLACEMENT & INSTALLATION	10-11
NOSE CONE GEAR BEARING RACE OR ADAPTER	7-79	HAND REWIND STARTER - 30 HP AND LARGER	10-11
PROPELLER SHAFT ASSEMBLY	7-80	ASSEMBLY & INSTALLATION	10-14
PROPELLER SHAFT, DRIVESHAFT AND PINION GEAR	7-81	CLEANING & INSPECTION	10-14
SHIFT SHAFT ASSEMBLY	7-80	REMOVAL & DISASSEMBLY	10-11
ASSEMBLY - 2005 & LATER MODELS		HOW TO USE THIS MANUAL	1-2
W/SERIAL #1B504989 & ABOVE	7-82	AVOIDING COMMON MISTAKES	1-2
BEARING CARRIER ASSEMBLY & ADAPTER	7-83	AVOIDING TROUBLE	1-2
BEARING CARRIER INSTALLATION	7-84	CAN YOU DO IT?	1-2
DRIVESHAFT PINION NEEDLE BEARING INSTALLATION	7-82	DIRECTIONS AND LOCATIONS	1-2
NOSE CONE GEAR BEARING RACE	7-82	MAINTENANCE OR REPAIR?	1-2
PROPELLER SHAFT ASSEMBLY	7-83	PROFESSIONAL HELP	1-2
PROPELLER SHAFT, DRIVESHAFT & PINION GEAR	7-83	PURCHASING PARTS	1-2
SHIFT SHAFT ASSEMBLY	7-83	WHERE TO BEGIN	1-2
CLEANING & INSPECTION	7-75	IGNITION COILS	4-28
DISASSEMBLY - 2001-05 MODELS THRU SERIAL #1B504988	7-70	DESCRIPTION & OPERATION	4-28
BEARING CARRIER REMOVAL & DISASSEMBLY	7-70	REMOVAL & INSTALLATION	4-29
DRIVESHAFT & BEARINGS REMOVAL/SERVICE	7-71	TESTING	4-28
NOSE CONE GEAR BEARING & RACE/ADAPTER REMOVAL	7-72	IGNITION KEY SWITCH	4-61
PROPELLER SHAFT REMOVAL & DISASSEMBLY	7-72	TESTING	4-61
SHIFT SHAFT DISASSEMBLY	7-73	MERCURY COMMANDER 2000 KEYSWITCH	4-61
		LATE MODEL 3 & 4-POSITION MERCURY KEY SWITCHES	4-62

<p>IGNITION MODULE (CD UNIT/CDM) 4-331</p> <p>DESCRIPTION & OPERATION 4-31</p> <p>REMOVAL & INSTALLATION 4-36</p> <p>2.5/3.3 HP MODELS 4-36</p> <p>4/5 HP MODELS 4-36</p> <p>6/8, 9.9/10/15 & 20/20 JET/25 HP MODELS 4-36</p> <p>30/40 HP 2-CYL MODELS 4-36</p> <p>40-250 HP 3-</p> <p>4- AND 6-CYLINDER MODELS 4-36</p> <p>SPECIFICATIONS 4-38</p> <p>TESTING 4-32</p> <p>IGNITION SYSTEMS</p> <p>CRANKSHAFT POSITION SENSOR (CPS) 4-27</p> <p>ELECTRONIC IGNITION SYSTEMS 4-8</p> <p>FLYWHEEL 4-18</p> <p>GENERAL INFORMATION 4-8</p> <p>IGNITION COILS 4-28</p> <p>IGNITION MODULE (CD UNIT/CDM) 4-331</p> <p>INSPECTION 2-40</p> <p>SPECIFICATIONS 4-38</p> <p>STATOR/CHARGE COIL 4-22</p> <p>TRIGGER COILS 4-25</p> <p>INJECTION SYSTEM 5-2</p> <p>GENERAL INFORMATION 5-2</p> <p>OIL LINES 5-11</p> <p>OIL PUMP 5-8</p> <p>OIL TANK 5-4</p> <p>TROUBLESHOOTING 5-4</p> <p>INTERIOR 2-32</p> <p>INSPECTION & CARE 2-32</p> <p>INTRODUCTION TO TUNE-UPS 2-32</p> <p>JET DRIVE 7-99</p> <p>DESCRIPTION & OPERATION 7-99</p> <p>JET DRIVE ADJUSTMENTS 7-105</p> <p>JET DRIVE AND/OR IMPELLER ASSEMBLY 7-99</p> <p>JET DRIVE ADJUSTMENTS 7-105</p> <p>GATE LINKAGE ADJUSTMENTS 7-105</p> <p>TRIM ADJUSTMENT 7-106</p> <p>JET DRIVE AND/OR IMPELLER ASSEMBLY 7-99</p> <p>CLEANING & INSPECTION 7-104</p> <p>DISASSEMBLY & ASSEMBLY 7-102</p> <p>REMOVAL & INSTALLATION 7-99</p> <p>JET DRIVE BEARING 2-8</p> <p>DAILY BEARING LUBRICATION 2-8</p> <p>GREASE REPLACEMENT 2-9</p> <p>RECOMMENDED LUBRICANT 2-8</p> <p>JET DRIVE IMPELLER 2-23</p> <p>IMPELLER CLEARANCE 2-24</p> <p>INSPECTION 2-23</p> <p>KILL SWITCH 4-62</p> <p>TESTING 4-62</p> <p>LOWER UNIT</p> <p>DRAINING & FILLING 2-7</p> <p>EXHAUST GASES 7-3</p> <p>GEARCASE REPAIR & OVERHAUL TIPS 7-4</p> <p>GEARCASE - 2.5/3.3 HP MODELS (W/NON-SHIFTING GEARCASES) 7-4</p> <p>GEARCASE - 2.5/3.3 HP & 4/5 HP MODELS (W/SHIFTING GEARCASES) 7-8</p> <p>GEARCASE - 6-25 HP MODELS 7-17</p> <p>GEARCASE - 30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS 7-28</p> <p>GEARCASE - 55/60 (3-CYL) NON-BIGFOOT, 60 HP BIGFOOT & 75-125 HP MODELS 7-36</p> <p>GEARCASE - 135-200 HP (2.5L) V6 MODELS 7-54</p> <p>GEARCASE - CONVENTIONAL 200-250 HP (3.0L) V6 MODELS 7-68</p> <p>GEARCASE - 3.0L V6 OPTIMAX PRO/SPORT XS MODELS 7-90</p> <p>GENERAL INFORMATION 7-2</p> <p>OIL LEVEL & CONDITION 2-7</p> <p>OIL RECOMMENDATIONS 2-6</p> <p>SHIFTING PRINCIPLES 7-2</p> <p>TROUBLESHOOTING 7-3</p> <p>LUBRICATING THE MOTOR 2-5</p>	<p>LUBRICATION 2-4</p> <p>ABOUT LUBRICATION 2-4</p> <p>JET DRIVE BEARING 2-8</p> <p>LOWER UNIT 2-6</p> <p>LUBRICATING THE MOTOR 2-5</p> <p>LUBRICATION INSIDE THE BOAT 2-6</p> <p>POWER TRIM/TILT RESERVOIR 2-9</p> <p>LUBRICATION INSIDE THE BOAT 2-6</p> <p>MAINTENANCE COVERAGE IN THIS MANUAL 2-2</p> <p>MAINTENANCE EQUALS SAFETY 2-2</p> <p>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR</p> <p>EFI 3-58</p> <p>OPTIMAX 3-92</p> <p>MECHANICAL FUEL PUMP</p> <p>EFI 3-63</p> <p>OPTIMAX 3-100</p> <p>MECHANICAL TILT (UNASSISTED) 8-2</p> <p>DESCRIPTION & OPERATION 8-2</p> <p>INTRODUCTION 8-2</p> <p>SERVICING 8-2</p> <p>NEUTRAL SAFETY SWITCH 4-63</p> <p>TESTING 4-63</p> <p>OIL & TEMPERATURE WARNING SYSTEMS 5-31</p> <p>CHECKING THE WARNING SYSTEM CIRCUIT 5-31</p> <p>TROUBLESHOOTING A WARNING SYSTEM ACTIVATION 5-32</p> <p>OPTIMAX & CARBURETED/EFI V6 MOTOR WARNING SYSTEM OIL</p> <p>OIL FILTER 2-28</p> <p>REMOVAL & INSTALLATION 2-28</p> <p>OIL LEVEL SENSOR (SWITCH) 5-40</p> <p>DESCRIPTION & TESTING 5-40</p> <p>OIL LINES 5-11</p> <p>CAUTIONS 5-11</p> <p>OIL PUMP 5-8</p> <p>BLEEDING THE SYSTEM 5-9</p> <p>ELECTRIC PUMPS 5-9</p> <p>MECHANICAL PUMPS 5-9</p> <p>CONTROL ROD ADJUSTMENT 5-8</p> <p>REMOVAL & INSTALLATION 5-8</p> <p>ELECTRONIC PUMPS 5-8</p> <p>MECHANICAL PUMPS 5-8</p> <p>TESTING OIL PUMP DISCHARGE RATE 5-10</p> <p>OIL TANK 5-4</p> <p>CLEANING & INSPECTION 5-7</p> <p>REMOVAL & INSTALLATION 5-4</p> <p>30-60 HP MODELS 5-4</p> <p>75/65 JET/90 & 80 JET/115/125 HP MODELS 5-6</p> <p>75/90/115/125 HP 1.5L OPTIMAX MODELS 5-6</p> <p>135-250 HP MODELS - ENGINE MOUNTED OIL RESERVOIR 5-6</p> <p>135-250 HP MODELS - REMOTE OIL TANK 5-7</p> <p>OPTIMAX DIRECT FUEL INJECTION (DFI) 3-73</p> <p>AIR COMPRESSOR 3-78</p> <p>AIR PRESSURE REGULATOR 3-87</p> <p>CRANKSHAFT POSITION SENSOR (CPS) 3-91</p> <p>DESCRIPTION & OPERATION 3-73</p> <p>DIRECT INJECTOR 3-96</p> <p>ELECTRIC FUEL PUMP(S) 3-104</p> <p>ELECTRONIC/PROPULSION CONTROL MODULE (ECM/PCM) 3-95</p> <p>FUEL INJECTOR 3-97</p> <p>FUEL PRESSURE REGULATOR 3-98</p> <p>FUEL (AND AIR) RAIL 3-106</p> <p>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR 3-92</p> <p>MECHANICAL FUEL PUMP 3-100</p> <p>SHIFT INTERRUPT SWITCH 3-94</p> <p>TEMPERATURE SENSORS (ATS, CTS AND ETS) 3-89</p> <p>THROTTLE BODY, AIR INTAKE PLENUM & REED BLOCK 3-112</p> <p>THROTTLE POSITION SENSOR (TPS) 3-91</p> <p>TRACKER VALVE (V6 ONLY) 3-107</p> <p>TROUBLESHOOTING 3-75</p> <p>VAPOR SEPARATOR 3-108</p> <p>OUTBOARDS ON SAILBOATS 2-2</p> <p>PISTON PINS 6-66</p>
---	---

10-20 MASTER INDEX

INSPECTION	6-66	POWERHEAD - 6/8 & 9.9/10/15 HP	6-8
PISTON RINGS	6-66	CLEANING & INSPECTION	6-12
INSPECTION	6-67	DISSASSEMBLY & ASSEMBLY	6-8
PISTONS	6-64	REMOVAL & INSTALLATION	6-8
GENERAL INFORMATION	6-64	POWERHEAD - 20/20 JET/25 HP	6-12
INSPECTION	6-65	CLEANING & INSPECTION	6-16
POWER TRIM/TILT RESERVOIR	2-9	DISSASSEMBLY & ASSEMBLY	6-13
FLUID LEVEL/CONDITION	2-9	REMOVAL & INSTALLATION	6-12
RECOMMENDED LUBRICANT	2-9	POWERHEAD - 30/40 HP 2-CYLINDER	6-17
POWER TILT/TRIM - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10	CLEANING & INSPECTION	6-22
DESCRIPTION & OPERATION	8-10	DISSASSEMBLY & ASSEMBLY	6-18
INTRODUCTION	8-10	REMOVAL & INSTALLATION	6-17
PTT HYDRAULIC CYLINDER	8-13	POWERHEAD - 40/40 JET/50/55/60 HP 3-CYLINDER	6-22
PTT HYDRAULIC PUMP	8-13	REMOVAL & INSTALLATION	6-22
TROUBLESHOOTING	8-11	DISSASSEMBLY & ASSEMBLY	6-23
POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14	CLEANING & INSPECTION	6-27
DESCRIPTION & OPERATION	8-14	POWERHEAD - 75/65 JET/90 HP & 80 JET/115/125 HP	6-27
INTRODUCTION	8-14	CLEANING & INSPECTION	6-35
PTT ASSEMBLY	8-19	DISSASSEMBLY & ASSEMBLY	6-28
TROUBLESHOOTING	8-15	REMOVAL & INSTALLATION	6-27
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL	8-24	POWERHEAD - 75/90/115 HP OPTIMAX	6-35
DESCRIPTION & OPERATION	8-24	CLEANING & INSPECTION	6-42
INTRODUCTION	8-24	DISSASSEMBLY & ASSEMBLY	6-37
PTT ASSEMBLY	8-29	REMOVAL & INSTALLATION	6-35
TILT ROD	8-33	POWERHEAD - 135-200 HP (2.5L) V6	6-42
TRIM MOTOR & PUMP	8-34	CLEANING & INSPECTION	6-52
TRIM ROD & CAP	8-30	DISSASSEMBLY & ASSEMBLY	6-44
TRIM SENDER & GAUGE	8-35	135-175 Hp (2.5L) V6 OPTIMAX	6-44
TROUBLESHOOTING	8-25	150-200 HP (2.5L) V6	6-48
POWERHEAD BREAK-IN	6-71	REMOVAL & INSTALLATION	6-42
BREAK-IN PROCEDURES	6-71	POWERHEAD - 200-250 HP (3.0L) V6	6-52
POWERHEAD MECHANICAL	6-2	CLEANING & INSPECTION	6-60
GENERAL INFORMATION	6-2	DISSASSEMBLY & ASSEMBLY	6-54
2.5/3.3 HP POWERHEADS	6-3	REMOVAL & INSTALLATION	6-52
4/5 HP POWERHEADS	6-5	PROPELLER	2-17
6/8 & 9.9/10/15 HP POWERHEADS	6-8	GENERAL PROPELLER INFORMATION	2-17
20/20 JET/25 HP POWERHEADS	6-12	CAVITATION	2-18
30/40 HP 2-CYLINDER POWERHEADS	6-17	CUPPING	2-18
40/40 JET/50/55/60 HP 3-CYLINDER POWERHEADS	6-22	DIAMETER & PITCH	2-17
75/65 JET/90 HP & 80 JET/115/125 HP POWERHEADS	6-27	PROGRESSIVE PITCH	2-18
75/90/115 HP OPTIMAX POWERHEADS	6-35	PROPELLER RAKE	2-18
135-200 HP (2.5L) V6 POWERHEADS	6-42	PROPELLER SELECTION	2-17
200-250 HP (3.0L) V6 POWERHEADS	6-52	ROTATION	2-18
POWERHEAD OVERHAUL TIPS	6-61	SHOCK ABSORBERS	2-18
CAUTIONS	6-61	VIBRATION	2-18
CLEANING	6-61	INSPECTION	2-19
POWERHEAD PREPARATION	6-61	REMOVAL & INSTALLATION	2-19
POWERHEAD RECONDITIONING	6-60	CASTELLATED NUT PROPS	2-21
BEARINGS	6-70	SHEAR PIN PROPS	2-20
BUY OR REBUILD?	6-60	PTT ASSEMBLY - MID-RANGE MOTOR, SINGLE RAM	8-19
CONNECTING RODS	6-68	OVERHAUL	8-20
CRANKSHAFT	6-69	REMOVAL & INSTALLATION	8-19
CYLINDER BLOCK & HEAD	6-62	SYSTEM BLEEDING	8-20
CYLINDER BORES	6-63	PTT ASSEMBLY - 3 RAM INTEGRAL	8-29
DETERMINING POWERHEAD CONDITION	6-60	REMOVAL & INSTALLATION	8-29
PISTON PINS	6-66	SYSTEM BLEEDING	8-30
PISTON RINGS	6-66	PTT HYDRAULIC CYLINDER	8-13
PISTONS	6-64	REMOVAL & INSTALLATION	8-13
POWERHEAD OVERHAUL TIPS	6-61	PTT HYDRAULIC PUMP	8-13
POWERHEAD PREPARATION	6-61	OVERHAUL	8-14
REED VALVES	6-71	REMOVAL & INSTALLATION	8-13
POWERHEAD - 2.5/3.3 HP	6-3	SYSTEM BLEEDING	8-14
CLEANING & INSPECTION	6-5	RECTIFIER	4-47
DISSASSEMBLY & ASSEMBLY	6-3	DESCRIPTION & OPERATION	4-47
REMOVAL & INSTALLATION	6-3	REMOVAL & INSTALLATION	4-48
POWERHEAD - 4/5 HP	6-5	EXTERNAL RECTIFIERS (FLYWHEEL STATOR MODELS)	4-48
CLEANING & INSPECTION	6-6	INTERNAL RECTIFIERS (ALTERNATOR MODELS)	4-49
DISSASSEMBLY & ASSEMBLY	6-5	TESTING	4-47
REMOVAL & INSTALLATION	6-5	RECTIFIER /REGULATOR	4-49
POWERHEAD - 6/8 & 9.9/10/15 HP	6-8	REMOVAL & INSTALLATION	4-50
CLEANING & INSPECTION	6-12	EXTERNAL REGULATORS (FLYWHEEL STATOR MODELS)	4-50
DISSASSEMBLY & ASSEMBLY	6-8	INTERNAL REGULATORS (ALTERNATOR MODELS)	4-50
REMOVAL & INSTALLATION	6-8		
POWERHEAD - 20/20 JET/25 HP	6-12		
CLEANING & INSPECTION	6-16		
DISSASSEMBLY & ASSEMBLY	6-13		
REMOVAL & INSTALLATION	6-12		
POWERHEAD - 30/40 HP 2-CYLINDER	6-17		
CLEANING & INSPECTION	6-22		
DISSASSEMBLY & ASSEMBLY	6-18		
REMOVAL & INSTALLATION	6-17		
POWERHEAD - 40/40 JET/50/55/60 HP 3-CYLINDER	6-22		
REMOVAL & INSTALLATION	6-22		
DISSASSEMBLY & ASSEMBLY	6-23		
CLEANING & INSPECTION	6-27		
POWERHEAD - 75/65 JET/90 HP & 80 JET/115/125 HP	6-27		
CLEANING & INSPECTION	6-35		
DISSASSEMBLY & ASSEMBLY	6-28		
REMOVAL & INSTALLATION	6-27		
POWERHEAD - 75/90/115 HP OPTIMAX	6-35		
CLEANING & INSPECTION	6-42		
DISSASSEMBLY & ASSEMBLY	6-37		
REMOVAL & INSTALLATION	6-35		
POWERHEAD - 135-200 HP (2.5L) V6	6-42		
CLEANING & INSPECTION	6-52		
DISSASSEMBLY & ASSEMBLY	6-44		
135-175 Hp (2.5L) V6 OPTIMAX	6-44		
150-200 HP (2.5L) V6	6-48		
REMOVAL & INSTALLATION	6-42		
POWERHEAD - 200-250 HP (3.0L) V6	6-52		
CLEANING & INSPECTION	6-60		
DISSASSEMBLY & ASSEMBLY	6-54		
REMOVAL & INSTALLATION	6-52		
PROPELLER	2-17		
GENERAL PROPELLER INFORMATION	2-17		
CAVITATION	2-18		
CUPPING	2-18		
DIAMETER & PITCH	2-17		
PROGRESSIVE PITCH	2-18		
PROPELLER RAKE	2-18		
PROPELLER SELECTION	2-17		
ROTATION	2-18		
SHOCK ABSORBERS	2-18		
VIBRATION	2-18		
INSPECTION	2-19		
REMOVAL & INSTALLATION	2-19		
CASTELLATED NUT PROPS	2-21		
SHEAR PIN PROPS	2-20		
PTT ASSEMBLY - MID-RANGE MOTOR, SINGLE RAM	8-19		
OVERHAUL	8-20		
REMOVAL & INSTALLATION	8-19		
SYSTEM BLEEDING	8-20		
PTT ASSEMBLY - 3 RAM INTEGRAL	8-29		
REMOVAL & INSTALLATION	8-29		
SYSTEM BLEEDING	8-30		
PTT HYDRAULIC CYLINDER	8-13		
REMOVAL & INSTALLATION	8-13		
PTT HYDRAULIC PUMP	8-13		
OVERHAUL	8-14		
REMOVAL & INSTALLATION	8-13		
SYSTEM BLEEDING	8-14		
RECTIFIER	4-47		
DESCRIPTION & OPERATION	4-47		
REMOVAL & INSTALLATION	4-48		
EXTERNAL RECTIFIERS (FLYWHEEL STATOR MODELS)	4-48		
INTERNAL RECTIFIERS (ALTERNATOR MODELS)	4-49		
TESTING	4-47		
RECTIFIER /REGULATOR	4-49		
REMOVAL & INSTALLATION	4-50		
EXTERNAL REGULATORS (FLYWHEEL STATOR MODELS)	4-50		
INTERNAL REGULATORS (ALTERNATOR MODELS)	4-50		

HAND REWIND STARTER 10-21

TESTING	4-49	STARTER RELAY/SOLENOID	4-53
REED VALVES	6-71	DESCRIPTION & OPERATION	4-53
INSPECTION	6-71	REMOVAL & INSTALLATION	4-54
REMOTE (SHIFT & THROTTLE) CABLES	9-9	REMOTE-MOUNTED	4-54
INSTALLATION & ADJUSTMENT - TO THE POWERHEAD	9-9	STARTER-MOUNTED	4-54
40-125 HP (3- AND 4-CYLINDER) MODELS	9-9	TESTING	4-53
135-250 HP (V6) MODELS	9-10	STATOR/CHARGE COIL	4-22
RIGGING & MEASUREMENT FOR REPLACEMENT	9-9	DESCRIPTION & OPERATION	4-22
RE-COMMISSIONING	2-78	REMOVAL & INSTALLATION	4-23
REMOVAL FROM STORAGE	2-78	TESTING	4-22
SAFETY IN SERVICE	1-12	STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL)	4-44
DO'S	1-12	DESCRIPTION & OPERATION	4-44
DON'TS	1-13	TESTING	4-44
SHIFT INTERRUPT SWITCH	3-94	STORAGE (WHAT TO DO BEFORE & AFTER)	2-76
DESCRIPTION & OPERATION	3-94	RE-COMMISSIONING	2-78
REMOVAL & INSTALLATION	3-94	WINTERIZATION	2-76
TESTING	3-94	TEMPERATURE SENSORS (ATS, CTS AND ETS)	3-89
SHIFTING PRINCIPLES	7-2	DESCRIPTION & OPERATION	3-89
COUNTER-ROTATING UNIT	7-2	REMOVAL & INSTALLATION	3-91
STANDARD ROTATING UNIT	7-2	TESTING	3-89
NON-REVERSE TYPE	7-2	TEMPERATURE SWITCH (WARNING SYSTEM)	5-38
REVERSE TYPE	7-2	CHECKING CONTINUITY	5-39
SHOP EQUIPMENT	1-17	DESCRIPTION & OPERATION	5-38
CHEMICALS	1-17	OPERATIONAL TEMPERATURE SWITCH CHECK	5-38
SAFETY TOOLS	1-17	TEST EQUIPMENT	4-4
SPARK PLUG WIRES	2-39	JUMPER WIRES	4-4
REMOVAL & INSTALLATION	2-39	MULTI-METERS	4-5
TESTING	2-39	TEST LIGHTS	4-4
SPARK PLUGS	2-35	THERMOSTAT	5-15
INSPECTION & GAPPING	2-39	EXPLODED VIEWS	5-17
SPARK PLUG HEAT RANGE	2-35	REMOVAL & INSTALLATION	5-15
READING SPARK PLUGS	2-37	THROTTLE BODY, AIR INTAKE PLENUM & REED BLOCK	3-112
REMOVAL & INSTALLATION	2-36	REMOVAL & INSTALLATION	3-112
SPECIFICATIONS	1-17	THROTTLE POSITION SENSOR (TPS)	
CAPACITIES	2-85	EFI	3-60
CARBURETOR SET-UP	3-121	OPTIMAX	3-91
CONVERSION FACTORS	1-28	TILLER HANDLE	9-16
COOLING SYSTEM	5-44	REMOVAL & INSTALLATION	9-16
ENGINE REBUILDING	6-73	2.5/3.3 HP MODELS	9-16
ENGINE TORQUE	6-77	4/5 HP MODELS	9-17
FUEL INJECTION COMPONENT ADJUSTMENT	3-122	6-25 HP MODELS	9-18
GENERAL ENGINE	2-81	30/40 HP & 40/50 HP (2- AND 3-CYL) MODELS	9-18
IGNITION SYSTEMS	4-38	55 HP & LARGER MODELS	9-19
MAINTENANCE INTERVALS	2-83	TILT ROD - 3 RAM INTEGRAL	8-33
SPARK PLUG DIAGNOSIS	2-88	REMOVAL & INSTALLATION	8-33
TUNE-UP	2-86	TIMING & SYNCHRONIZATION	2-41
TYPICAL TORQUE VALUES - METRIC BOLTS	1-29	2.5/3.3 HP MODELS	2-42
TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS	1-30	IGNITION TIMING	2-42
2-STROKE MOTOR FUEL:OIL RATIO	2-84	THROTTLE JET NEEDLE	2-42
START BUTTON	4-63	IDLE SPEED	2-43
TESTING	4-63	4/5 HP MODELS	2-43
STARTER CIRCUIT	4-51	IGNITION TIMING	2-43
STARTER MOTOR	4-55	IDLE SPEED & MIXTURE ADJUSTMENT	2-44
STARTER MOTOR CIRCUITS	4-51	6/8 & 9.9/10/15 HP MODELS	2-45
STARTER RELAY/SOLENOID	4-53	IDLE SPEED	2-45
STARTER MOTOR	4-55	LOW SPEED MIXTURE	2-45
CLEANING & INSPECTION	4-60	IGNITION TIMING	2-46
DESCRIPTION	4-55	IDLE WIRE	2-47
REMOVAL & INSTALLATION	4-55	20/20 JET/25 HP MODELS	2-47
25 HP & SMALLER MOTORS	4-55	CARBURETOR & LINKAGE	2-47
30 HP & LARGER MOTORS	4-55	IGNITION TIMING	2-48
OVERHAUL	4-57	IDLE SPEED & MIXTURE	2-49
25 HP & SMALLER MOTORS	4-57	30/40 HP 2-CYLINDER MODELS	2-50
30 HP & LARGER MOTORS - CENTRIFUGAL-DRIVEN STARTER	4-58	IDLE SPEED & MIXTURE ADJUSTMENTS	2-50
30 HP & LARGER MOTORS - SOLENOID-DRIVEN STARTER	4-59	REMOTE CONTROL CABLE INSTALLATION	2-50
PINION GEAR REPLACEMENT - OPTIMAX MOTORS	4-57	IGNITION TIMING	2-51
STARTER MOTOR CIRCUITS	4-51	OIL PUMP	2-52
DESCRIPTION & OPERATION	4-51	40-125 HP CARBURETED 3 & 4-CYL MODELS	2-52
TROUBLESHOOTING	4-51	CARBURETOR SYNCHRONIZATION	2-52
		IGNITION TIMING	2-54
		IDLE SPEED	2-55

10-22 MASTER INDEX

75/90/115 HP OPTIMAX MODELS	2-55	TRIM MOTOR & PUMP - 3 RAM INTEGRAL	8-34
THROTTLE LINKAGE ADJUSTMENT	2-55	REMOVAL & INSTALLATION	8-35
150-200 HP (2.5L) V6 CARBURETED MODELS	2-56	TESTING THE MOTOR	8-34
IGNITION TIMING POINTER ADJUSTMENT	2-56	TRIM ROD & CAP - 3 RAM INTEGRAL	8-30
CARBURETOR SYNCHRONIZATION	2-57	REMOVAL & INSTALLATION	8-30
IGNITION TIMING	2-58	TRIM SENDER & GAUGE - 3 RAM INTEGRAL	8-35
IDLE SPEED ADJUSTMENT	2-59	ADJUSTING AN ANALOG SENDER	8-36
150-200 HP (2.5L) V6 EFI - 2001 MODELS ONLY	2-59	TESTING THE TRIM SENDER	8-35
TIMER POINTER ADJUSTMENT	2-59	TRIM SENDER & GAUGE WIRING	8-36
TRIGGER LINK ROD & PRELIMINARY ADJUSTMENTS	2-59	TRIM/TILT SYSTEMS	
THROTTLE CAM	2-59	GAS ASSIST TILT SYSTEM	8-6
STATIC IDLE TIMING	2-59	MECHANICAL TILT (UNASSISTED)	8-2
STATIC MAXIMUM TIMING	2-61	PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10
MAXIMUM THROTTLE ADJUSTMENT	2-62	PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14
THROTTLE POSITION SENSOR (TPS)	2-62	PTT - 3 RAM INTEGRAL	8-24
DYNAMIC IDLE TIMING	2-62	TROUBLESHOOTING	5-4
IDLE SPEED	2-63	BASIC OPERATING PRINCIPLES	1-13
THROTTLE VALVE & OIL PUMP SYNCHRONIZATION	2-63	CHARGING CIRCUIT	4-39
THROTTLE CABLE PRELOAD	2-63	CHARGING SYSTEMS	4-40
DETONATION CONTROL SYSTEM	2-63	COOLING SYSTEM	5-12
DYNAMIC MAXIMUM TIMING	2-63	COMMANDER SIDE MOUNT REMOTE CONTROL BOX	9-2
150-200 HP (2.5L) V6 EFI - 2002 & LATER MODELS	2-64	ELECTRICAL SYSTEMS	4-6
THROTTLE CAM ADJUSTMENT	2-64	ELECTRONIC FUEL INJECTION (EFI)	3-45
IGNITION TIMING CHECK	2-64	FUEL SYSTEM	3-15
MAXIMUM THROTTLE ADJUSTMENT	2-64	HAND REWIND STARTER	10-2
THROTTLE POSITION SENSOR	2-65	LOWER UNIT	7-3
IDLE SPEED	2-65	OIL INJECTION SYSTEM	5-4
THROTTLE CABLE INSTALLATION	2-66	OPTIMAX DIRECT FUEL INJECTION (DFI)	3-75
THROTTLE PLATE SCREW	2-66	PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10
135-175 HP (2.5L) V6 OPTIMAX MODELS	2-66	PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-15
THROTTLE CAM ADJUSTMENT	2-66	PTT - 3 RAM INTEGRAL	8-25
MAXIMUM THROTTLE ADJUSTMENT	2-67	STARTER MOTOR CIRCUITS	4-51
THROTTLE POSITION SENSOR	2-67	WARNING SYSTEM CIRCUIT	5-4
IDLE SPEED	2-67	WARNING SYSTEMS	5-32
THROTTLE PLATE SCREW	2-67	TUNE-UP	2-32
CRANKSHAFT POSITION SENSOR (CPS)	2-67	COMPRESSION TESTING	2-33
225-250 HP (3.0L) V6 EFI - 2001 MODELS ONLY	2-67	ELECTRICAL SYSTEM CHECKS	2-40
TIMER POINTER ADJUSTMENT	2-68	FUEL SYSTEM CHECKS	2-41
CRANKSHAFT POSITION SENSOR ADJUSTMENT	2-68	IGNITION SYSTEM	2-40
THROTTLE CAM ADJUSTMENT	2-68	INTRODUCTION TO TUNE-UPS	2-32
THROTTLE VALVE & OIL PUMP SYNCHRONIZATION	2-69	SPARK PLUG WIRES	2-39
MAXIMUM THROTTLE ADJUSTMENT	2-69	SPARK PLUGS	2-35
THROTTLE POSITION SENSOR (TPS) ADJUSTMENT	2-69	TIMING & SYNCHRONIZATION	2-41
IDLE SPEED	2-70	TUNE-UP SEQUENCE	2-32
200-250 HP (3.0L) V6 EFI - 2002 & LATER MODELS	2-70	2.5/3.3 HP MODELS	2-42
THROTTLE CAM ADJUSTMENT	2-70	4/5 HP MODELS	2-43
IGNITION TIMING CHECK	2-70	6/8 & 9.9/10/15 HP MODELS	2-45
MAXIMUM THROTTLE ADJUSTMENT	2-70	20/20 JET/25 HP MODELS	2-47
THROTTLE POSITION SENSOR	2-71	30/40 HP 2-CYLINDER MODELS	2-50
IDLE SPEED	2-71	40-125 HP CARBURETED 3 & 4-CYL MODELS	2-52
THROTTLE CABLE INSTALLATION	2-71	75/90/115 HP OPTIMAX MODELS	2-55
THROTTLE PLATE SCREW	2-72	150-200 HP (2.5L) V6 CARBURETED MODELS	2-56
200-250 HP (3.0L) V6 OPTIMAX MODELS	2-72	150-200 HP (2.5L) V6 EFI - 2001 MODELS ONLY	2-59
CRANKSHAFT POSITION SENSOR ADJUSTMENT	2-72	150-200 HP (2.5L) V6 EFI - 2002 & LATER MODELS	2-64
THROTTLE CAM ADJUSTMENT	2-72	135-175 HP (2.5L) V6 OPTIMAX MODELS	2-66
MAXIMUM THROTTLE ADJUSTMENT	2-73	225-250 HP (3.0L) V6 EFI - 2001 MODELS ONLY	2-67
THROTTLE POSITION SENSOR	2-75	200-250 HP (3.0L) V6 EFI - 2002 & LATER MODELS	2-70
IDLE SPEED	2-75	200-250 HP (3.0L) V6 OPTIMAX MODELS	2-72
THROTTLE PLATE SCREW	2-75	TUNE-UP SEQUENCE	2-32
TOOLS	1-19	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
ELECTRONIC TOOLS	1-23	BASIC ELECTRICAL THEORY	4-2
HAND TOOLS	1-19	ELECTRICAL COMPONENTS	4-2
MEASURING TOOLS	1-25	ELECTRICAL SYSTEM PRECAUTIONS	4-7
OTHER COMMON TOOLS	1-22	ELECTRICAL TESTING	4-6
SPECIAL TOOLS	1-23	TEST EQUIPMENT	4-4
TRACKER VALVE (V6 ONLY)	3-107	TROUBLESHOOTING ELECTRICAL SYSTEMS	4-6
DESCRIPTION & OPERATION	3-107	WIRE & CONNECTOR REPAIR	4-7
REMOVAL & INSTALLATION	3-108	VAPOR SEPARATOR TANK (VST) ASSEMBLY	
TRIGGER COILS	4-25	EFI	3-68
DESCRIPTION & OPERATION	4-25	OPTIMAX	3-108
REMOVAL & INSTALLATION	4-26		
4/5 HP MODELS	4-26		
EXCEPT 4/5 HP MODELS	4-26		
TESTING	4-25		

<p>WARNING SYSTEMS 5-31</p> <p>OIL & TEMPERATURE WARNING SYSTEMS 5-31</p> <p>OIL LEVEL SENSOR (SWITCH) 5-40</p> <p>TEMPERATURE SWITCH (WARNING SYSTEM) 5-38</p> <p>TILLER HANDLE 9-16</p> <p>TROUBLESHOOTING CHARTS 5-32</p> <p>WATER PUMP 5-19</p> <p>CLEANING & INSPECTION 5-31</p> <p>REMOVAL & INSTALLATION 5-19</p> <p> 2.5/3.3 HP (NON-SHIFTING) MODELS 5-19</p> <p> 2.5/3.3 HP (SHIFTING) & 4/5 HP MODELS 5-21</p> <p> 6/8 & 9.9/10/15 HP MODELS 5-22</p> <p> 20/20 JET/25 HP MODELS 5-24</p> <p> 30/40 HP 2-CYLINDER & 40/40 JET/50 HP 3-CYLINDER MODELS 5-25</p> <p> 55/60 HP 3-CYLINDER MODELS 5-26</p> <p> 65 JET-125 HP MODELS 5-27</p> <p> 135-200 HP (2.5L) V6 MODELS 5-28</p> <p> 200-250 HP (3.0L) V6 MODELS 5-29</p> <p>WATER SENSOR 3-62</p> <p> DESCRIPTION, OPERATION & TESTING 3-62</p> <p>WINTERIZATION 2-76</p> <p> PREPPING FOR STORAGE 2-76</p> <p> STORAGE CHECKLIST (PREPARING THE BOAT & MOTOR) 2-76</p> <p> WHERE TO STORE YOUR BOAT & MOTOR 2-76</p> <p>WIRE & CONNECTOR REPAIR 4-7</p>	<p>WIRING DIAGRAMS 4-64</p> <p>INDEX 4-64</p> <p>1-CYLINDER MOTORS 4-66</p> <p>2-CYLINDER MOTORS 4-67</p> <p>3-CYLINDER MOTORS (EXC. OPTIMAX) 4-73</p> <p>CARBURETED 4-CYLINDER & V6 MOTORS 4-83</p> <p>EFI V6 MOTORS 4-85</p> <p>OPTIMAX 3-CYLINDER & V6 MOTORS 4-100</p> <p>INSTRUMENT RIGGING - CARBURETED & 2001 EFI MODELS 4-172</p> <p>INSTRUMENT RIGGING - 2002 & LATER EFI MODELS 4-175</p> <p>INSTRUMENT RIGGING - OPTIMAX MODELS 4-187</p> <p>2-STROKE OIL 2-12</p> <p>OIL RECOMMENDATIONS 2-12</p> <p>FILLING 2-12</p> <p> FUEL:OIL RATIO 2-13</p> <p> PRE-MIX 2-13</p> <p> OIL INJECTION 2-13</p> <p>SPECIFICATIONS 1-28</p> <p>CONVERSION FACTORS 1-28</p> <p>TYPICAL TORQUE VALUES - METRIC BOLTS 1-29</p> <p>TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS 1-30</p>
---	--