



Presents

Repair Manuals from **SELOC.**

Contents of this manual:

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-16
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-27
		<hr/>	
2	MAINTENANCE & TUNE-UP	GENERAL INFORMATION	2-2
		LUBRICATION SERVICE	2-5
		ENGINE MAINTENANCE	2-11
		BOAT MAINTENANCE	2-35
		STORAGE (WHAT TO DO BEFORE AND AFTER)	2-79
		CLEARING A SUBMERGED MOTOR	2-83
		SPECIFICATIONS	2-84
<hr/>			
3	FUEL SYSTEM	FUEL SYSTEM BASICS	3-2
		FUEL TANK AND LINES	3-3
		CARBURETED FUEL SYSTEM	3-14
		ELECTRONIC FUEL INJECTION (EFI)	3-35
<hr/>			
4	IGNITION & ELECTRICAL SYSTEMS	UNDERSTANDING AND TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEMS	4-8
		CHARGING CIRCUIT	4-34
		STARTING CIRCUIT	4-52
		WARNING SYSTEM	4-75
		WIRING DIAGRAMS	4-80
		SPECIFICATIONS	4-127
<hr/>			
5	LUBRICATION & COOLING	OIL INJECTION SYSTEM	5-2
		COOLING SYSTEM	5-11
		WARNING SYSTEMS	5-14
		OVERHEAT WARNING SYSTEM	5-18

CONTENTS

POWERHEAD
POWERHEAD BREAK-IN
SPECIFICATIONS

6-2
6-94
6-95

POWERHEAD

6

GEARCASE
JET DRIVE GEARCASE

7-2
7-68

LOWER UNIT

7

TRIM/TILT SYSTEMS
MECHANICAL HYDRAULIC TILT ASSIST

8-2
8-25

TRIM & TILT SYSTEMS

8

TILLER HANDLE
MECHANICAL REMOTE CONTROLS
ELECTRONIC REMOTE CONTROLS
CONTROL CABLES

9-2
9-4
9-8
9-10

REMOTE CONTROLS

9

HAND REWIND STARTER

10-2

HAND REWIND STARTER

10

MASTER INDEX

10-9

MASTER INDEX

<p>AIR INTAKE SILENCER 3-90 REMOVAL & INSTALLATION 3-90</p> <p>ANODES (ZINCS) 2-31 INSPECTION 2-33 LOCATION 2-31 SERVICING 2-33</p> <p>BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK 4-2 OHM'S LAW 4-2</p> <p>BASIC OPERATING PRINCIPLES 1-13 2-STROKE MOTORS 1-13 4-STROKE MOTORS 1-15 COMBUSTION 1-16</p> <p>BATTERY CONSTRUCTION 4-49 LOCATION 4-50 MAINTENANCE 2-35 MARINE 4-49 RATINGS 4-49 SERVICE 4-50 STORAGE 2-36 TESTING 2-36</p> <p>BOAT MAINTENANCE 2-35 BATTERIES 2-35 FIBERGLASS HULL 2-37</p> <p>BOATING EQUIPMENT 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-10 FIRST AID KIT 1-10 OAR/PADDLE 1-10 TOOLS AND SPARE PARTS 1-12 VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 REQUIRED SAFETY EQUIPMENT 1-5</p> <p>CAMSHAFT POSITION (CMP) SENSOR 3-121 REMOVAL & INSTALLATION 3-123 TESTING 3-122</p> <p>CARBURETED FUEL SYSTEM 3-14 CARBURETOR 3-17 COLD START ENRICHMENT (CHOKE OR FUEL PRIMER) 3-33 DESCRIPTION & OPERATION 3-15 FUEL PUMP 3-29 SPECIFICATIONS 3-34 TROUBLESHOOTING 3-16</p> <p>CARBURETOR 3-17 2.5 HP MOTORS 3-18 4/5/6 HP MOTORS 3-19 9.9/15 HP AND 25 HP V2 MOTORS 3-22 25/30 HP (3-CYL) MOTORS 3-25</p> <p>CDI UNIT/POWER PACK 4-24 REMOVAL & INSTALLATION 4-26 TESTING 4-24</p> <p>CHARGE COIL (CARB ONLY) 4-15 REMOVAL & INSTALLATION 4-17 TESTING 4-16</p> <p>CHARGING CIRCUIT 4-34 BATTERY 4-49 ELECTRIC PARTS HOLDER 4-50 GENERAL INFORMATION 4-34 RECTIFIER 4-40 REGULATOR/RECTIFIER 4-41 STATOR/BATTERY CHARGE COIL 4-38 SYSTEM IDENTIFICATION 4-35 TROUBLESHOOTING 4-35</p> <p>CHARGING SYSTEM IDENTIFICATION 4-35</p> <p>CHEMICALS 1-17 CLEANERS 1-18 LUBRICANTS & PENETRANTS 1-17 SEALANTS 1-17</p> <p>CLEARING A SUBMERGED MOTOR 2-83</p>	<p>CLOSED THROTTLE POSITION (CTP) SWITCH 3-133 REMOVAL & INSTALLATION 3-133 TESTING 3-133</p> <p>COLD START ENRICHMENT 3-33</p> <p>COMPASS 1-10 COMPASS PRECAUTIONS 1-11 INSTALLATION 1-11 SELECTION 1-10</p> <p>COMPRESSION TESTS 2-39 COMPRESSION CHECK 2-39 OVERHAUL LEAKAGE CHECK 2-40</p> <p>CONTROL CABLES 9-10 RIGGING 9-10</p> <p>COOLING SYSTEM DESCRIPTION & OPERATION 5-16 FLOW DIAGRAMS & SCHEMATICS 5-29 FLUSHING 2-14 SPECIFICATIONS 5-34 TESTING COOLING SYSTEM EFFICIENCY 5-18 TESTING THE THERMOSTAT 5-19 THERMOSTAT 5-26 TROUBLESHOOTING THE COOLING SYSTEM 5-17 WATER PRESSURE RELIEF VALVE 5-29 WATER PUMP 5-19</p> <p>COOLING SYSTEM FLOW SCHEMATICS 5-29 2.5 HP 5-29 4/5/6 HP 5-29 9.9/15 HP 5-30 25 HP V2 5-30 25/30 HP (3-CYL) 5-30 40/50 HP 5-31 60/70 HP 5-32 90/115/140 HP 5-32 150/175 HP 5-33 200-300 HP 5-33</p> <p>CRANKSHAFT POSITION (CKP) SENSOR 3-124 REMOVAL & INSTALLATION 3-125 TESTING 3-124</p> <p>DIAGNOSTIC CHARTS 3-76 40-140 HP POWERHEADS 3-77 150-250 HP POWERHEADS 3-81 300 HP POWERHEADS 3-85</p> <p>DIAGNOSTIC TROUBLE CODES 40-140 HP EFI MOTORS 3-42 150/175 HP EFI MOTORS 3-43 200-250 HP EFI MOTORS 3-44 300 HP EFI MOTORS 3-45 READING & CLEARING CODES 3-41</p> <p>ECM PINOUTS & CIRCUIT OPERATING VALUES 3-47 40/50 HP MOTORS 3-47 60/70 HP MOTORS 3-52 90-140 HP MOTORS 3-55 150-175 HP MOTORS 3-58 200-250 HP MOTORS 3-63 300 HP MOTORS 3-67</p> <p>EFI SYSTEM RELAY 3-137</p> <p>ELECTRIC PARTS HOLDER 4-50 REMOVAL & INSTALLATION 4-50</p> <p>ELECTRICAL COMPONENTS 4-2 GROUND 4-3 LOAD 4-4 POWER SOURCE 4-2 PROTECTIVE DEVICES 4-3 SWITCHES & RELAYS 4-4 WIRING & HARNESSSES 4-4</p> <p>ELECTRICAL SYSTEM PRECAUTIONS 4-8</p> <p>ELECTRICAL TESTING 4-6 OPEN CIRCUITS 4-7 RESISTANCE 4-7 SHORT CIRCUITS 4-7 VOLTAGE 4-6 VOLTAGE DROP 4-6</p>
--	---

10-10 INDEX

ELECTRONIC FUEL INJECTION (EFI)	3-35	FASTENERS, MEASUREMENTS AND CONVERSIONS	1-26
AIR INTAKE SILENCER & FLAME ARRESTER	3-90	BOLTS, NUTS & OTHER THREADED RETAINERS	1-26
CKP SENSOR	3-124	STANDARD & METRIC MEASUREMENTS	1-27
CMP SENSOR	3-121	TORQUE	1-27
CTP SWITCH	3-133	FLAME ARRESTER	3-90
DESCRIPTION & OPERATION	3-35	REMOVAL & INSTALLATION	3-90
ECM	3-127	FLYWHEEL	6-2
EFI SYSTEM RELAY	3-137	REMOVAL & INSTALLATION	6-2
ELECTRONIC THROTTLE VALVE	3-135	FUEL	3-2
ENGINE DIAGNOSTIC CHARTS	3-76	OCTANE RATING	3-3
EVAPORATION PURGE VALVE	3-136	VAPOR PRESSURE	3-3
FUEL RAIL & INJECTORS	3-116	ALCOHOL-BLENDED FUELS	3-3
FUEL PRESSURE REGULATOR	3-136	HIGH ALTITUDE OPERATION	3-3
IAC VALVE	3-138	RECOMMENDATIONS	3-3
LOW PRESSURE ELECTRIC FUEL PUMP	3-110	CHECKING FOR STALE/CONTAMINATED FUEL	3-3
LOW PRESSURE MECHANICAL FUEL PUMP	3-107	FUEL & BREATHER LINES	2-27
MAP SENSOR	3-131	FUEL FILTER	2-23
MULTI-STAGE INDUCTION COMPONENTS	3-136	HIGH-PRESSURE	2-25
NEUTRAL (SAFETY) SWITCH	3-139	LOW-PRESSURE	2-23
OIL CHANGE REMINDER SYSTEM	3-90	FUEL LINES & FITTINGS	3-11
READING & CLEARING CODES	3-41	SERVICE	3-13
SELF DIAGNOSTIC SYSTEM	3-41	TESTING	3-11
SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS	3-47	FUEL PRESSURE REGULATOR	3-136
SHIFT POSITION SENSOR	3-141	FUEL PUMP	
SPECIFICATIONS	3-142	ELECTRIC (HIGH)	3-111
TEMPERATURE SENSORS (CT, EM AND IAT)	3-128	ELECTRIC (LOW)	3-110
THROTTLE BODY & INTAKE MANIFOLD	3-94	MECHANICAL	3-107
THROTTLE POSITION SENSOR (TPS)	3-133	FUEL RAIL & INJECTORS	3-116
TROUBLESHOOTING	3-35	EXPLODED VIEWS	3-120
VST & HIGH PRESSURE FUEL PUMP	3-111	REMOVAL & INSTALLATION	3-118
VVT OIL CONTROL VALVE	3-142	TESTING	3-117
ELECTRONIC REMOTE CONTROLS	9-8	FUEL SYSTEM BASICS	3-2
EXPLODED VIEWS	9-8	SERVICE CAUTIONS	3-2
INTRODUCTION	9-8	FUEL	3-2
THROTTLE LEVER POSITION SENSOR	9-8	FUEL SYSTEM PRESSURIZATION	3-4
ELECTRONIC THROTTLE VALVE	3-135	FUEL TANK	3-7
OPERATIONAL CHECKS	3-135	SERVICE	3-8
REMOVAL & INSTALLATION	3-135	FUEL TANK AND LINES	3-7
ELECTRONIC TOOLS	1-23	FUEL LINES AND FITTINGS	3-11
BATTERY CHARGERS	1-23	FUEL TANK	3-7
BATTERY TESTERS	1-23	GAS-CHARGED TILT ASSIST CYLINDER	8-25
GAUGES	1-24	REMOVAL & INSTALLATION	8-25
MULTI-METERS (DVOMS)	1-23	GEARCASE	7-2
ENGINE CONTROL MODULE (ECM)	3-127	DESCRIPTION & OPERATION	7-2
REMOVAL & INSTALLATION	3-127	2.5 HP MOTORS	7-6
ENGINE COVER LATCHES	2-5	4/5/6 HP MOTORS	7-9
RECOMMENDED LUBRICANT & LUBRICATION	2-5	9.9/15 HP MOTORS	7-13
ENGINE COVERS	2-11	25 HP V2 MOTORS	7-18
REMOVAL & INSTALLATION	2-11	25/30 HP & 40/50 HP (3-CYL) MOTORS	7-22
ENGINE IDENTIFICATION	2-2	60/70 HP MOTORS	7-32
ENGINE MAINTENANCE	2-11	90/115/140 HP MOTORS	7-41
ANODES (ZINCS)	2-31	150-250 HP MOTORS	7-51
COOLING SYSTEM	2-14	300 HP MOTORS	7-59
ENGINE COVERS	2-11	GEARCASE ASSEMBLY - 2.5 HP MOTORS	7-6
ENGINE OIL AND FILTER	2-16	ASSEMBLY	7-8
FUEL & BREATHER LINES	2-27	CHECKING & SHIMMING THE GEARS	7-7
FUEL FILTER	2-23	CLEANING & INSPECTION	7-7
GEARCASE (LOWER UNIT) OIL	2-21	DISASSEMBLY	7-7
JET DRIVE IMPELLER	2-30	PRESSURE TESTING	7-9
PROPELLER	2-27	REMOVAL & INSTALLATION	7-6
TIMING BELT	2-34	GEARCASE ASSEMBLY - 4/5/6 HP MOTORS	7-9
ENGINE MOUNT CLAMP SCREWS	2-5	ASSEMBLY	7-12
LUBRICATION	2-5	CHECKING & SHIMMING THE GEARS	7-11
RECOMMENDED LUBRICANT	2-5	CLEANING & INSPECTION	7-10
ENGINE OIL AND FILTER	2-16	CLUTCH ADJUSTMENT	7-13
CHANGE & FILTER SERVICE	2-19	DISASSEMBLY	7-9
CHECKING LEVEL	2-17	PRESSURE TESTING	7-13
RECOMMENDATIONS	2-16	REMOVAL & INSTALLATION	7-9
ENGINE TEMP SENSORS (CARB)	4-77	GEARCASE ASSEMBLY - 9.9/15 HP MOTORS	7-13
REMOVAL & INSTALLATION	4-78	ASSEMBLY	7-17
TESTING	4-77	CLEANING & INSPECTION	7-16
EVAPORATION PURGE VALVE (V6 ONLY)	3-136	CHECKING & SHIMMING THE GEARS	7-16
		DISASSEMBLY	7-14
		PRESSURE TESTING	7-18
		REMOVAL & INSTALLATION	7-13

<p>GEARCASE ASSEMBLY - 25 HP V2 MOTORS 7-18</p> <p>ASSEMBLY 7-21</p> <p>CHECKING & SHIMMING THE GEARS 7-20</p> <p>CLEANING & INSPECTION 7-20</p> <p>DISASSEMBLY 7-19</p> <p>PRESSURE TESTING 7-21</p> <p>REMOVAL & INSTALLATION 7-18</p> <p>GEARCASE ASSEMBLY - 25/30 HP & 40/50 HP (3-CYL) MOTORS 7-22</p> <p>ASSEMBLY 7-31</p> <p>CLEANING & INSPECTION 7-26</p> <p>DISASSEMBLY 7-23</p> <p>DRIVESHAFT BEARING HOUSING SERVICE 7-27</p> <p>GEARCASE SHIMMING 7-28</p> <p>PINION BEARING INSTALLATION 7-27</p> <p>PREPARING THE PROPELLER SHAFT FOR INSTALLATION 7-28</p> <p>PREPARING THE SHIFT ROD FOR INSTALLATION 7-27</p> <p>PROPELLER SHAFT BEARING HOUSING SERVICE 7-26</p> <p>PRESSURE TESTING 7-31</p> <p>REMOVAL & INSTALLATION 7-22</p> <p>GEARCASE ASSEMBLY - 60/70 HP MOTORS 7-32</p> <p>ASSEMBLY 7-40</p> <p>CLEANING & INSPECTION 7-36</p> <p>DISASSEMBLY 7-33</p> <p>DRIVESHAFT HOUSING SERVICE 7-37</p> <p>GEARCASE SHIMMING 7-38</p> <p>PINION BEARING INSTALLATION 7-37</p> <p>PREPARING THE PROPELLER SHAFT FOR INSTALLATION 7-38</p> <p>PRESSURE TESTING 7-41</p> <p>PROPELLER SHAFT BEARING HOUSING SERVICE 7-37</p> <p>REMOVAL & INSTALLATION 7-32</p> <p>SHIFT ROD INSTALLATION 7-38</p> <p>GEARCASE ASSEMBLY - 90/115/140 HP MOTORS 7-41</p> <p>ASSEMBLY 7-49</p> <p>CLEANING & INSPECTION 7-46</p> <p>DISASSEMBLY 7-43</p> <p>DRIVESHAFT HOUSING SERVICE 7-47</p> <p>DRIVESHAFT SHIMMING 7-47</p> <p>GEARCASE SHIMMING - COUNTER ROTATION 7-48</p> <p>GEARCASE SHIMMING - STANDARD ROTATION 7-47</p> <p>PINION BEARING INSTALLATION 7-46</p> <p>PREPARING THE PROPELLER SHAFT FOR INSTALLATION 7-49</p> <p>PRESSURE TESTING 7-51</p> <p>PROPELLER SHAFT BEARING HOUSING SERVICE 7-46</p> <p>REMOVAL & INSTALLATION 7-41</p> <p>GEARCASE ASSEMBLY - 150-250 HP MOTORS 7-51</p> <p>ASSEMBLY - COUNTER ROTATION 7-57</p> <p>ASSEMBLY - STANDARD ROTATION 7-55</p> <p>CLEANING & INSPECTION 7-54</p> <p>DISASSEMBLY 7-52</p> <p>DRIVESHAFT HOUSING SERVICE 7-55</p> <p>GEARCASE SHIMMING - COUNTER ROTATION 7-58</p> <p>GEARCASE SHIMMING - STANDARD ROTATION 7-56</p> <p>PRESSURE TESTING 7-59</p> <p>PROPELLER SHAFT BEARING HOUSING SERVICE 7-55</p> <p>REMOVAL & INSTALLATION 7-51</p> <p>GEARCASE ASSEMBLY - 300 HP MOTORS 7-59</p> <p>ASSEMBLY - COUNTER ROTATION 7-66</p> <p>ASSEMBLY - STANDARD ROTATION 7-64</p> <p>CLEANING & INSPECTION 7-63</p> <p>DISASSEMBLY 7-61</p> <p>DRIVESHAFT HOUSING SERVICE 7-64</p> <p>GEARCASE SHIMMING - COUNTER ROTATION 7-67</p> <p>GEARCASE SHIMMING - STANDARD ROTATION 7-65</p> <p>PRESSURE TESTING 7-68</p> <p>PROPELLER SHAFT BEARING HOUSING SERVICE 7-63</p> <p>REMOVAL & INSTALLATION 7-59</p> <p>GEARCASE OIL 2-21</p> <p>DRAINING & FILLING 2-22</p> <p>LEVEL & CONDITION 2-22</p> <p>OIL RECOMMENDATIONS 2-21</p>	<p>GENERAL INFORMATION 2-2</p> <p>BEFORE/AFTER EACH USE 2-3</p> <p>ENGINE IDENTIFICATION 2-2</p> <p>MAINTENANCE COVERAGE 2-2</p> <p>MAINTENANCE EQUALS SAFETY 2-2</p> <p>OUTBOARDS ON SAIL BOATS 2-2</p> <p>HAND REWIND STARTERS 10-2</p> <p>GENERAL INFORMATION 10-2</p> <p>INTRODUCTION 10-2</p> <p>MANUAL STARTER - 2.5 HP MOTORS 10-3</p> <p>MANUAL STARTER - 4/5/6 HP MOTORS 10-4</p> <p>MANUAL STARTER - 9.9-30 HP MOTORS 10-5</p> <p>HAND TOOLS 1-19</p> <p>BREAKER BARS 1-20</p> <p>HAMMERS 1-22</p> <p>PLIERS 1-21</p> <p>SCREWDRIVERS 1-21</p> <p>SOCKET SETS 1-19</p> <p>WRENCHES 1-21</p> <p>HOW TO USE THIS MANUAL 1-2</p> <p>AVOIDING COMMON MISTAKES 1-3</p> <p>AVOIDING TROUBLE 1-2</p> <p>CAN YOU DO IT? 1-2</p> <p>DIRECTIONS & LOCATIONS 1-2</p> <p>MAINTENANCE OR REPAIR? 1-2</p> <p>PROFESSIONAL HELP 1-3</p> <p>PURCHASING PARTS 1-3</p> <p>WHERE TO BEGIN 1-2</p> <p>IAC VALVE 3-138</p> <p>REMOVAL & INSTALLATION 3-139</p> <p>TESTING 3-138</p> <p>IGNITION COILS 4-26</p> <p>DESCRIPTION & OPERATION 4-26</p> <p>REMOVAL & INSTALLATION 4-31</p> <p>TESTING 4-26</p> <p>IGNITION SYSTEMS 4-8</p> <p>CDI UNIT/POWER PACK 4-24</p> <p>CHARGE COIL (CARB ONLY) 4-15</p> <p>DESCRIPTION & OPERATION 4-8</p> <p>IGNITION COILS 4-26</p> <p>SENSOR/TRIGGER COIL 4-21</p> <p>TROUBLESHOOTING 4-10</p> <p>INTAKE MANIFOLD (EFI) 3-94</p> <p>REMOVAL & INSTALLATION 3-94</p> <p>JET DRIVE ADJUSTMENTS 7-77</p> <p>GATE LINKAGE 7-77</p> <p>TRIM 7-78</p> <p>JET DRIVE ASSEMBLY 7-68</p> <p>ASSEMBLY 7-76</p> <p>CLEANING & INSPECTION 7-73</p> <p>DESCRIPTION & OPERATION 7-68</p> <p>DISASSEMBLY 7-72</p> <p>IMPELLER REMOVAL, SHIMMING & INSTALLATION 7-68</p> <p>JET DRIVE ASSEMBLY REMOVAL & INSTALLATION 7-70</p> <p>JET DRIVE BEARING 2-10</p> <p>GREASE REPLACEMENT 2-10</p> <p>LUBRICATION 2-10</p> <p>RECOMMENDED LUBRICANT 2-10</p> <p>JET DRIVE GEARCASE 7-68</p> <p>JET DRIVE ASSEMBLY 7-68</p> <p>JET DRIVE ADJUSTMENTS 7-77</p> <p>JET DRIVE IMPELLER 2-30</p> <p>CLEARANCE 2-30</p> <p>GENERAL INFORMATION 2-30</p> <p>INSPECTION 2-30</p> <p>LINKAGE, CABLES AND SHAFTS 2-5</p> <p>LUBRICATION 2-5</p> <p>RECOMMENDED LUBRICANT 2-5</p> <p>LOWER UNIT OIL 2-21</p> <p>DRAINING & FILLING 2-22</p> <p>LEVEL & CONDITION 2-22</p> <p>OIL RECOMMENDATIONS 2-21</p>
--	--

10-12 INDEX

LUBRICATION SERVICE	2-5	OIL PUMP	5-7
ENGINE COVER LATCHES	2-5	REMOVAL, OVERHAUL & INSTALLATION	5-7
ENGINE MOUNT CLAMP SCREWS	2-5	OIL PRESSURE SWITCH	4-78
JET DRIVE BEARING	2-10	REMOVAL & INSTALLATION	4-79
LINKAGE, CABLES AND SHAFTS	2-5	TESTING	4-79
POWER TRIM/TILT RESERVOIR	2-5	POWER TRIM/TILT RESERVOIR	2-5
PROPELLER SHAFT	2-10	FLUID LEVEL	2-5
STEERING/SWIVEL BRACKET	2-9	RECOMMENDED LUBRICANT	2-5
TILT BRACKET	2-9	POWERHEAD	6-2
LUBRICATION SYSTEM	5-2	CLEANING & INSPECTION	6-70
DESCRIPTION & OPERATION	5-2	FLYWHEEL	6-2
OIL COOLER	5-15	SERVICE	6-4
OIL FLOW DIAGRAMS		TIMING BELT/CHAIN	6-82
OIL PRESSURE	5-6	POWERHEAD BREAK-IN	6-94
OIL PRESSURE SWITCH & WARNING SYSTEM	5-15	POWERHEAD CLEANING & INSPECTION	6-70
OIL PUMP	5-7	CLEANING	6-71
MANUAL STARTER - 2.5 HP MOTORS	10-3	CYLINDER BLOCK INSPECTION	6-75
DESCRIPTION	10-3	CYLINDER HEAD INSPECTION	6-71
DISASSEMBLY & ASSEMBLY	10-3	POWERHEAD SERVICE	6-4
REMOVAL & INSTALLATION	10-3	2.5 HP MOTORS	6-5
MANUAL STARTER - 4/5/6 HP MOTORS	10-4	4/5/6 HP MOTORS	6-9
DESCRIPTION	10-4	9.9/15 HP MOTORS	6-13
DISASSEMBLY & ASSEMBLY	10-5	25 HP V2 MOTORS	6-19
REMOVAL & INSTALLATION	10-4	25/30 HP (3-CYL) MOTORS	6-24
MANUAL STARTER - 9.9-30 HP MOTORS	10-5	40/50 HP MOTORS	6-32
DESCRIPTION	10-5	60/70 HP MOTORS	6-39
DISASSEMBLY & ASSEMBLY	10-6	90/115/140 HP MOTORS	6-46
REMOVAL & INSTALLATION	10-5	150/175 HP MOTORS	6-54
MANUALLY TILTING THE ENGINE	8-3	200-300 HP MOTORS	6-62
MAP SENSOR	3-131	PRESSURIZING THE FUEL SYSTEM	3-7
REMOVAL & INSTALLATION	3-132	PROPELLER	2-27
TESTING	3-132	INSPECTION	2-27
MEASURING TOOLS	1-24	REMOVAL & INSTALLATION	2-27
DEPTH GAUGES	1-26	PROPELLER SHAFT	2-10
DIAL INDICATORS	1-25	LUBRICATION	2-10
MICROMETERS & CALIPERS	1-24	RECOMMENDED LUBRICANT	2-10
TELESCOPING GAUGES	1-26	RE-COMMISSIONING	2-82
MECHANICAL HYDRAULIC TILT ASSIST	8-25	REMOVAL FROM STORAGE	2-82
GAS-CHARGED TILT ASSIST CYLINDER	8-25	RECTIFIER	4-40
MECHANICAL REMOTE CONTROLS	9-4	REMOVAL & INSTALLATION	4-41
DESCRIPTION & OPERATION	9-4	TESTING	4-40
EXPLODED VIEWS	9-5	REGULATIONS FOR YOUR BOAT	1-4
INTRODUCTION	9-4	CAPACITY INFORMATION	1-4
TROUBLESHOOTING	9-4	CERTIFICATE OF COMPLIANCE	1-5
MULTI-STAGE INDUCTION COMPONENTS	3-136	DOCUMENTING OF VESSELS	1-4
NEUTRAL (SAFETY) SWITCH	3-139	HULL IDENTIFICATION NUMBER	1-4
REMOVAL & INSTALLATION	3-140	LENGTH OF BOATS	1-4
TESTING	3-139	NUMBERING OF VESSELS	1-4
OIL & FILTER	2-16	REGISTRATION OF BOATS	1-4
CHANGE & FILTER SERVICE	2-19	SALES AND TRANSFERS	1-4
CHECKING LEVEL	2-17	VENTILATION	1-5
RECOMMENDATIONS	2-16	VENTILATION SYSTEMS	1-5
OIL CHANGE REMINDER SYSTEM	3-90	REGULATOR/RECTIFIER	4-41
RESETTING	3-90	REMOVAL & INSTALLATION	4-46
OIL COOLER	5-15	TESTING	4-42
REMOVAL & INSTALLATION	5-15	RELIEVING PRESSURE (EFI)	3-5
OIL FLOW DIAGRAMS	5-2	40/50 HP EFI MODELS	3-5
2.5 HP	5-2	60/70 HP EFI MODELS	3-5
4/5/6 HP	5-2	90/115/140 HP EFI MODELS	3-6
9.9/15 HP	5-2	150/175 HP EFI MODELS	3-6
25 HP (V2)	5-3	200-300 HP EFI MODELS	3-6
25/30 HP (3-CYL)	5-3	REMOTE CONTROLS	
40/50 HP EFI	5-3	ELECTRONIC	9-8
60/70 HP EFI	5-4	MECHANICAL	9-4
90/115/140 HP EFI	5-5	REQUIRED SAFETY EQUIPMENT	1-5
150/175 HP EFI	5-5	FIRE EXTINGUISHERS	1-6
200/225/250 HP EFI	5-6	PERSONAL FLOTATION DEVICES	1-7
OIL PRESSURE	5-6	SOUND PRODUCING DEVICES	1-8
TESTING	5-6	TYPES OF FIRES	1-5
OIL PRESSURE SWITCH	4-78	VISUAL DISTRESS SIGNALS	1-8
REMOVAL & INSTALLATION	4-79	WARNING SYSTEM	1-7
TESTING	4-79	RIGGING	9-10
OIL PRESSURE SWITCH & WARNING SYSTEM	5-15	SAFETY IN SERVICE	1-12
		DO'S	1-12
		DON'TS	1-12

<p>SAFETY TOOLS 1-16</p> <p> EYE AND EAR PROTECTION 1-16</p> <p> WORK CLOTHES 1-17</p> <p> WORK GLOVES 1-16</p> <p>SELF DIAGNOSTIC SYSTEM 3-41</p> <p> DIAGNOSTIC TROUBLE CODES 3-42</p> <p> READING & CLEARING CODES 3-41</p> <p>SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS 3-47</p> <p> ECM PINOUTS & CIRCUIT OPERATING VALUES 3-47</p> <p> TESTING EFI COMPONENTS 3-47</p> <p>SENSOR/TRIGGER COIL 4-21</p> <p> REMOVAL & INSTALLATION 4-24</p> <p> TESTING 4-21</p> <p>SHIFT POSITION SENSOR 3-141</p> <p>SHOP EQUIPMENT 1-16</p> <p> SAFETY TOOLS 1-16</p> <p>SPARK PLUG WIRES 2-44</p> <p> REMOVAL & INSTALLATION 2-45</p> <p> TESTING 2-45</p> <p>SPARK PLUGS 2-40</p> <p> HEAT RANGE 2-41</p> <p> INSPECTION & GAPPING 2-43</p> <p> READING PLUGS 2-43</p> <p> REMOVAL & INSTALLATION 2-41</p> <p>SPECIFICATIONS</p> <p> BATTERY CHARGE COIL - CARB 4-127</p> <p> CAPACITIES 2-87</p> <p> CARBURETOR 3-34</p> <p> CONVERSION FACTORS 1-27</p> <p> COOLING SYSTEM 5-34</p> <p> IGNITION COMPONENTS & FUEL INJECTION SENSOR 4-128</p> <p> IGNITION TESTING - CARB 4-127</p> <p> EFI 3-142</p> <p> GENERAL ENGINE 2-84</p> <p> GENERAL ENGINE SYSTEM 2-85</p> <p> MAINTENANCE INTERVALS 2-86</p> <p> METRIC BOLTS - TYPICAL TORQUE VALUES 1-28</p> <p> TUNE-UP 2-88</p> <p> U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES 1-28</p> <p> VALVE CLEARANCE 2-90</p> <p> 2.5 HP (68cc) 1-CYL 6-95</p> <p> 4/5/6 HP (138cc) 1-CYL 6-97</p> <p> 9.9/15HP (302cc) 2-CYL 6-98</p> <p> 25 HP (538cc) V2 6-100</p> <p> 25/30 HP (597cc) 3-CYL 6-101</p> <p> 40/50 HP (815cc) 3-CYL 6-103</p> <p> 60/70 HP (1298cc) 4-CYL 6-105</p> <p> 90/115 HP (1950cc) 4-CYL 6-207</p> <p> 140 HP (2044cc) 4-CYL 6-109</p> <p> 150/175 HP (2867cc) 4-CYL 6-112</p> <p> 200/225/250 HP (3614cc) V6 6-114</p> <p> 300 HP (4028cc) V6 6-116</p> <p> STARTER MOTOR 4-63</p> <p> OVERHAUL 4-68</p> <p> REMOVAL & INSTALLATION 4-63</p> <p> TESTING 4-63</p> <p> STARTER MOTOR SOLENOID/RELAY SWITCH 4-73</p> <p> REMOVAL & INSTALLATION 4-74</p> <p> TESTING 4-74</p> <p>STARTING CIRCUIT 4-52</p> <p> DESCRIPTION & OPERATION 4-52</p> <p> STARTER MOTOR 4-63</p> <p> STARTER MOTOR SOLENOID/RELAY SWITCH 4-73</p> <p> TROUBLESHOOTING 4-52</p> <p>STATOR/BATTERY CHARGE COIL 4-38</p> <p> REMOVAL & INSTALLATION 4-39</p> <p> TESTING 4-38</p> <p>STEERING/SWIVEL BRACKET 2-9</p> <p> LUBRICATION 2-9</p> <p> RECOMMENDED LUBRICANT 2-9</p> <p>STORAGE 2-79</p> <p> RE-COMMISSIONING 2-82</p> <p> WINTERIZATION 2-79</p>	<p>TEMPERATURE SENSORS (CT, EM AND IAT) 3-128</p> <p> REMOVAL & INSTALLATION 3-130</p> <p> TESTING 3-129</p> <p>TEST EQUIPMENT 4-4</p> <p> JUMPER WIRES 4-5</p> <p> MULTI-METERS 4-5</p> <p> TEST LIGHTS 4-5</p> <p>THERMOSTAT 5-26</p> <p> REMOVAL & INSTALLATION 5-26</p> <p>THROTTLE BODY 3-94</p> <p> REMOVAL & INSTALLATION 3-94</p> <p>THROTTLE LEVER POSITION SENSOR 9-8</p> <p> TESTING 9-8</p> <p>THROTTLE POSITION SENSOR (TPS) 3-133</p> <p> REMOVAL & INSTALLATION 3-135</p> <p> TESTING 3-134</p> <p>TILLER HANDLE 9-2</p> <p> DESCRIPTION & OPERATION 9-2</p> <p> EXPLODED VIEWS 9-3</p> <p> TROUBLESHOOTING 9-2</p> <p>TILT BRACKET 2-9</p> <p> LUBRICATION 2-9</p> <p> RECOMMENDED LUBRICANT 2-9</p> <p>TIMING & SYNCHRONIZATION 2-46</p> <p> 2.5 HP MOTORS 2-47</p> <p> 4/5/6 HP (138CC) MOTORS 2-48</p> <p> 9.9/15 HP MOTORS 2-49</p> <p> 25 HP V2 MOTORS 2-52</p> <p> 25/30 HP (3-CYL) MOTORS 2-53</p> <p> 40/50 HP MOTORS 2-57</p> <p> 60/70 HP MOTORS 2-58</p> <p> 90/115/140 HP MOTORS 2-59</p> <p> 150/140 HP MOTORS 2-61</p> <p> 200/225/250 HP MOTORS 2-62</p> <p> 300 HP MOTORS 2-63</p> <p>TIMING BELT 2-34</p> <p> INSPECTOR 2-34</p> <p>TIMING BELT/CHAIN 6-82</p> <p> 9.9/15 HP MOTORS 6-83</p> <p> 25/30 HP (3-CYL) MOTORS 6-84</p> <p> 40/50 HP MOTORS 6-85</p> <p> 60/70 HP MOTORS 6-86</p> <p> 90/115/140 HP MOTORS 6-88</p> <p> 150/175 HP MOTORS 6-89</p> <p> 200-300 HP MOTORS 6-91</p> <p>TOOLS 1-18</p> <p> ELECTRONIC TOOLS 1-23</p> <p> HAND TOOLS 1-19</p> <p> MEASURING TOOLS 1-24</p> <p> OTHER COMMON TOOLS 1-22</p> <p> SPECIAL TOOLS 1-23</p> <p>TRIM/TILT SYSTEM DIAGNOSIS 8-4</p> <p> CHECKING THE PTT MOTOR 8-10</p> <p> CHECKING THE PTT SWITCH 8-10</p> <p> CHECKING THE RELAYS 8-8</p> <p> CHECKING THE TILT LIMIT SWITCH 8-10</p> <p> WIRING DIAGRAMS & POWER SUPPLY 8-5</p> <p>TRIM/TILT SYSTEMS 8-2</p> <p> DESCRIPTION & OPERATION 8-3</p> <p> INTRODUCTION 8-2</p> <p> TROUBLESHOOTING 8-4</p> <p> 25/30 HP MOTORS 8-11</p> <p> 40/50 HP MOTORS 8-13</p> <p> 60/70 HP MOTORS THRU 2000 8-16</p> <p> 90/115 HP MOTORS & 2001 AND LATER 60/70 HP MOTORS 8-18</p> <p> 140-175 HP MOTORS 8-20</p> <p> 200-300 HP MOTORS 8-22</p>
---	---

10-14 INDEX

TROUBLESHOOTING

BASIC OPERATING PRINCIPLES	1-13
CARBURETOR	3-16
CHARGING CIRCUIT	4-35
COOLING SYSTEM	5-17
EFI	3-35
ELECTRICAL SYSTEMS	4-6
ELECTRONIC REMOTE CONTROLS	9-8
IGNITION SYSTEM	4-10
JUMPING OUT OF GEAR	7-4
LOWER UNIT LOCKED	7-4
MECHANICAL REMOTE CONTROLS	9-4
PROPELLER SHAFT SEAL REPLACEMENT	7-4
SLIPPAGE IN THE LOWER UNIT	7-3
STARTING CIRCUIT	4-52
TILLER HANDLE	9-2
TRIM & TILT	8-4
UNIT FAILS TO SHIFT	7-4
WATER IN THE LOWER UNIT	7-3

TUNE-UP	2-38
COMPRESSION TESTS	2-39
ELECTRONIC IGNITION SYSTEMS	2-46
INTRODUCTION TO TUNE-UPS	2-38
SPARK PLUG WIRES	2-44
SPARK PLUGS	2-40
TUNE-UP SEQUENCE	2-38

TUNE-UP SEQUENCE	2-38
------------------	------

UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS . 4-1

BASIC ELECTRICAL THEORY	4-2
ELECTRICAL COMPONENTS	4-2
ELECTRICAL TESTING	4-6
PRECAUTIONS	4-8
TEST EQUIPMENT	4-4
TROUBLESHOOTING	4-6
WIRE & CONNECTOR REPAIR	4-8

VALVE CLEARANCE . 2-64

VALVE LASH	2-64
VALVE LASH ADJUSTMENT	2-64
2.5-6 HP	2-64
9.9/15 HP	2-65
25 HP V2	2-66
25/30 HP (3-CYL)	2-67
40/50 HP	2-67
60/70 HP	2-70
90/115/140 HP	2-71
150/175 HP	2-73
200-300 HP V6	2-76

VAPOR SEPARATOR TANK (VST)	3-111
OVERHAUL	3-115
REMOVAL & INSTALLATION	3-113
TESTING	3-111

VVT OIL CONTROL VALVE	3-142
DESCRIPTION & OPERATION	3-142
REMOVAL & INSTALLATION	3-142
TESTING	3-142

WARNING BUZZER	4-80
TESTING	4-80

WARNING SYSTEM . 4-75

DESCRIPTION & OPERATION	4-75
ENGINE TEMP SENSORS (CARB)	4-77
OIL PRESSURE SWITCH	4-78
WARNING BUZZER	4-80

WATER PRESSURE RELIEF VALVE	5-29
-----------------------------	------

WATER PUMP	5-19
INSPECTION & OVERHAUL	5-25
REMOVAL & INSTALLATION	5-19

WINTERIZATION	2-79
PREPPING FOR STORAGE	2-80

WIRE & CONNECTOR REPAIR	4-8
-------------------------	-----

WIRING DIAGRAMS

INDEX	4-80
1-CYLINDER	4-81
2-CYLINDER	4-82
3-CYLINDER	4-89
4-CYLINDER	4-102
6-CYLINDER	4-113

ZINCS	2-31
INSPECTION	2-33
LOCATION	2-31
SERVICING	2-33

2.5 HP POWERHEAD	6-5
CYLINDER BLOCK OVERHAUL	6-7
CYLINDER HEAD OVERHAUL	6-7
DISASSEMBLY & ASSEMBLY	6-6
REMOVAL & INSTALLATION	6-5

4/5/6 HP POWERHEAD	6-9
CYLINDER BLOCK OVERHAUL	6-12
CYLINDER HEAD OVERHAUL	6-11
DISASSEMBLY & ASSEMBLY	6-10
REMOVAL & INSTALLATION	6-9

9.9/15 HP POWERHEAD	6-13
CYLINDER BLOCK OVERHAUL	6-16
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-14
REMOVAL & INSTALLATION	6-13

25 HP V2 POWERHEAD	6-19
CYLINDER BLOCK OVERHAUL	6-22
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-20
REMOVAL & INSTALLATION	6-19

25/30 HP (3-CYL) POWERHEAD	6-24
REMOVAL & INSTALLATION	6-24
CYLINDER BLOCK OVERHAUL	6-28
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-26

40/50 HP POWERHEAD	6-32
CYLINDER BLOCK OVERHAUL	6-35
CYLINDER HEAD OVERHAUL	6-35
DISASSEMBLY & ASSEMBLY	6-34
REMOVAL & INSTALLATION	6-32

60/70 HP POWERHEAD	6-39
CYLINDER BLOCK OVERHAUL	6-43
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-42
REMOVAL & INSTALLATION	6-39

90/115/140 HP POWERHEAD	6-46
CYLINDER BLOCK OVERHAUL	6-50
CYLINDER HEAD OVERHAUL	6-50
DISASSEMBLY & ASSEMBLY	6-48
REMOVAL & INSTALLATION	6-46

150/175 HP POWERHEAD	6-54
CYLINDER BLOCK OVERHAUL	6-59
CYLINDER HEAD OVERHAUL	6-58
DISASSEMBLY & ASSEMBLY	6-56
REMOVAL & INSTALLATION	6-54

200-300 HP POWERHEAD	6-62
CYLINDER BLOCK OVERHAUL	6-67
CYLINDER HEAD OVERHAUL	6-65
DISASSEMBLY & ASSEMBLY	6-64
REMOVAL & INSTALLATION	6-62