



Presents

# Repair Manuals from **SELOC.**

Contents of this manual:

<b>1</b>	<b>GENERAL INFORMATION, SAFETY AND TOOLS</b>	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-13
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-17
		TOOLS	1-19
		FASTENERS, MEASUREMENT, AND CONVERSIONS SPECIFICATIONS	1-26 1-28
<b>2</b>	<b>MAINTENANCE AND TUNE-UP</b>	GENERAL INFORMATION	2-2
		ENGINE MAINTENANCE	2-11
		BOAT MAINTENANCE	2-31
		TUNE-UP	2-34
		TIMING AND SYNCHRONIZATION	2-47
		VALVE CLEARANCE	2-74
		CLEARING A SUBMERGED MOTOR	2-80
		SPECIFICATIONS	2-82
<b>3</b>	<b>FUEL SYSTEM</b>	FUEL AND COMBUSTION BASICS	3-2
		FUEL TANK AND LINES	3-5
		CARBURETED FUEL SYSTEM	3-10
		CARBURETOR SERVICE	3-16
		FUEL PUMP SERVICE	3-75
		REED VALVES (2-STROKE MOTORS)	3-87
		SPECIFICATIONS	3-88
<b>4</b>	<b>IGNITION AND ELECTRICAL</b>	UNDERSTANDING AND TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEM	4-8
		YAMAHA MICROCOMPUTER IGNITION SYSTEM (YMIS)	4-42
		CHARGING CIRCUIT	4-52
		CRANKING CIRCUIT	4-59
		SWITCHES/SOLENOIDS	4-69
		TACHOMETERS	4-69
		WIRING DIAGRAMS	4-94
		SPECIFICATIONS	4-76
<b>5</b>	<b>LUBRICATION AND COOLING</b>	OIL INJECTION SYSTEM (2-STROKE)	5-2
		OIL INJECTION SYSTEM (INLINE)	5-10
		OIL INJECTION SYSTEM (V4/V6)	5-22
		OIL INJECTION WARNING SYSTEM	5-31
		LUBRICATION SYSTEM (4-STROKE)	5-38
		COOLING SYSTEM	5-41
		SPECIFICATIONS	5-48

# CONTENTS

POWERHEAD MECHANICAL 6-2  
POWERHEAD REFINISHING 6-94  
POWERHEAD BREAK-IN 6-110  
SPECIFICATIONS 6-111

**POWERHEAD**

**6**

LOWER UNIT 7-2  
LOWER UNIT REMOVAL 7-6  
GEARCASE OVERHAUL 7-10  
JET DRIVE 7-57

**LOWER UNIT**

**7**

HYDRO TILT LOCK SYSTEM 8-2  
TRIM & TILT SYSTEMS 8-2  
POWER TILT SYSTEM 8-3  
POWER TRIM/TILT SYSTEM 8-7

**TRIM AND TILT**

**8**

REMOTE CONTROLS 9-2

**REMOTE CONTROL**

**9**

HAND REWIND STARTER 10-2

**HAND REWIND STARTER**

**10**

MASTER INDEX 10-17

**MASTER INDEX**

ANCHORS .....	1-10	CHOKE SWITCH .....	4-72
ANODES (ZINCS) .....	2-28	CHOKE SWITCH .....	9-2
INSPECTION .....	2-28	<b>CLEARING A SUBMERGED MOTOR</b> .....	<b>2-80</b>
SERVICING .....	2-28	COMBUSTION .....	3-5
BASIC ELECTRICAL THEORY .....	4-2	COMPASS .....	1-11
BATTERY .....	2-31	COMPRESSION TESTING .....	2-35
CHARGERS .....	4-58	CHECK .....	2-35
CONSTRUCTION .....	4-55	LOW COMPRESSION .....	2-36
LOCATION .....	4-57	CONNECTING RODS .....	6-99
MAINTENANCE .....	2-31	CONTROL BOX ASSEMBLY .....	9-4
MARINE .....	4-55	CONTROL UNIT (YMIS) .....	4-46
RATINGS .....	4-57	<b>COOLING SYSTEM</b> .....	
REPLACING CABLES .....	4-58	DESCRIPTION AND OPERATION .....	5-41
SAFETY PRECAUTIONS .....	4-58	FLUSHING .....	2-11
STORAGE .....	2-33	FLUSHING (JET DRIVES) .....	2-13
TESTING .....	2-32	THERMOSTAT .....	5-47
BAILING DEVICES .....	1-10	TROUBLESHOOTING .....	5-43
BASIC OPERATING PRINCIPLES .....	1-13	WATER PUMP .....	5-45
BLEED SYSTEM - 2-STROKE .....	6-96	COURTESY MARINE EXAMINATIONS .....	1-10
<b>BOAT MAINTENANCE</b> .....	<b>2-31</b>	<b>CRANKING CIRCUIT</b> .....	<b>4-59</b>
BATTERIES .....	2-31	CRANKING MOTOR .....	4-62
FIBERGLASS HULL .....	2-33	CRANKING MOTOR CIRCUIT .....	4-59
INTERIOR .....	2-33	CRANKING MOTOR RELAY .....	4-61
<b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)</b> .....	<b>1-10</b>	DESCRIPTION AND OPERATION .....	4-59
ANCHORS .....	1-10	CRANKING MOTOR .....	4-62
BAILING DEVICES .....	1-10	CRANKING MOTOR RELAY .....	4-61
COMPASS .....	1-11	CRANKSHAFT .....	6-97
FIRST AID KIT .....	1-10	CRANKSHAFT POSITION SENSOR .....	4-48
OAR/PADDLE (SECOND MEANS OF PROPULSION) .....	1-10	CYLINDER BLOCK .....	6-102
TOOLS AND SPARE PARTS .....	1-12	CYLINDER HEAD COMPONENTS - 4-STROKE .....	6-105
VHF-FM RADIO .....	1-10	ELECTRICAL COMPONENTS .....	4-2
<b>BOATING SAFETY</b> .....	<b>1-4</b>	ELECTRICAL SYSTEM CHECKS .....	2-44
COURTESY MARINE EXAMINATIONS .....	1-10	BATTERY .....	2-44
REGULATIONS FOR YOUR BOAT .....	1-4	STARTER MOTOR .....	2-44
REQUIRED SAFETY EQUIPMENT .....	1-6	WIRING HARNESS .....	2-44
BREAKER POINT IGNITION SYSTEM .....	2-41	ELECTRICAL TESTING .....	4-6
ADJUSTMENT .....	2-42	ELECTRONIC TOOLS .....	1-23
CLEANING & INSPECTION .....	4-35	ENGINE COVERS .....	2-11
FLYWHEEL INSTALLATION .....	4-35	ENGINE IDENTIFICATION .....	2-2
FLYWHEEL REMOVAL .....	4-33	ENGINE MODEL & SERIAL NUMBERS .....	2-3
IGNITION COMPONENT SERVICING .....	4-33	<b>ENGINE MAINTENANCE</b> .....	<b>2-11</b>
POINT GAP ADJUSTMENT .....	4-35	ANODES (ZINCS) .....	2-28
POINT GAP CHECK .....	4-32	COOLING SYSTEM .....	2-11
REPLACEMENT .....	2-42	ENGINE COVERS .....	2-11
TESTING .....	2-42	ENGINE OIL (2-STROKE) .....	2-13
<b>CARBURETED FUEL SYSTEM</b> .....	<b>3-10</b>	ENGINE OIL AND FILTER (4-STROKE) .....	2-15
DESCRIPTION AND OPERATION .....	3-10	FUEL FILTER .....	2-18
TROUBLESHOOTING .....	3-13	JET DRIVE IMPELLER .....	2-27
CARBURETOR IDENTIFICATION .....	3-16	PROPELLER .....	2-20
<b>CARBURETOR SERVICE</b> .....	<b>3-16</b>	TIMING BELT .....	2-30
IDENTIFICATION .....	3-16	ENGINE OIL (2-STROKE) .....	2-13
2 HP CARBS .....	3-16	CHECKING .....	2-15
3 HP CARBS .....	3-20	FILLING .....	2-14
4/5 HP CARBS .....	3-24	RECOMMENDATIONS .....	2-13
9.9 HP 4-STROKE CARBS .....	3-28	ENGINE OIL & FILTER (4-STROKE) .....	2-15
6 HP, 8 HP, 9.9 HP (2-STROKE) AND 15 HP CARBS .....	3-37	CHECKING LEVEL .....	2-15
20-55 HP (2-CYL) CARBS .....	3-42	OIL CHANGE & FILTER .....	2-16
3-CYLINDER CARBS .....	3-47	RECOMMENDATIONS 21-5 .....	
45/50 HP (4 CYL, 4-STROKE) CARBS .....	3-60	EXHAUST COVER .....	6-96
V4 & V6 CARBS .....	3-65	<b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b> .....	<b>1-26</b>
CDI IGNITION SYSTEMS .....	2-43	BOLTS, NUTS & OTHER THREADED RETAINERS .....	1-26
DESCRIPTION & OPERATION .....	4-9	STANDARD & METRIC MEASUREMENTS .....	1-27
INSPECTION .....	2-43	TORQUE .....	1-27
INSTALLATION .....	4-39	FIBERGLASS HULL .....	2-33
REMOVAL .....	4-36	FIRST AID KIT .....	1-10
CDI UNIT AND IGNITION COILS .....	4-36	FLYWHEEL AND STATOR PLATE .....	4-22
INSTALLATION .....	4-39	<b>FUEL AND COMBUSTION BASICS</b> .....	<b>3-2</b>
REMOVAL .....	4-36	COMBUSTION .....	3-5
<b>CHARGING CIRCUIT</b> .....	<b>4-52</b>	FUEL .....	3-2
76° V6 MOTOR CHARGING SYSTEM .....	4-54	FUEL SYSTEM PRESSURIZATION .....	3-4
BATTERY .....	4-55	FUEL SYSTEM SERVICE CAUTIONS .....	3-2
SINGLE-PHASE CHARGING SYSTEM .....	4-52	FUEL FILTER .....	2-18
THREE-PHASE CHARGING SYSTEM .....	4-52	SERVICE .....	2-19
CHEMICALS .....	1-17	FUEL LINES AND FITTINGS .....	3-7
CHOKE SOLENOID .....	4-73	<b>FUEL PUMP SERVICE</b> .....	<b>3-75</b>

# 10-18 MASTER INDEX

FUEL PUMPS.....	3-75	LUBRICATING THE MOTOR.....	2-7
1-2-CYLINDER (2-STROKE).....	3-76	POWER TRIM/TILT RESERVOIR.....	2-10
3-CYLINDER, V4 & V6.....	3-81	<b>LUBRICATION SYSTEM (4-STROKE).....</b>	<b>5-38</b>
4-STROKE.....	3-78	DESCRIPTION AND OPERATION.....	5-38
FUEL PUMPS.....		OIL PRESSURE.....	5-38
1-2-CYLINDER (2-STROKE).....	3-76	OIL PUMP.....	5-40
3-CYLINDER, V4 & V6.....	3-81	MAIN KEY SWITCH.....	4-71
4-STROKE.....	3-78	MAIN OIL TANK (V4/V6).....	5-22
FUEL SYSTEM CHECKS.....	2-44	MEASURING TOOLS.....	1-25
FUEL SYSTEM PRESSURIZATION.....	3-4	NEUTRAL SAFETY SWITCH.....	4-73
FUEL TANK.....	3-5	NEUTRAL SAFETY SWITCH.....	9-2
<b>FUEL TANK AND LINES.....</b>	<b>3-5</b>	<b>OIL INJECTION SYSTEM (INLINE).....</b>	<b>5-10</b>
FUEL LINES AND FITTINGS.....	3-7	OIL INJECTION SYSTEM.....	5-10
FUEL TANK.....	3-5	OIL PUMP.....	5-20
GEARCASE (LOWER UNIT) OIL.....	2-7	<b>OIL INJECTION SYSTEM (V4/V6).....</b>	<b>5-22</b>
<b>GEARCASE OVERHAUL.....</b>	<b>7-10</b>	INJECTION CONTROL LINK ROD.....	5-30
1-2 CYLINDER W/O REVERSE GEAR.....	7-10	MAIN OIL TANK.....	5-22
1-2 CYLINDER W/REVERSE GEAR.....	7-16	OIL PUMP.....	5-25
3-4 CYLINDER INLINE, V4 AND V6.....	7-34	REMOTE OIL TANK.....	5-24
<b>HAND REWIND STARTER.....</b>	<b>10-2</b>	<b>OIL INJECTION SYSTEM (2-STROKE).....</b>	<b>5-2</b>
INTRODUCTION.....	10-2	PRECISION BLEND SYSTEM (PBS).....	5-2
2 HP 2-STROKE POWERHEADS.....	10-2	<b>OIL INJECTION WARNING SYSTEM.....</b>	<b>5-31</b>
ALL OTHER 2-STROKE POWERHEADS (EXCEPT 2 HP).....	10-6	DESCRIPTION & OPERATION.....	5-31
9.9 HP 4-STROKE POWERHEADS.....	10-10	OIL INJECTION WIRING.....	5-37
HAND TOOLS.....	1-19	OIL PUMP.....	
<b>HOW TO USE THIS MANUAL.....</b>	<b>1-2</b>	INLINE.....	5-20
AVOIDING THE MOST COMMON MISTAKES.....	1-3	V4/V6.....	5-25
AVOIDING TROUBLE.....	1-2	4-STROKE.....	5-40
CAN YOU DO IT?.....	1-2	PISTONS.....	6-100
DIRECTIONS AND LOCATIONS.....	1-2	<b>POWER TILT SYSTEM.....</b>	<b>8-3</b>
MAINTENANCE OR REPAIR?.....	1-2	DESCRIPTION & OPERATION.....	8-3
PROFESSIONAL HELP.....	1-3	MAINTENANCE.....	8-4
PURCHASING PARTS.....	1-3	TROUBLESHOOTING.....	8-5
WHERE TO BEGIN.....	1-2	SERVICING.....	8-7
<b>HYDRO TILT LOCK SYSTEM.....</b>	<b>8-2</b>	TILT MOTOR.....	8-7
DESCRIPTION & OPERATION.....	8-2	TILT RELAY.....	8-6
SERVICING.....	8-2	TILT SWITCH.....	8-6
IDLE SPEED.....	2-46	TROUBLESHOOTING.....	8-5
ADJUSTMENT.....	2-46	POWER TRIM/TILT RESERVOIR.....	2-10
<b>IGNITION SYSTEM.....</b>	<b>4-8</b>	FLUID LEVEL/CONDITION.....	2-10
BREAKER POINT IGNITION COMPONENTS.....	4-32	RECOMMENDED LUBRICANT.....	2-10
CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM.....	4-9	POWER TRIM/TILT SWITCH.....	4-70
CDI UNIT AND IGNITION COILS.....	4-36	<b>POWER TRIM/TILT SYSTEM.....</b>	<b>8-7</b>
CONTACT BREAKER POINTS IGNITION (MAGNETO IGNITION).....	4-8	DESCRIPTION & OPERATION.....	8-7
FLYWHEEL AND STATOR PLATE.....	4-22	MAINTENANCE.....	8-9
TROUBLESHOOTING - ALL SYSTEMS.....	4-12	POWER TRIM/TILT SWITCH.....	8-11
INJECTION CONTROL LINK ROD.....	5-30	SERVICING.....	8-12
INTERIOR.....	2-33	TRIM SENSOR.....	8-12
<b>JET DRIVE.....</b>	<b>7-57</b>	TRIM/TILT MOTOR.....	8-12
DESCRIPTION & OPERATION.....	7-57	TRIM/TILT RELAY.....	8-10
JET DRIVE ASSEMBLY.....	7-58	TROUBLESHOOTING.....	8-9
MODEL IDENTIFICATION & SERIAL NUMBERS.....	7-57	<b>POWERHEAD BREAK-IN.....</b>	<b>6-110</b>
JET DRIVE ASSEMBLY.....	7-58	BREAK-IN PROCEDURES.....	6-110
JET DRIVE BEARING.....	2-9	<b>POWERHEAD MECHANICAL.....</b>	<b>6-2</b>
JET DRIVE IMPELLER.....	2-27	GENERAL INFORMATION.....	6-2
KILL SWITCH.....	4-72	2/3 HP 1-CYL.....	6-3
KILL SWITCH.....	9-4	4/5HP 1-CYL.....	6-10
KNOCK SENSOR.....	4-49	9.9 HP 2-CYL.....	4-
<b>LOWER UNIT.....</b>	<b>7-2</b>	STROKE.....	6-16
EXHAUST GASES.....	7-4	6 HP AND LARGER, 2-CYL.....	6-34
GENERAL INFORMATION.....	7-2	3-CYLINDER.....	6-50
SHIFTING PRINCIPLES.....	7-2	45/50 HP, 4-CYL., 4-STROKE.....	6-65
TROUBLESHOOTING.....	7-4	V4 AND V6.....	6-77
LOWER UNIT - NO REVERSE GEAR.....	7-6	<b>POWERHEAD REFINISHING.....</b>	<b>6-94</b>
REMOVAL & INSTALLATION.....	7-6	BLEED SYSTEM - 2-STROKE.....	6-96
LOWER UNIT - WITH REVERSE GEAR.....	7-7	CLEANING & INSPECTION.....	6-94
REMOVAL & INSTALLATION.....	7-7	CONNECTING RODS.....	6-99
<b>LOWER UNIT REMOVAL.....</b>	<b>7-6</b>	CRANKSHAFT.....	6-97
LOWER UNIT - NO REVERSE GEAR.....	7-6	CYLINDER BLOCK.....	6-102
LOWER UNIT - WITH REVERSE GEAR.....	7-7	CYLINDER HEAD COMPONENTS - 4-STROKE.....	6-105
<b>LUBRICATION.....</b>	<b>2-6</b>	EXHAUST COVER.....	6-96
GEARCASE (LOWER UNIT) OIL.....	2-7	GENERAL INFORMATION.....	6-94
JET DRIVE BEARING.....	2-9	PISTONS.....	6-100
LUBRICANTS.....	2-6	REED BLOCK - 2-STROKE.....	6-96
LUBRICATION INSIDE THE BOAT.....	2-7	PRECISION BLEND SYSTEM (PBS).....	5-2

PROPELLER .....	2-20	THERMO-SENSOR & THERMO-SWITCH.....	4-50
GENERAL INFORMATION.....	2-21	THERMO-SWITCH.....	4-69
INSPECTION .....	2-24	THREE-PHASE CHARGING SYSTEM .....	4-52
REMOVAL & INSTALLATION.....	2-24	THROTTLE POSITION SENSOR .....	4-47
RE-COMMISSIONING .....	2-79	TILT MOTOR.....	8-7
REED BLOCK - 2-STROKE .....	6-96	TILT RELAY .....	8-6
<b>REED VALVES (2-STROKE MOTORS).....</b>	<b>3-87</b>	TILT SWITCH .....	8-6
REED VALVE BLOCK .....	3-87	TIMING AND SYNCHRONIZATION .....	2-47
REGULATIONS FOR YOUR BOAT .....	1-4	GENERAL INFORMATION.....	2-47
REMOTE CONTROL BOX .....	9-2	TIMING.....	2-47
<b>REMOTE CONTROLS .....</b>	<b>9-2</b>	PREPPING THE MOTOR .....	2-47
CHOKE SWITCH .....	9-2	SYNCHRONIZATION .....	2-47
CONTROL BOX ASSEMBLY .....	9-4	TIMING .....	2-47
KILL SWITCH.....	9-4	2 HP .....	2-48
NEUTRAL SAFETY SWITCH.....	9-2	3 HP .....	2-49
REMOTE CONTROL BOX .....	9-2	4/5 HP (83/103CC).....	2-49
START BUTTON .....	9-3	6/8 HP .....	2-50
WARNING BUZZER/HORN .....	9-2	9.9 HP 4-STROKE .....	2-52
REMOTE OIL TANK (V4/V6) .....	5-24	9.9/15 HP 2-STROKE.....	2-53
REQUIRED SAFETY EQUIPMENT .....	1-6	20/25 HP (395CC) .....	2-55
<b>SAFETY IN SERVICE .....</b>	<b>1-13</b>	20/25 HP (430CC) .....	2-57
SAFETY TOOLS .....	1-17	25/30 HP (496CC 2-CYLINDER).....	2-57
SELF-DIAGNOSTIC CODES .....	4-44	40 HP (2-CYLINDER).....	2-58
<b>SHOP EQUIPMENT .....</b>	<b>1-17</b>	48/55 HP (2-CYLINDER) .....	2-59
SINGLE-PHASE CHARGING SYSTEM.....	4-52	25/30 HP (496CC).....	3-
SPARK PLUG WIRES .....	2-41	CYL.).....	2-61
SPARK PLUGS.....	2-37	28J-50 HP (698CC) .....	2-63
SPECIAL TOOLS .....	1-23	50-70 HP (849CC) & 65J-90 HP (1140CC).....	2-63
<b>SPECIFICATIONS .....</b>	<b>1-28</b>	45/50 HP (4 CYL., 4-STROKE) .....	2-66
YMIS SENSOR CHARACTERISTICS .....	4-45	V4/V6 MOTORS WITH CDI .....	2-70
CAPACITIES.....	2-87	V4/V6 MOTORS WITH YMIS.....	2-73
CARBURETOR SET-UP.....	3-88	TIMING BELT .....	2-30
CDI UNIT TESTING CHART .....	4-84	INSPECTOR.....	2-30
CHARGING SYSTEM .....	4-81	<b>TOOLS .....</b>	<b>1-19</b>
CONVERSION FACTORS .....	1-28	ELECTRONIC TOOLS .....	1-23
COOLING SYSTEM .....	5-38	HAND TOOLS .....	1-19
CRANKSHAFT POSITION SENSOR.....	4-83	MEASURING TOOLS .....	1-25
ENGINE .....	6-111	OTHER COMMON TOOLS .....	1-22
ENGINE TORQUE .....	6-130	SPECIAL TOOLS .....	1-23
FUEL:OIL RATIO .....	2-88	TOOLS AND SPARE PARTS .....	1-12
GENERAL ENGINE .....	2-82	TRIM SENSOR.....	8-12
GENERAL ENGINE SYSTEM .....	2-84	<b>TRIM &amp; TILT SYSTEMS.....</b>	<b>8-2</b>
IGNITION SYSTEM .....	4-76	INTRODUCTION .....	8-2
LUBRICATION SERVICES.....	2-86	TRIM/TILT MOTOR.....	4-71
MAINTENANCE INTERVALS.....	2-85	TRIM/TILT MOTOR.....	8-12
METRIC BOLTS - TYPICAL TORQUE VALUES .....	1-28	TRIM/TILT RELAY.....	4-70
MODEL ID DECODER .....	2-86	TRIM/TILT RELAY.....	8-10
SELF-DIAGNOSTIC CODES.....	4-44	<b>TROUBLESHOOTING .....</b>	<b>1-13</b>
SPARK PLUG DIAGNOSIS .....	2-92	BASIC OPERATING PRINCIPLES .....	1-13
TUNE-UP .....	2-89	COMBUSTION RELATED PISTON FAILURES.....	3-16
U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES .....	1-28	COMMON PROBLEMS .....	3-14
YMIS SENSOR CHARACTERISTICS .....	4-45	COOLING SYSTEM .....	5-44
START BUTTON.....	4-75	CRANKING MOTOR CIRCUIT.....	4-59
START BUTTON.....	9-3	ELECTRICAL SYSTEMS.....	4-6
<b>STORAGE .....</b>	<b>2-77</b>	LOGICAL .....	3-14
RE-COMMISSIONING .....	2-79	LOWER UNIT .....	7-4
WINTERIZATION .....	2-77	POWER TILT .....	8-5
<b>SWITCHES/SOLENOIDS.....</b>	<b>4-69</b>	POWER TRIM/TILT .....	8-9
CHOKE SOLENOID.....	4-73	THERMOSTAT .....	5-45
CHOKE SWITCH.....	4-72	YMIS.....	4-42
KILL SWITCH.....	4-72	<b>TUNE-UP .....</b>	<b>2-34</b>
MAIN KEY SWITCH.....	4-71	BREAKER POINT IGNITION SYSTEM .....	2-41
NEUTRAL SAFETY SWITCH.....	4-73	CDI/CDI IGNITION SYSTEMS.....	2-43
POWER TRIM/TILT SWITCH.....	4-70	COMPRESSION TESTING .....	2-35
START BUTTON .....	4-75	ELECTRICAL SYSTEM CHECKS .....	2-44
TETHER .....	4-72	FUEL SYSTEM CHECKS.....	2-44
THERMO-SWITCH.....	4-69	IDLE SPEED ADJUSTMENT .....	2-46
TRIM/TILT MOTOR .....	4-71	INTRODUCTION .....	2-34
TRIM/TILT RELAY .....	4-70	SPARK PLUG WIRES .....	2-41
WARNING BUZZER/HORN .....	4-74	SPARK PLUGS .....	2-37
<b>TACHOMETERS.....</b>	<b>4-69</b>	TUNE-UP SEQUENCE.....	2-34
TACHOMETER CONNECTIONS.....	4-69	TUNE-UP SEQUENCE.....	2-34
TEST EQUIPMENT .....	4-4	<b>UNDERSTANDING AND TROUBLESHOOTING .....</b>	<b>4-2</b>
TETHER .....	4-72	<b>ELECTRICAL SYSTEMS.....</b>	<b>4-2</b>
THERMOSTAT .....	5-47	BASIC THEORY .....	4-2

# 10-20 MASTER INDEX

COMPONENTS .....	4-2	GENERAL INFORMATION.....	4-42
SYSTEM PRECAUTIONS .....	4-7	KNOCK SENSOR.....	4-49
TEST EQUIPMENT .....	4-4	SELF-DIAGNOSTIC CODES .....	4-44
TESTING .....	4-6	TESTING .....	4-43
TROUBLESHOOTING .....	4-6	THERMO-SENSOR & THERMO-SWITCH .....	4-50
WIRE AND CONNECTOR REPAIR .....	4-7	THROTTLE POSITION SENSOR .....	4-47
<b>VALVE CLEARANCE.....</b>	<b>2-74</b>	TROUBLESHOOTING .....	4-42
VALVE LASH .....	2-74	YMIS SELF DIAGNOSIS .....	4-42
WARNING BUZZER/HORN .....	4-74	YMIS SENSOR CHARACTERISTICS .....	4-45
WARNING BUZZER/HORN .....	9-2	YMIS SELF DIAGNOSIS .....	4-42
WATER PUMP .....	5-45	YMIS SENSOR CHARACTERISTICS .....	4-45
WINTERIZATION .....	2-77	1-2 CYL. GEARCASE W/O REVERSE .....	7-10
WIRE AND CONNECTOR REPAIR .....	4-7	1-2 CYL. GEARCASE W/REVERSE .....	7-16
<b>WIRING DIAGRAMS .....</b>	<b>4-94</b>	2 HP CARBS.....	3-16
LUBRICATION .....	5-37	2 HP 2-STROKE STARTERS.....	10-2
2 HP ENGINES .....	4-94	2/3 HP 1-CYL. POWERHEADS .....	6-3
3 HP ENGINES .....	4-95	2-STROKE STARTERS (EXCEPT 2 HP).....	10-6
4/5 HP ENGINES .....	4-95	3 HP CARBS.....	3-22
6/8 HP ENGINES .....	4-96	3-CYL. POWERHEADS .....	6-50
9.9/15 HP ENGINES .....	4-97	3-4 CYL. INLINE, V4 AND V6 GEARCASE .....	7-34
20/25/30 HP ENGINES .....	4-99	4/5 HP CARBS .....	3-24
40 HP ENGINES .....	4-103	4/5HP 1-CYL. POWERHEADS.....	6-10
45/50 HP ENGINES .....	4-103	9.9 HP 4-STROKE CARBS .....	3-28
48/55 HP ENGINES .....	4-104	9.9 HP 2-CYL., 4-STROKE POWERHEADS .....	6-16
28J-50 HP ENGINES .....	4-105	9.9 HP 4-STROKE STARTERS .....	10-10
50-70 HP ENGINES .....	4-107	6 HP, 8 HP, 9.9 HP (2-STROKE) & 15 HP CARBS .....	3-37
65J-90 HP ENGINES .....	4-108	6 HP AND LARGER, 2-CYL., POWERHEADS .....	6-34
C75/C80/C85 ENGINES.....	4-110	20-55 HP (2-CYL) CARBS .....	3-42
V4 ENGINES .....	4-111	3-CYLINDER CARBS.....	3-47
V6 ENGINES .....	4-112	45/50 HP (4 CYLINDER, 4-STROKE) CARBS.....	3-60
CONTROL BOX .....	4-116	45/50 HP, 4-CYLINDER, 4-STROKE POWERHEADS.....	6-65
<b>YAMAHA MICROCOMPUTER IGNITION SYSTEM (YMIS) .....</b>	<b>4-42</b>	76° V6 MOTOR CHARGING SYSTEM .....	4-54
CONTROL UNIT.....	4-46	V4 & V6 CARBS .....	3-65
CRANKSHAFT POSITION SENSOR.....	4-48	V4 AND V6 POWERHEADS.....	6-77