

# CONTENTS

---

## 1

### GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-13
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

---

## 2

### MAINTENANCE & TUNE-UP

GENERAL INFORMATION	2-2
LUBRICATION	2-6
ENGINE MAINTENANCE	2-12
BOAT MAINTENANCE	2-35
TUNE-UP	2-39
VALVE CLEARANCE	2-93
STORAGE (WHAT TO DO BEFORE & AFTER)	2-108
CLEARING A SUBMERGED MOTOR	2-112
SPECIFICATIONS	2-113

---

## 3

### FUEL SYSTEMS

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES	3-7
CARBURETED FUEL SYSTEM	3-13
ELECTRONIC FUEL INJECTION SYSTEM	3-37
FUEL PUMP (LOW-PRESSURE) SERVICE	3-83
SPECIFICATIONS	3-90

---

## 4

### IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING SYSTEM	4-42
CRANKING (ELECTRIC STARTER) SYSTEM	4-46
ELECTRICAL SWITCH/SOLENOID SERVICE	4-60
WIRING DIAGRAMS	4-63
SPECIFICATIONS	

---

## 5

### LUBRICATION & COOLING

LUBRICATION SYSTEM	5-2
COOLING SYSTEM	5-9
SPECIFICATIONS	5-26

# CONTENTS

POWERHEAD MECHANICAL 6-2  
POWERHEAD REFINISHING 6-142  
POWERHEAD BREAK-IN 6-156  
EXPLODED VIEWS 6-157  
SPECIFICATIONS

## POWERHEAD

# 6

LOWER UNIT 7-2  
GEARCASE SERVICE 7-4  
2.5 & 4 HP (1-CYL) MODELS 7-5  
6-40 HP CARBURETED MODELS 7-10  
40-350 HP EFI MODELS 7-37  
JET DRIVE 7-88

## LOWER UNIT

# 7

HYDRO TILT LOCK SYSTEM 8-2  
TRIM & TILT SYSTEMS 8-2  
SINGLE TILT RAM POWER TRIM/TILT SYSTEMS (SMALL MOTOR) 8-3  
3-RAM POWER TRIM/TILT SYSTEM (LARGE MOTOR) 8-18  
WIRING DIAGRAMS 8-35

## TRIM & TILT

# 8

REMOTE CONTROLS 9-2  
TILLER HANDLES 9-15

## REMOTE CONTROLS

# 9

HAND REWIND STARTERS 10-2

## HAND REWIND STARTER

# 10

MASTER INDEX 10-19

## MASTER INDEX

ANCHORS .....	1-10	6/8 HP MOTORS .....	3-22
ANODES (ZINGS) .....	2-31	OVERHAUL .....	3-22
INSPECTION .....	2-31	CLEANING & INSPECTION .....	3-23
SERVICING .....	2-32	REMOVAL & INSTALLATION .....	3-22
AVOIDING THE MOST COMMON MISTAKES .....	1-3	9.9 HP (212CC) MOTORS .....	3-24
AVOIDING TROUBLE .....	1-2	CLEANING & INSPECTION .....	3-26
BASIC ELECTRICAL THEORY .....	4-2	OVERHAUL .....	3-24
HOW DOES ELECTRICITY WORK: THE WATER ANALOGY .....	4-2	REMOVAL & INSTALLATION .....	3-24
OHM'S LAW .....	4-2	9.9 HP (232CC) MOTORS .....	3-26
BAILING DEVICES .....	1-10	CLEANING & INSPECTION .....	3-28
BASIC OPERATING PRINCIPLES .....	1-13	GENERAL INFORMATION .....	3-26
2-STROKE MOTORS .....	1-14	OVERHAUL .....	3-27
4-STROKE MOTORS 1=16 .....	1-16	REMOVAL & INSTALLATION .....	3-26
BATTERY .....	1-16	9.9/15 HP (323CC) MOTORS .....	3-29
CHARGERS .....	4-46	CLEANING & INSPECTION .....	3-30
CONSTRUCTION .....	4-45	OVERHAUL .....	3-29
LOCATION .....	4-45	REMOVAL & INSTALLATION .....	3-29
MAINTENANCE .....	2-35	15/20 HP (362CC) MOTORS .....	3-31
MARINE BATTERIES .....	4-44	CLEANING & INSPECTION .....	3-33
RATINGS .....	4-45	OVERHAUL .....	3-32
REPLACING CABLES .....	4-46	REMOVAL & INSTALLATION .....	3-31
SAFETY PRECAUTIONS .....	4-45	25 HP MOTORS .....	3-33
STORAGE .....	2-37	CLEANING & INSPECTION .....	3-35
TESTING .....	2-37	OVERHAUL .....	3-34
<b>BOAT MAINTENANCE .....</b>	<b>2-35</b>	REMOVAL & INSTALLATION .....	3-33
BATTERIES .....	2-35	30/30J/40 HP MOTORS .....	3-36
FIBERGLASS HULL .....	2-38	OVERHAUL .....	3-37
INTERIOR .....	2-38	REMOVAL & INSTALLATION .....	3-36
<b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) ...</b>	<b>1-10</b>	CDI/TCI ELECTRONIC IGNITION SYSTEMS .....	4-8
ANCHORS .....	1-10	DESCRIPTION & OPERATION .....	4-8
BAILING DEVICES .....	1-10	CDI/TCI UNIT & IGNITION COILS .....	4-35
COMPASS .....	1-11	REMOVAL & INSTALLATION .....	4-36
FIRST AID KIT .....	1-10	CHARGING CIRCUIT .....	4-42
OAR/PADDLE (SECOND MEANS OF PROPULSION) .....	1-10	<b>CHARGING SYSTEM .....</b>	<b>4-42</b>
TOOLS AND SPARE PARTS .....	1-12	BATTERY .....	4-44
VHF-FM RADIO .....	1-10	CHARGING CIRCUIT .....	4-42
<b>BOATING SAFETY .....</b>	<b>1-4</b>	CHARGING SYSTEMS .....	4-42
COURTESY MARINE EXAMINATIONS .....	1-10	DESCRIPTION & OPERATION .....	4-42
REGULATIONS FOR YOUR BOAT .....	1-4	TROUBLESHOOTING .....	4-43
REQUIRED SAFETY EQUIPMENT .....	1-6	CHEMICALS .....	1-17
BOLTS, NUTS AND OTHER THREADED RETAINERS .....	1-27	CLEANERS .....	1-18
BREAK-IN PROCEDURES .....	6-156	LUBRICANTS & PENETRANTS .....	1-18
CAMSHAFT POSITION SENSOR (CAM) .....	3-75	SEALANTS .....	1-18
GENERAL INFORMATION .....	3-75	<b>CLEARING A SUBMERGED MOTOR .....</b>	<b>2-112</b>
TESTING & SERVICE .....	3-76	COMBUSTION .....	3-6
CAN YOU DO IT? .....	1-2	ABNORMAL COMBUSTION .....	3-6
<b>CARBURETED FUEL SYSTEM .....</b>	<b>3-13</b>	FACTORS AFFECTING COMBUSTION .....	3-6
CARBURETOR IDENTIFICATION .....	3-18	GENERAL INFORMATION .....	3-6
DESCRIPTION & OPERATION .....	3-13	COMPASS .....	1-11
TROUBLESHOOTING .....	3-15	COMPASS PRECAUTIONS .....	1-12
2.5 HP MOTORS .....	3-18	INSTALLATION .....	1-11
4 HP MOTORS .....	3-20	SELECTION .....	1-11
6/8 HP MOTORS .....	3-22	COMPRESSION TESTING .....	2-40
9.9 HP (212CC) MOTORS .....	3-24	COMPRESSION CHECK .....	2-40
9.9 HP (232CC) MOTORS .....	3-26	LOW COMPRESSION .....	2-41
9.9/15 HP (323CC) MOTORS .....	3-29	CONNECTING RODS .....	6-146
15/20 HP (362CC) MOTORS .....	3-31	INSPECTION .....	6-146
25 HP MOTORS .....	3-33	<b>COOLING SYSTEM .....</b>	<b>5-10</b>
30/30J/40 HP MOTORS .....	3-36	DESCRIPTION & OPERATION .....	5-10
CARBURETOR IDENTIFICATION .....	3-18	FLUSHING .....	2-13
CARBURETORS .....	3-18	FLUSHING JET DRIVES .....	2-15
2.5 HP MOTORS .....	3-18	THERMOSTAT .....	5-19
CLEANING & INSPECTION .....	3-20	THERMO-SWITCH .....	5-24
OVERHAUL .....	3-19	TROUBLESHOOTING .....	5-11
REMOVAL & INSTALLATION .....	3-18	WATER PUMP .....	5-14
4 HP MOTORS .....	3-20	COURTESY MARINE EXAMINATIONS .....	1-10
CLEANING & INSPECTION .....	3-22		
OVERHAUL .....	3-21		
REMOVAL & INSTALLATION .....	3-20		

# 10-20 MASTER INDEX

<b>CRANKING (ELECTRIC STARTER) SYSTEM</b> .....	4-46	<b>ELECTRONIC FUEL INJECTION SYSTEM</b> .....	3-37
STARTER MOTOR .....	4-50	CAMSHAFT POSITION SENSOR (CAM) .....	3-75
STARTER MOTOR CIRCUIT .....	4-47	CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL .....	3-75
STARTER MOTOR SOLENOID/RELAY .....	4-49	ELECTRIC LOW-PRESSURE FUEL PUMP .....	3-56
STARTING CIRCUITS .....	4-46	ENGINE CONTROL MODULE (ECM) .....	3-72
<b>CRANKSHAFT</b> .....	6-145	FUEL INJECTION BASICS .....	3-37
INSPECTION .....	6-145	FUEL INJECTORS .....	3-67
MEASURING BEARING CLEARANCE .....	6-145	FUEL PRESSURE REGULATOR .....	3-70
<b>CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL</b> .....	3-75	GENERAL INFORMATION .....	3-37
<b>CYLINDER BLOCK</b> .....	6-149	IDLE SPEED/AIR CONTROL (ISC) VALVE .....	3-80
BLOCK & CYLINDER HEAD WARPAGE .....	6-151	KNOCK SENSOR - VVT MODELS .....	3-82
HONING CYLINDER WALLS .....	6-150	NEUTRAL OR SHIFT POSITION SWITCHES .....	3-81
INSPECTION .....	6-149	OIL CONTROL VALVE (OCV) - VVT MODELS .....	3-82
<b>CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)</b> .....	6-152	PRESSURE SENSORS (IAP) .....	3-79
CHECKING FOR VALVE LEAKAGE .....	6-153	SELF DIAGNOSTIC SYSTEM .....	3-39
CHECKING THE CAMSHAFT .....	6-153	SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS .....	3-42
CHECKING THE ROCKER ARMS AND SHAFTS .....	6-154	TEMPERATURE SENSORS .....	3-76
CHECKING THE VALVE ASSEMBLIES .....	6-154	THROTTLE BODY & INTAKE ASSEMBLY .....	3-43
<b>DESCRIPTION &amp; OPERATION</b>		THROTTLE POSITION SENSOR (TPS) .....	3-73
CARBURETED FUEL SYSTEM .....	3-13	TROUBLESHOOTING .....	3-39
CDI/TCI ELECTRONIC IGNITION SYSTEMS .....	4-8	VAPOR SEPARATOR TANK (VST) & HIGH-PRESSURE FUEL PUMP .....	3-60
CHARGING SYSTEMS .....	4-42	YAMAHA EFI 4-STROKE INJECTION .....	3-38
COOLING SYSTEM .....	5-9	WATER DETECTION SWITCH .....	3-82
FUEL PUMP .....	3-85	<b>ELECTRONIC IGNITION SYSTEMS</b> .....	2-48
HYDRO TILT LOCK SYSTEM .....	8-2	INSPECTION .....	2-48
LUBRICATION SYSTEM .....	5-2	<b>ELECTRONIC TOOLS</b> .....	1-23
MECHANICAL REMOTE CONTROL UNITS .....	9-2	BATTERY CHARGERS .....	1-24
OIL PRESSURE SWITCH/SENSOR .....	5-4	BATTERY TESTERS .....	1-23
SINGLE TILT RAM POWER TRIM/TILT SYSTEMS (SMALL MOTOR) .....	8-3	GAUGES .....	1-24
STARTER MOTOR .....	4-50	MULTI-METERS (DVOMS) .....	1-24
STARTER MOTOR SOLENOID/RELAY .....	4-49	ENGINE CONTROL MODULE (ECM) .....	3-72
STARTING CIRCUITS .....	4-46	GENERAL INFORMATION .....	3-72
THERMO-SENSOR & THERMO-SWITCH .....	4-40	REMOVAL & INSTALLATION .....	3-72
THERMO-SWITCH .....	5-24	<b>ENGINE COVERS</b> .....	2-12
TILLER HANDLES .....	9-15	REMOVAL & INSTALLATION .....	2-12
3-RAM POWER TRIM/TILT SYSTEM (LARGE MOTOR) .....	8-18	<b>ENGINE IDENTIFICATION</b> .....	2-2
<b>DIRECTIONS &amp; LOCATIONS</b> .....	1-2	ENGINE IDS .....	2-2
<b>ELECTRIC LOW-PRESSURE FUEL PUMP</b> .....	3-56	ENGINE MODEL & SERIAL NUMBERS .....	2-3
GENERAL INFORMATION .....	3-56	JET DRIVE HP RATINGS .....	2-3
REMOVAL & INSTALLATION .....	3-58	MODEL YEARS .....	2-3
200/225/250 HP (3.4L) MOTORS .....	3-58	<b>ENGINE MAINTENANCE</b> .....	2-12
300/350 HP (5.3L) MOTORS .....	3-59	ANODES (ZINCS) .....	2-31
TESTING .....	3-56	COOLING SYSTEM .....	2-12
<b>ELECTRICAL COMPONENTS</b> .....	4-2	ENGINE COVERS .....	2-12
GROUND .....	4-3	ENGINE OIL & FILTER .....	2-15
LOAD .....	4-4	FUEL FILTER .....	2-21
POWER SOURCE .....	4-2	JET DRIVE IMPELLER .....	2-30
PROTECTIVE DEVICES .....	4-3	PROPELLER .....	2-24
SWITCHES & RELAYS .....	4-4	TIMING BELT .....	2-34
WIRING & HARNESES .....	4-4	<b>ENGINE OIL &amp; FILTER</b> .....	2-15
<b>ELECTRICAL SWITCH/SOLENOID SERVICE</b> .....	4-60	OIL CHANGE & FILTER .....	2-17
MAIN KEYSWITCH .....	4-60	OIL LEVEL .....	2-16
KILL SWITCH .....	4-61	OIL RECOMMENDATIONS .....	2-15
NEUTRAL SAFETY SWITCH/SHIFT POSITION SWITCH .....	4-62	OIL STRAINER .....	2-20
START BUTTON .....	4-61	<b>EXHAUST COVER</b> .....	6-144
WARNING BUZZER/HORN .....	4-63	INSPECTION .....	6-144
<b>ELECTRICAL SYSTEM CHECKS</b> .....	2-48	<b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b> .....	1-27
BATTERY .....	2-48	BOLTS, NUTS AND OTHER THREADED RETAINERS .....	1-27
INTERNAL WIRING HARNESS .....	2-49	STANDARD AND METRIC MEASUREMENTS .....	1-27
STARTER MOTOR .....	2-49	TORQUE .....	1-27
<b>ELECTRICAL SYSTEM PRECAUTIONS</b> .....	4-8	<b>FIRST AID KIT</b> .....	1-10
<b>ELECTRICAL TESTING</b> .....	4-6	<b>FLYWHEEL &amp; IGNITION/CHARGING SYSTEM COILS</b> .....	4-35
OPEN CIRCUITS .....	4-7	CLEANING & INSPECTION .....	4-35
RESISTANCE .....	4-7	REMOVAL & INSTALLATION .....	4-25
SHORT CIRCUITS .....	4-7	<b>FUEL</b> .....	3-2
VOLTAGE .....	4-6	ALCOHOL-BLENDED FUELS .....	3-3
VOLTAGE DROP .....	4-7	GENERAL INFORMATION .....	3-2
		HIGH ALTITUDE OPERATION .....	3-3
		OCTANE RATING .....	3-2
		STALE/CONTAMINATED FUEL .....	3-3
		THE BOTTOM LINE WITH FUELS .....	3-3
		VAPOR PRESSURE .....	3-3

<b>FUEL &amp; COMBUSTION BASICS</b> . . . . .	<b>3-2</b>	REMOVAL & INSTALLATION . . . . .	7-5
COMBUSTION . . . . .	3-6	6-40 HP CARBURETED MODELS . . . . .	7-10
FUEL . . . . .	3-2	ASSEMBLY . . . . .	7-19
FUEL SYSTEM PRESSURIZATION . . . . .	3-5	CLEANING & INSPECTION . . . . .	7-18
GENERAL INFORMATION . . . . .	3-2	DISASSEMBLY . . . . .	7-12
SERVICE CAUTIONS . . . . .	3-2	GEARCASE SHIMMING . . . . .	7-23
FUEL FILTER . . . . .	2-21	REMOVAL & INSTALLATION . . . . .	7-10
SERVICE . . . . .	2-22	40-350 HP EFI MODELS . . . . .	7-37
FUEL INJECTION BASICS . . . . .	3-37	ASSEMBLY . . . . .	7-50
FUEL INJECTORS . . . . .	3-67	CLEANING & INSPECTING . . . . .	7-49
GENERAL INFORMATION . . . . .	3-67	DISASSEMBLY . . . . .	7-39
REMOVAL & INSTALLATION . . . . .	3-68	GEARCASE SHIMMING . . . . .	7-56
TESTING . . . . .	3-67	REMOVAL & INSTALLATION . . . . .	7-37
FUEL LINES & FITTINGS . . . . .	3-9	<b>GENERAL INFORMATION</b> . . . . .	<b>2-2</b>
CHECKING FUEL FLOW . . . . .	3-10	BEFORE/AFTER EACH USE . . . . .	2-5
CHECKING THE PRIMER BULB . . . . .	3-10	ENGINE IDENTIFICATION . . . . .	2-2
QUICK CHECK . . . . .	3-10	MAINTENANCE COVERAGE . . . . .	2-2
SERVICE . . . . .	3-11	MAINTENANCE EQUALS SAFETY . . . . .	2-2
TESTING . . . . .	3-9	OUTBOARDS ON SAIL BOATS . . . . .	2-2
FUEL PRESSURE REGULATOR . . . . .	3-70	<b>HAND REWIND STARTERS</b> . . . . .	<b>10-2</b>
GENERAL INFORMATION . . . . .	3-70	2.5 HP & 4 HP MOTORS . . . . .	10-2
REMOVAL & INSTALLATION . . . . .	3-71	ASSEMBLY & INSTALLATION . . . . .	10-2
TESTING . . . . .	3-71	CLEANING & INSPECTION . . . . .	10-2
<b>FUEL PUMP (LOW-PRESSURE) SERVICE</b> . . . . .	<b>3-83</b>	REMOVAL & DISASSEMBLY . . . . .	10-2
GENERAL INFORMATION . . . . .	3-83	6/8 HP & 9.9 HP (212cc) MOTORS . . . . .	10-3
FUEL PUMPS . . . . .	3-83	ASSEMBLY & INSTALLATION . . . . .	10-4
FUEL PUMPS (MECHANICAL LOW-PRESSURE) . . . . .	3-85	CLEANING & INSPECTION . . . . .	10-4
FUEL PUMPS . . . . .		REMOVAL & DISASSEMBLY . . . . .	10-3
DESCRIPTION & OPERATION . . . . .	3-85	9.9 HP (232cc) MOTORS . . . . .	10-5
GENERAL INFORMATION . . . . .		ASSEMBLING & INSTALLATION . . . . .	10-7
HIGH PRESSURE . . . . .	3-60	CLEANING & INSPECTION . . . . .	10-7
LOW PRESSURE . . . . .	3-83	REMOVAL & DISASSEMBLY . . . . .	10-5
HIGH-PRESSURE PUMP . . . . .	3-60	9.9/15 HP (323cc) & 15/20 HP (362cc) MOTORS . . . . .	10-10
LOW PRESSURE PUMP . . . . .	3-83	ASSEMBLY & INSTALLATION . . . . .	10-12
OVERHAUL . . . . .		CLEANING & INSPECTION . . . . .	10-12
HIGH PRESSURE . . . . .	3-61	REMOVAL & DISASSEMBLY . . . . .	10-10
LOW PRESSURE . . . . .	3-87	25 HP 1ST GEN (THRU 2006) MOTORS . . . . .	10-12
REMOVAL & INSTALLATION . . . . .		ASSEMBLY & INSTALLATION . . . . .	10-14
HIGH PRESSURE . . . . .	3-61	CLEANING & INSPECTION . . . . .	10-13
LOW PRESSURE . . . . .	3-86	REMOVAL & DISASSEMBLY . . . . .	10-12
TESTING . . . . .		25 HP 2ND GEN (2009 & LATER) MOTORS . . . . .	10-14
HIGH PRESSURE . . . . .	3-61	ASSEMBLY & INSTALLATION . . . . .	10-15
LOW PRESSURE . . . . .	3-84	CLEANING & INSPECTION . . . . .	10-15
FUEL SYSTEM CHECKS . . . . .	2-49	REMOVAL & DISASSEMBLY . . . . .	10-14
CARBS OR THROTTLE BODIES . . . . .	2-51	30/30J/40 HP MOTORS . . . . .	10-16
FUEL . . . . .	2-49	ASSEMBLY & INSTALLATION . . . . .	10-17
HIGH-PRESSURE FUEL PUMP . . . . .	2-50	CLEANING & INSPECTION . . . . .	10-17
LOW-PRESSURE FUEL PUMP . . . . .	2-49	REMOVAL & DISASSEMBLY . . . . .	10-16
FUEL SYSTEM PRESSURIZATION . . . . .	3-5	HAND TOOLS . . . . .	1-19
GENERAL INFORMATION . . . . .	3-5	HAMMERS . . . . .	1-22
PRESSURIZING THE SYSTEM . . . . .	3-6	PLIERS . . . . .	1-21
RELIEVING PRESSURE . . . . .	3-5	SCREWDRIVERS . . . . .	1-22
<b>FUEL TANK &amp; LINES</b> . . . . .	<b>3-7</b>	SOCKET SETS . . . . .	1-9
FUEL LINES & FITTINGS . . . . .	3-9	WRENCHES . . . . .	1-21
FUEL TANK . . . . .	3-7	HIGH-PRESSURE FUEL PUMP . . . . .	3-60
GENERAL INFORMATION . . . . .	3-7	<b>HOW TO USE THIS MANUAL</b> . . . . .	<b>1-2</b>
SERVICE . . . . .	3-7	AVOIDING THE MOST COMMON MISTAKES . . . . .	1-3
GEARCASE (LOWER UNIT) OIL . . . . .	2-8	AVOIDING TROUBLE . . . . .	1-2
DRAINING & FILLING . . . . .	2-9	CAN YOU DO IT? . . . . .	1-2
LEVEL & CONDITION . . . . .	2-8	DIRECTIONS AND LOCATIONS . . . . .	1-2
OIL RECOMMENDATIONS . . . . .	2-8	MAINTENANCE OR REPAIR? . . . . .	1-2
PRESSURE TESTING THE GEARCASE . . . . .	2-10	PROFESSIONAL HELP . . . . .	1-3
GEARCASE REPAIR & OVERHAUL TIPS . . . . .	7-4	PURCHASING PARTS . . . . .	1-3
<b>GEARCASE SERVICE</b> . . . . .	<b>7-4</b>	WHERE TO BEGIN . . . . .	1-2
GEARCASE REPAIR & OVERHAUL TIPS . . . . .	7-4	<b>HYDRO TILT LOCK SYSTEM</b> . . . . .	<b>8-2</b>
2.5 & 4 HP (1-CYL) MODELS . . . . .	7-5	DESCRIPTION & OPERATION . . . . .	8-2
ASSEMBLY . . . . .	7-8	SERVICING THE HYDRO TILT SYSTEM . . . . .	8-3
CLEANING & INSPECTING . . . . .	7-8	IDLE SPEED . . . . .	2-51
DISASSEMBLY . . . . .	7-6	ADJUSTMENT . . . . .	2-51
		IDLE SPEED/AIR CONTROL (ISC) VALVE . . . . .	3-80
		GENERAL INFORMATION . . . . .	3-80
		TESTING & SERVICE . . . . .	3-80

# 10-22 MASTER INDEX

<b>IGNITION SYSTEMS</b> . . . . .	<b>4-8</b>	<b>MAINTENANCE EQUALS SAFETY</b> . . . . .	<b>2-2</b>
CDI/TCI ELECTRONIC IGNITION SYSTEMS . . . . .	4-8	MAINTENANCE OR REPAIR? . . . . .	1-2
CDI/TCI UNIT & IGNITION COILS . . . . .	4-35	MEASURING TOOLS . . . . .	1-25
FLYWHEEL & IGNITION/CHARGING SYSTEM COILS . . . . .	4-35	DEPTH GAUGES . . . . .	1-26
THERMO-SENSOR & THERMO-SWITCH . . . . .	4-40	DIAL INDICATORS . . . . .	1-25
TROUBLESHOOTING . . . . .	4-12	MICROMETERS & CALIPERS . . . . .	1-25
YAMAHA MICROCOMPUTER IGNITION SYSTEMS (YMIS) . . . . .	4-39	TELESCOPING GAUGES . . . . .	1-26
<b>JET DRIVE</b> . . . . .	<b>7-88</b>	MECHANICAL CONTROL UNITS . . . . .	9-2
JET DRIVE ADJUSTMENTS . . . . .	7-97	ASSEMBLY & INSTALLATION . . . . .	9-4
JET DRIVE ASSEMBLY . . . . .	7-88	CLEANING & INSPECTION . . . . .	9-4
JET DRIVE ADJUSTMENTS . . . . .	7-97	DESCRIPTION & OPERATION . . . . .	9-2
GATE LINKAGE ADJUSTMENTS . . . . .	7-97	EXPLODED VIEWS . . . . .	9-8
GATE . . . . .	7-97	REMOVAL & DISASSEMBLY . . . . .	9-2
REMOTE CABLE . . . . .	7-97	NEUTRAL POSITION SWITCH . . . . .	3-81
TILLER SHIFT ROD . . . . .	7-98	NEUTRAL SAFETY SWITCH . . . . .	4-62
TRIM ADJUSTMENT . . . . .	7-98	TESTING . . . . .	4-62
JET DRIVE ASSEMBLY . . . . .	7-88	OAR/PADDLE (SECOND MEANS OF PROPULSION) . . . . .	1-10
ASSEMBLY . . . . .	7-94	OIL CONTROL VALVE (OCV) - VVT MODELS . . . . .	3-82
GETTING STARTED . . . . .	7-94	CHECKING & SERVICE . . . . .	3-82
JET DRIVE INSTALLATION . . . . .	7-95	OIL PRESSURE . . . . .	5-2
SHIMMING THE JET IMPELLER . . . . .	7-95	TESTING . . . . .	5-2
WATER PUMP ASSEMBLY . . . . .	7-95	OIL PRESSURE SWITCH/SENSOR . . . . .	5-4
CLEANING & INSPECTION . . . . .	7-90	DESCRIPTION & OPERATION . . . . .	5-4
BEARING ASSEMBLY . . . . .	7-91	REMOVAL & INSTALLATION . . . . .	5-5
DISASSEMBLING THE BEARING CARRIER . . . . .	7-92	TESTING . . . . .	5-4
DISASSEMBLING THE DRIVESHAFT . . . . .	7-93	6-115 HP MOTORS . . . . .	5-4
DRIVESHAFT & ASSOCIATED PARTS . . . . .	7-93	105J/150 HP AND LARGER MOTORS . . . . .	5-5
GETTING STARTED . . . . .	7-90	OIL PUMP . . . . .	5-5
REVERSE GATE . . . . .	7-93	REMOVAL, OVERHAUL & INSTALLATION . . . . .	5-6
JET IMPELLER . . . . .	7-94	2-4 CYLINDER, 6-60 HP MOTORS . . . . .	5-6
WATER PUMP . . . . .	7-94	65J-350 HP MOTORS . . . . .	5-8
DESCRIPTION & OPERATION . . . . .	7-88	OTHER COMMON TOOLS . . . . .	1-22
MODEL IDENTIFICATION . . . . .	7-88	OUTBOARDS ON SAIL BOATS . . . . .	2-2
REMOVAL & DISASSEMBLY . . . . .	7-88	PISTONS . . . . .	6-147
JET DRIVE BEARING . . . . .	2-11	INSPECTION . . . . .	1-47
GREASE REPLACEMENT . . . . .	2-11	OVERSIZE PISTONS & RINGS . . . . .	6-149
LUBRICATION . . . . .	2-11	PISTON RING SIDE CLEARANCE . . . . .	6-148
RECOMMENDED LUBRICANT . . . . .	2-11	RING END-GAP CLEARANCE . . . . .	6-148
JET DRIVE IMPELLER . . . . .	2-30	POWER TRIM/TILT RESERVOIR . . . . .	2-11
IMPELLER CLEARANCE . . . . .	2-31	FLUID LEVEL/CONDITION . . . . .	2-12
INSPECTION . . . . .	2-30	RECOMMENDED LUBRICANT . . . . .	2-11
KILL SWITCH . . . . .	4-61	<b>POWERHEAD BREAK-IN</b> . . . . .	<b>6-156</b>
TESTING . . . . .	4-61	BREAK-IN PROCEDURES . . . . .	6-156
KNOCK SENSOR - VVT MODELS . . . . .	3-82	<b>POWERHEAD MECHANICAL</b> . . . . .	<b>6-2</b>
CHECKING & SERVICE . . . . .	3-82	GENERAL INFORMATION . . . . .	6-2
<b>LOWER UNIT</b> . . . . .	<b>7-2</b>	2.5 & 4 HP . . . . .	6-4
GENERAL INFORMATION . . . . .	7-2	6/8 HP, 9.9 HP (212cc) & 9.9 HP (232cc) . . . . .	6-11
SHIFTING PRINCIPLES . . . . .	7-2	9.9/15 HP (323cc) AND 15/20 HP (362cc) . . . . .	6-29
TROUBLESHOOTING . . . . .	7-3	25 HP . . . . .	6-41
LUBRICANTS . . . . .	2-6	30/30J/40 HP CARBURETED . . . . .	6-55
GEARCASE LUBRICANT . . . . .	2-6	30J/40 HP EFI . . . . .	6-63
MARINE GREASE . . . . .	2-6	40J/50/60 HP . . . . .	6-73
POWER TRIM & TILT FLUID . . . . .	2-7	65J/75/90 HP & 80J/115 HP . . . . .	6-82
LUBRICATING THE MOTOR . . . . .	2-7	105J/150 HP . . . . .	6-96
<b>LUBRICATION</b> . . . . .	<b>2-6</b>	200/225/250 HP (3.4L) . . . . .	6-107
GEARCASE (LOWER UNIT) OIL . . . . .	2-8	300/350 HP (5.3L) . . . . .	6-128
JET DRIVE BEARING . . . . .	2-11	<b>POWERHEAD REFINISHING</b> . . . . .	<b>6-142</b>
LUBRICANTS . . . . .	2-6	CONNECTING RODS . . . . .	6-146
LUBRICATING THE MOTOR . . . . .	2-7	CRANKSHAFT . . . . .	6-145
LUBRICATION INSIDE THE BOAT . . . . .	2-8	CYLINDER BLOCK . . . . .	6-149
POWER TRIM/TILT RESERVOIR . . . . .	2-11	CYLINDER HEAD COMPONENTS . . . . .	6-152
LUBRICATION INSIDE THE BOAT . . . . .	2-8	GENERAL INFORMATION . . . . .	6-142
<b>LUBRICATION SYSTEM</b> . . . . .	<b>5-2</b>	EXHAUST COVER . . . . .	6-144
DESCRIPTION & OPERATION . . . . .	5-2	PISTONS . . . . .	6-147
OIL PRESSURE . . . . .	5-2	PRESSURE SENSORS (IAP) . . . . .	3-79
OIL PRESSURE SWITCH/SENSOR . . . . .	5-4	GENERAL INFORMATION . . . . .	3-79
OIL PUMP . . . . .	5-5	TESTING . . . . .	3-80
MAIN KEYSWITCH . . . . .	4-60	PROFESSIONAL HELP . . . . .	1-3
TESTING . . . . .	4-60	PROPELLER . . . . .	2-24
MAINTENANCE COVERAGE IN THIS MANUAL . . . . .	2-2	GENERAL INFORMATION . . . . .	2-24
EXPLODED VIEWS . . . . .	2-2	INSPECTION . . . . .	2-27
		REMOVAL & INSTALLATION . . . . .	2-28

PURCHASING PARTS .....	1-3	<b>SPECIFICATIONS .....</b>	<b>2-113</b>
RE-COMMISSIONING .....	2-111	CAPACITIES .....	2-119
REMOVAL FROM STORAGE .....	2-111	CARBURETOR SET-UP .....	3-90
REGULATIONS FOR YOUR BOAT .....	1-4	CONVERSION FACTORS .....	1-28
CAPACITY INFORMATION .....	1-4	COOLING SYSTEM .....	5-26
CERTIFICATE OF COMPLIANCE .....	1-5	ENGINE	
DOCUMENTING OF VESSELS .....	1-4	2.5 HP (72cc) 1-CYL .....	6-158
HULL IDENTIFICATION NUMBER .....	1-4	4 HP (112cc) 1-CYL .....	6-159
LENGTH OF BOATS .....	1-4	6/8 HP (197cc) 2-CYL .....	6-160
NUMBERING OF VESSELS .....	1-4	9.9 HP (212cc) 2-CYL .....	6-161
REGISTRATION OF BOATS .....	1-4	9.9 HP (232cc) 2-CYL .....	6-162
SALES AND TRANSFERS .....	1-4	9.9/15 HP (323cc) 2-CYL .....	6-163
VENTILATION .....	1-5	15/20 HP (362cc) 2-CYL .....	6-164
VENTILATION SYSTEMS .....	1-5	25 HP (498cc) 2-CYL .....	6-165
<b>REMOTE CONTROLS .....</b>	<b>9-2</b>	30/30J/40 HP (747cc) 3-CYL .....	6-167
MECHANICAL CONTROL UNITS .....	9-2	40J/50/60 HP (996cc) 4-CYL .....	6-169
YAMAHA DIGITAL ELECTRONIC CONTROLS .....	9-10	65J/75/90 HP (1596cc) 4-CYL .....	6-170
REQUIRED SAFETY EQUIPMENT .....	1-6	80J/115 HP (1741cc) 4-CYL .....	6-172
FIRE EXTINGUISHERS .....	1-6	105J/150 HP (2670cc) 4-CYL .....	6-173
PERSONAL FLOTATION DEVICES .....	1-7	200/225/250 HP (3352cc) V6 .....	6-174
SOUND PRODUCING DEVICES .....	1-9	300/350 HP (5330cc) V8 .....	6-176
TYPES OF FIRES .....	1-6	GENERAL ENGINE .....	2-113
VISUAL DISTRESS SIGNALS .....	1-9	GENERAL ENGINE SYSTEM .....	2-114
WARNING SYSTEM .....	1-7	LUBRICATION .....	2-118
<b>SAFETY IN SERVICE .....</b>	<b>1-13</b>	MAINTENANCE INTERVALS - CARBURETED .....	2-115
DO'S .....	1-13	MAINTENANCE INTERVALS - EFI .....	2-116
DON'TS .....	1-13	METRIC BOLTS - TYPICAL TORQUE VALUES .....	1-28
SAFETY TOOLS .....	1-17	SPARK PLUG DIAGNOSIS .....	2-122
EYE AND EAR PROTECTION .....	1-17	TUNE-UP .....	2-120
WORK CLOTHES .....	1-17	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES .....	1-28
WORK GLOVES .....	1-17	VALVE CLEARANCE .....	2-121
<b>SHOP EQUIPMENT .....</b>	<b>1-17</b>	START BUTTON .....	4-61
SAFETY TOOLS .....	1-17	TESTING .....	4-61
CHEMICALS .....	1-17	STARTER MOTOR .....	4-50
SPECIAL TOOLS .....	1-23	DESCRIPTION .....	4-50
STANDARD AND METRIC MEASUREMENTS .....	1-27	EXPLODED VIEWS .....	4-54
SELF DIAGNOSTIC SYSTEM .....	3-39	OVERHAUL .....	4-58
READING TROUBLE CODES .....	3-39	REMOVAL & INSTALLATION .....	4-51
TROUBLE CODE CHARTS .....	3-41	STARTER MOTOR CIRCUIT .....	4-47
SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS .....	3-42	TROUBLESHOOTING .....	4-47
TESTING .....	3-42	STARTER MOTOR SOLENOID/RELAY .....	4-49
SHIFT POSITION SWITCHES .....	3-81	DESCRIPTION & OPERATION .....	4-49
SHIFT POSITION SWITCH .....	4-62	REMOVAL & INSTALLATION .....	4-50
TESTING .....	4-62	TESTING .....	4-49
SHIFTING PRINCIPLES .....	7-2	STARTING CIRCUITS .....	4-46
COUNTER-ROTATING UNIT .....	7-3	DESCRIPTION & OPERATION .....	4-46
STANDARD ROTATING UNIT .....	7-2	FAULTY SYMPTOMS .....	4-47
<b>SINGLE TILT RAM POWER TRIM/TILT SYSTEMS (SMALL MOTOR) .. 8-3</b>		MAINTENANCE .....	4-47
DESCRIPTION & OPERATION .....	8-3	<b>STORAGE (WHAT TO DO BEFORE &amp; AFTER) .....</b>	<b>2-108</b>
MAINTENANCE .....	8-5	RE-COMMISSIONING .....	2-111
PTT ASSEMBLY .....	8-11	WINTERIZATION .....	2-108
COMPONENT REPLACEMENT .....	8-14	SYNCHRONIZATION .....	2-52
REMOVAL & INSTALLATION .....	8-11	TCI UNIT AIR GAP .....	2-47
PTT RELAY .....	8-6	ADJUSTMENT .....	2-48
TESTING .....	8-6	TEMPERATURE SENSORS .....	3-76
TILT MOTOR .....	8-8	TESTING .....	3-77
SERVICE .....	8-9	COMPREHENSIVE TEST .....	3-78
TESTING .....	8-8	GENERAL .....	3-77
TRIM SENSOR .....	8-11	QUICK TEST .....	3-78
TESTING .....	8-11	SENSOR TEST SPECS .....	3-78
TILT SWITCH .....	8-8	TEST EQUIPMENT .....	4-4
TESTING .....	8-8	JUMPER WIRES .....	4-5
TROUBLESHOOTING .....	8-5	MULTI-METERS .....	4-5
SPARK PLUGS .....	2-42	PEAK VOLTAGE READING ADAPTOR .....	4-6
HEAT RANGE .....	2-42	TEST LIGHTS .....	4-5
INSPECTION & GAPPING .....	2-46	THERMO-SENSOR & THERMO-SWITCH .....	4-40
READING PLUGS .....	2-44	CHECKING THERMO-SENSOR RESISTANCE .....	4-41
REMOVAL & INSTALLATION .....	2-43	DESCRIPTION & OPERATION .....	4-40
SPARK PLUG WIRES .....	2-46	GENERAL INFORMATION .....	4-40
REMOVAL & INSTALLATION .....	2-47	OPERATIONAL THERMO-SENSOR CHECK .....	4-41
TESTING .....	2-46		

# 10-24 MASTER INDEX

THERMO-SWITCH . . . . .	5-24	15/20 HP (362cc) MOTORS . . . . .	2-65
CHECKING CONTINUITY . . . . .	5-25	IDLE SPEED . . . . .	2-67
DESCRIPTION & OPERATION . . . . .	5-24	IGNITION TIMING . . . . .	2-67
OPERATIONAL CHECK . . . . .	5-25	SHIFTER . . . . .	2-66
THERMOSTAT . . . . .	5-19	STARTER LOCK-OUT . . . . .	2-67
EXPLODED VIEWS . . . . .	5-21	THROTTLE CABLES . . . . .	2-65
REMOVAL & INSTALLATION . . . . .	5-19	THROTTLE LINK ROD . . . . .	2-65
THROTTLE BODY & INTAKE ASSEMBLY . . . . .	3-43	25 HP MOTORS . . . . .	2-67
GENERAL INFORMATION . . . . .	3-43	IGNITION TIMING . . . . .	2-70
REMOVAL & INSTALLATION . . . . .	3-43	GEARCASE SHIFT ROD . . . . .	2-69
30J/40 HP MOTORS . . . . .	3-43	IDLE SPEED . . . . .	2-69
40J/50/60 HP MOTORS . . . . .	3-44	STARTER LOCK-OUT . . . . .	2-69
65J/75/90 HP MOTORS . . . . .	3-46	THROTTLE LINK ROD . . . . .	2-67
80J/115 HP MOTORS . . . . .	3-47	THROTTLE/SHIFTER CABLES . . . . .	2-67
105J/150 HP MOTORS . . . . .	3-49	CARBURETED 30/30J/40 HP MOTORS . . . . .	2-70
200 HP & NON-VVT 225 HP (3.4L) MOTORS . . . . .	3-50	DASH-POT . . . . .	2-73
250 HP & VVT 225 HP (3.4L) MOTORS . . . . .	3-52	IDLE SPEED . . . . .	2-72
300/350 HP (5.3L) MOTORS . . . . .	3-55	IGNITION TIMING . . . . .	2-73
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	SHIFTER . . . . .	2-71
GENERAL INFORMATION . . . . .	3-73	STARTER LOCK-OUT . . . . .	2-72
REMOVAL & INSTALLATION . . . . .	3-74	SYNCHRONIZATION . . . . .	2-72
TESTING . . . . .	3-73	THROTTLE CABLE . . . . .	2-71
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE LINK ROD . . . . .	2-70
GENERAL INFORMATION . . . . .	3-73	30J/40 HP EFI MOTORS . . . . .	2-74
REMOVAL & INSTALLATION . . . . .	3-74	IDLE SPEED . . . . .	2-75
TESTING . . . . .	3-73	IGNITION TIMING . . . . .	2-75
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE LINK ROD . . . . .	2-74
GENERAL INFORMATION . . . . .	3-73	THROTTLE & SHIFT CABLES . . . . .	2-74
REMOVAL & INSTALLATION . . . . .	3-74	40J/50/60 HP MOTORS . . . . .	2-75
TESTING . . . . .	3-73	IDLE SPEED . . . . .	2-76
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	IGNITION TIMING . . . . .	2-76
GENERAL INFORMATION . . . . .	3-73	SHIFT CABLE . . . . .	2-76
REMOVAL & INSTALLATION . . . . .	3-74	THROTTLE LINK & CABLE . . . . .	2-75
TESTING . . . . .	3-73	THROTTLE POSITION SENSOR (TPS) . . . . .	2-77
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	65J/75/90 HP MOTORS . . . . .	2-77
GENERAL INFORMATION . . . . .	3-73	IDLE SPEED . . . . .	2-78
REMOVAL & INSTALLATION . . . . .	3-74	IGNITION TIMING . . . . .	2-78
TESTING . . . . .	3-73	SHIFT CABLE . . . . .	2-77
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE LINK & CABLE . . . . .	2-77
GENERAL INFORMATION . . . . .	3-73	THROTTLE POSITION SENSOR . . . . .	2-78
REMOVAL & INSTALLATION . . . . .	3-74	80J/115 HP MOTORS . . . . .	2-78
TESTING . . . . .	3-73	IDLE SPEED . . . . .	2-82
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	IGNITION TIMING . . . . .	2-82
GENERAL INFORMATION . . . . .	3-73	SHIFT CABLE . . . . .	2-79
REMOVAL & INSTALLATION . . . . .	3-74	SYNCHRONIZATION . . . . .	2-80
TESTING . . . . .	3-73	THROTTLE BODY PICK-UP TIMING . . . . .	2-78
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE CABLE . . . . .	2-79
GENERAL INFORMATION . . . . .	3-73	THROTTLE POSITION SENSOR . . . . .	2-81
REMOVAL & INSTALLATION . . . . .	3-74	105J/150 HP MOTORS . . . . .	2-82
TESTING . . . . .	3-73	IDLE SPEED . . . . .	2-86
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	IGNITION TIMING . . . . .	2-86
GENERAL INFORMATION . . . . .	3-73	SHIFT CABLE . . . . .	2-86
REMOVAL & INSTALLATION . . . . .	3-74	SYNCHRONIZATION . . . . .	2-82
TESTING . . . . .	3-73	THROTTLE CABLE & LINK . . . . .	2-84
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE POSITION SENSOR . . . . .	2-83
GENERAL INFORMATION . . . . .	3-73	200 HP & NON-VVT 225 HP (3.4L) MOTORS . . . . .	2-87
REMOVAL & INSTALLATION . . . . .	3-74	IDLE SPEED . . . . .	2-90
TESTING . . . . .	3-73	IGNITION TIMING . . . . .	2-90
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	SHIFT CABLE . . . . .	2-90
GENERAL INFORMATION . . . . .	3-73	SYNCHRONIZATION & TPS . . . . .	2-87
REMOVAL & INSTALLATION . . . . .	3-74	THROTTLE LINK & CABLE . . . . .	2-89
TESTING . . . . .	3-73	250 HP & VVT 225 HP (3.4L) MOTORS W/MECHANICAL . . . . .	2-90
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE/SHIFT CONTROLS . . . . .	2-90
GENERAL INFORMATION . . . . .	3-73	IDLE SPEED . . . . .	2-92
REMOVAL & INSTALLATION . . . . .	3-74	IGNITION TIMING . . . . .	2-92
TESTING . . . . .	3-73	SHIFT CABLE . . . . .	2-91
THROTTLE POSITION SENSOR (TPS) . . . . .	3-73	THROTTLE CABLE . . . . .	2-91
GENERAL INFORMATION . . . . .	3-73	THROTTLE VALVE . . . . .	2-91
REMOVAL & INSTALLATION . . . . .	3-74	250 HP (3.4L) AND 300/350 HP (5.3L) MOTORS WITH ELECTRONIC . . . . .	2-92
TESTING . . . . .	3-73	THROTTLE/SHIFT CONTROLS . . . . .	2-92



<p><b>TOOLS</b> ..... 1-19</p> <p>  ELECTRONIC TOOLS ..... 1-23</p> <p>  HAND TOOLS ..... 1-19</p> <p>  MEASURING TOOLS ..... 1-25</p> <p>  OTHER COMMON TOOLS ..... 1-22</p> <p>  SPECIAL TOOLS ..... 1-23</p> <p><b>TOOLS AND SPARE PARTS</b> ..... 1-12</p> <p><b>TRIM &amp; TILT SYSTEMS</b> ..... 8-2</p> <p>  INTRODUCTION ..... 8-2</p> <p><b>TROUBLE CODE CHARTS</b> ..... 3-41</p> <p><b>TROUBLESHOOTING</b></p> <p>  BASIC OPERATING PRINCIPLES ..... 1-13</p> <p>  CARBURETED FUEL SYSTEM ..... 3-15</p> <p>  CHARGING SYSTEMS ..... 4-43</p> <p>  COOLING SYSTEM ..... 5-11</p> <p>  EFI SYSTEM ..... 3-39</p> <p>  ELECTRICAL SYSTEMS ..... 4-6</p> <p>  GEARCASE ..... 7-3</p> <p>  IGNITION &amp; CHARGING SYSTEM ..... 4-12</p> <p>  SINGLE TILT RAM POWER TRIM/TILT SYSTEMS (SMALL MOTOR) . . . 8-5</p> <p>  STARTER MOTOR CIRCUIT ..... 4-47</p> <p>  TILLER HANDLE ..... 9-15</p> <p>  3-RAM POWER TRIM/TILT SYSTEM (LARGE MOTOR) ..... 8-18</p> <p><b>TUNE-UP</b> ..... 2-39</p> <p>  COMPRESSION TESTING ..... 2-40</p> <p>  ELECTRICAL SYSTEM CHECKS ..... 2-48</p> <p>  ELECTRONIC IGNITION SYSTEMS ..... 2-48</p> <p>  FUEL SYSTEM CHECKS ..... 2-49</p> <p>  IDLE SPEED ..... 2-51</p> <p>  INTRODUCTION ..... 2-39</p> <p>  SPARK PLUG WIRES ..... 2-46</p> <p>  SPARK PLUGS ..... 2-42</p> <p>  TCI UNIT AIR GAP ..... 2-47</p> <p>  TUNE-UP SEQUENCE ..... 2-39</p> <p>TUNE-UP SEQUENCE ..... 2-39</p> <p><b>UNDERSTANDING &amp; TROUBLESHOOTING ELECTRICAL SYSTEMS</b> 4-2</p> <p>  BASIC ELECTRICAL THEORY ..... 4-2</p> <p>  ELECTRICAL COMPONENTS ..... 4-2</p> <p>  ELECTRICAL TESTING ..... 4-6</p> <p>  PRECAUTIONS ..... 4-8</p> <p>  TEST EQUIPMENT ..... 4-4</p> <p>  TROUBLESHOOTING ELECTRICAL SYSTEMS ..... 4-6</p> <p>  WIRE &amp; CONNECTOR REPAIR ..... 4-8</p> <p><b>VALVE CLEARANCE</b> ..... 2-93</p> <p>  VALVE LASH ADJUSTMENT ..... 2-93</p> <p><b>VALVE LASH</b> ..... 2-93</p> <p>  2.5 HP MOTORS ..... 2-93</p> <p>  4 HP MOTORS ..... 2-94</p> <p>  6/8 HP MOTORS ..... 2-94</p> <p>  9.9 HP (212cc) &amp; 9.9 HP (232cc) MOTORS ..... 2-95</p> <p>  9.9/15 HP (323cc), 15/20 HP (362cc) &amp; 25 HP MOTORS ..... 2-97</p> <p>  30/30J/40 HP MOTORS ..... 2-98</p> <p>  40J/50/60 HP MOTORS ..... 2-99</p> <p>  65J/75/90 HP &amp; 80J/115 HP MOTORS ..... 2-100</p>	<p>105J/150 HP MOTORS ..... 2-102</p> <p>200/225/250 HP (3.4L) MOTORS ..... 2-104</p> <p>300/350 HP (5.3L) MOTORS ..... 2-106</p> <p>VAPOR SEPARATOR TANK (VST) ..... 3-60</p> <p>  GENERAL INFORMATION ..... 3-60</p> <p>  OVERHAUL ..... 3-61</p> <p>  REMOVAL &amp; INSTALLATION ..... 3-61</p> <p>  TESTING ..... 3-61</p> <p>  VST EXPLODED VIEWS ..... 3-63</p> <p>VHF-FM RADIO ..... 1-10</p> <p>WARNING BUZZER/HORN ..... 4-63</p> <p>  TESTING ..... 4-63</p> <p>WATER DETECTION SWITCH ..... 3-82</p> <p>  CHECKING &amp; SERVICE ..... 3-82</p> <p>WATER PUMP ..... 5-14</p> <p>  EXPLODED VIEWS ..... 5-17</p> <p>  INSPECTION &amp; OVERHAUL ..... 5-16</p> <p>  REMOVAL &amp; INSTALLATION ..... 5-14</p> <p>WINTERIZATION ..... 2-108</p> <p>  PREPPING ..... 2-109</p> <p>  STORAGE CHECKLIST ..... 2-109</p> <p>  WHERE TO STORE ..... 2-109</p> <p>WIRE &amp; CONNECTOR REPAIR ..... 4-8</p> <p><b>WIRING DIAGRAMS</b> ..... 4-63</p> <p>  INDEX ..... 4-63</p> <p>YAMAHA DIGITAL ELECTRONIC CONTROLS ..... 9-10</p> <p>  CONTROL CIRCUITS ..... 9-13</p> <p>  EXPLODED VIEWS ..... 9-11</p> <p>  GENERAL INFORMATION ..... 9-10</p> <p>YAMAHA EFI 4-STROKE INJECTION ..... 3-38</p> <p>YAMAHA MICROCOMPUTER IGNITION SYSTEMS (YMIS) ..... 4-39</p> <p>  GENERAL INFORMATION ..... 4-39</p> <p>  TROUBLESHOOTING ..... 4-39</p> <p><b>3-RAM POWER TRIM/TILT SYSTEM (LARGE MOTOR)</b> ..... 8-18</p> <p>  DESCRIPTION &amp; OPERATION ..... 8-18</p> <p>  MAINTENANCE ..... 8-20</p> <p>    CHECKING HYDRAULIC FLUID LEVEL ..... 8-20</p> <p>    POWER TRIM/TILT SWITCH ..... 8-24</p> <p>    PURGING AIR FROM THE SYSTEM ..... 8-20</p> <p>  POWER TRIM/TILT SWITCH ..... 8-24</p> <p>  TESTING ..... 8-24</p> <p>  PTT ASSEMBLY (DUAL TRIM RAM) ..... 8-27</p> <p>    ASSEMBLY ..... 8-34</p> <p>    CLEANING &amp; INSPECTION ..... 8-30</p> <p>    DISASSEMBLY ..... 8-29</p> <p>    REMOVAL &amp; INSTALLATION ..... 8-27</p> <p>  PTT RELAY ..... 8-24</p> <p>    TESTING ..... 8-24</p> <p>  TRIM/TILT MOTOR ..... 8-25</p> <p>    SERVICE ..... 8-25</p> <p>    TESTING ..... 8-25</p> <p>  TRIM SENSOR ..... 8-26</p> <p>    ADJUSTMENT ..... 8-26</p> <p>    TESTING ..... 8-27</p> <p>  TROUBLESHOOTING ..... 8-21</p> <p>    HYDRAULIC TESTING ..... 8-22</p> <p>    PRELIMINARY INSPECTION ..... 8-21</p> <p>    SYMPTOM DIAGNOSIS ..... 8-21</p>
--	---