



Presents

Repair Manuals from

SELOC.

Contents of this manual:

1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, AND POLISHING	1-1
CONTROLLING CORROSION	1-1
PROPELLERS	1-2
FUEL SYSTEM	1-8
LOADING	1-10
FLOTATION	1-11
EMERGENCY EQUIPMENT	1-13
COMPASS	1-15
STEERING	1-18
ANCHORS	1-18
MISCELLANEOUS EQUIPMENT	1-18
NAVIGATION	1-19

2 TUNING

INTRODUCTION	2-1
TUNING FOR PERFORMANCE	2-1
MECHANICAL TASKS	2-2
IGNITION	2-5
FUEL SYSTEM	2-8
Adjusting Idle Speed and Mixture	2-10

3 ENGINE

INTRODUCTION/CHPT. COVERAGE	3-1
GENERAL PRINCIPLES	3-1
Piston Strokes & Combustion	3-2
Valve Timing	3-3
Engine Types	3-4
TROUBLESHOOTING	3-7
Cranking System	3-7
Ignition System	3-7
Compression Test	3-8
Mechanical Problems	3-9
Excessive Oil Consumption	3-10
ENGINE REMOVAL, INSTALLATION AND ALIGNMENT	3-11
OIL PUMP SERVICE -- All Models	3-12

PAN INSTALLATION -- All Models	3-16
--------------------------------	------

INTAKE MANIFOLD SERVICE	3-17
-------------------------	------

EXHAUST MANIFOLD SERVICE	3-21
--------------------------	------

CYLINDER HEAD SERVICE	3-24
-----------------------	------

Removal	3-24
---------	------

Head Disassembling	3-25
--------------------	------

Cleaning & Inspecting	3-25
-----------------------	------

Valve Mechanism Service	3-28
-------------------------	------

Valve Guide	3-28
-------------	------

Valve Seats	3-29
-------------	------

Valves	3-30
--------	------

Valve Springs	3-30
---------------	------

Hydraulic Lifters	3-31
-------------------	------

Head Assembling	3-32
-----------------	------

Head Installation	3-33
-------------------	------

PISTON, RING, & ROD SERVICE	3-35
-----------------------------	------

Removal	3-35
---------	------

Cleaning & Inspecting	3-37
-----------------------	------

Assembling	3-39
------------	------

CYLINDER BLOCK SERVICE	3-43
------------------------	------

Piston & Rod Installation	3-44
---------------------------	------

VALVE LASH ADJUSTMENTS	3-46
------------------------	------

Mercury Marine Engines	3-46
------------------------	------

GMC 4- & 6-Cyl. In-Line	3-48
-------------------------	------

GMC V6 & V8	3-49
-------------	------

Ford V8 Only	3-50
--------------	------

TIMING CHAIN, GEAR AND CAMSHAFT	3-51
------------------------------------	------

GMC 4- & 6-Cyl. In-Line	3-52
-------------------------	------

GMC V6 & V8	3-55
-------------	------

Early Mercury Marine	3-58
----------------------	------

Mercury Marine & Ford	3-62
-----------------------	------

CAMSHAFT BEARING SERVICE	
--------------------------	--

ALL UNITS	3-65
-----------	------

Lift Measurement GMC Only	3-66
---------------------------	------

Lift Measurement Mercury	
--------------------------	--

Marine & Ford	3-67
---------------	------

3 ENGINE (CONTINUED)

CRANKSHAFT ROD & MAIN BRGS.	3-67
GMC 4- & 6-Cyl. In-Line	3-67
GMC V6 & V8	3-69
Mercury Marine & Ford	3-75
Crankshaft Installation	3-76

4 FUEL

INTRODUCTION/CHPT. COVERAGE 4-1

TROUBLESHOOTING	4-1
Excessive Fuel Consumption	4-2
Engine Surge	4-2
Rough Engine Idle	4-2

FUEL PUMPS AND FILTERS	4-2
Single-Diaphragm Pump	4-3
Dual-Diaphragm Pump	4-3
Pump Pressure Test	4-4
Pump Volume Test	4-4
Fuel Line Test	4-5
Fuel Pump Removal/Installation	4-6
Fuel Filter Replacement	4-6
Flame Arrestor Cleaning	4-6
Water Separating Filter	4-7

MODERN FUELS	4-7
"Sour" Fuel	4-8

CARBURETORS, GENERAL INFO. 4-9

ROCHESTER BC	4-9
Removal/Disassembling	4-9
Assembling	4-12
Adjusting	4-14

CARTER RBS	4-15
Description & Operation	4-15
Disassembling	4-18
Assembling	4-22
Bench Adjustments	4-26
Synchronizing Dual Carbs.	4-27

ROCHESTER 2GC & MerCarb	4-27
Disassembling	4-27
Assembling	4-30
Bench Adjustments	4-33

ROCHESTER 4MV AND 4MC	4-35
Description	4-35
Disassembling	4-39
Assembling	4-43
Bench Adjustments	4-46

HOLLEY CARBURETORS

TWO-BARREL - 2300C

FOUR-BARREL - 4150, 4160 & 4011 4-50

Description & Operation	4-50
Disassembling - 2300C,	
4150 & 4160	4-55
Cleaning & Inspecting	4-56
Assembling	4-58
Tuning Adjustments	4-60

Disassembling - 4011	4-64
Cleaning & Inspecting	4-71
Assembling	4-73
Tuning Adjustments	4-80

EFI (ELECTRONIC FUEL INJECTION)

	4-84
Description & Operation	4-84
Manifold Pressure	4-84
ECU (Electronic Control)	4-84
Fuel Pump & Routing	4-84
Air Temperature Sensor	4-84
Auxiliary Air Valve	4-85
Manifold Absolute Pressure (MAP) Sensor	4-85
Coolant Temperature Sensor	4-65
Throttle Position Sensor	4-86
Fuel Injectors	4-86
Fuel Rail	4-87
Fuel Pressure Regulator	4-87
Oil Pressure Sensor	4-87
Throttle Shutter	4-87
Electric High Pressure Fuel Pump	4-87
Water Separating Filter	4-88
RPM Sensor	4-88
Electronic Control (ECU)	4-88

Troubleshooting EFI	4-89
Installed Injector Test	4-89
Voltage to Elec. Pump Test	4-91
Testing Fuel Pump Pressure	4-92
Testing Injector Harness	4-92
Testing Fuel Injectors	4-92
Air Temp. Sensor Check	4-93
Coolant Temp. Sensor Test	4-93
Throttle Position Sensor Test	4-93
EFI Maintenance	4-93
Leaded Gasoline & Gasohol	4-94

SERVICING EFI	4-94
Removal	4-94
Cleaning & Inspecting	4-95
Installation	4-95
Special Timing Words	4-96

5 IGNITION

DESCRIPTION	5-1
Standard Ignition System	5-1
Ballast Resistor	5-1
Shift Cutout Switch	5-2
Ignition Timing	5-2
Thunderbolt IV System	5-2
TROUBLESHOOTING	5-3
Compression	5-3
General Tests	5-4
Condenser Test	5-5
Secondary Circuit Test	5-6
Ignition Voltage Tests	5-6
Spark Plug Troubleshooting	5-9
Spark Plug Evaluation	5-11
Polarity Check	5-12
DISTRIBUTOR SERVICE	5-12
Removal	5-13
SERVICING A DELCO-REMY	5-14
Disassembling - from a	
4- or 6- cylinder engine	5-14
Assembling	5-16
Disassembling from a	
GMC V8	5-16
Assembling	5-19
SERVICING A MALLORY	5-20
Disassembling from	
a V8 engine	5-20
Assembling	5-21
SERVICING A MERCURY MARINE	5-22
Disassembling from a V8	5-22
Assembling	5-23
SERVICING AN AUTOLITE	
OR PRESTOLITE	5-24
Disassembling from a V8	5-24
Assembling	5-26
ADJUSTING POINT GAP	
ALL DISTRIBUTORS	5-27
DISTRIBUTOR INSTALLATION	5-28
MCM 185 229 CID	5-28
All Other Engines	5-29
Adjusting Dwell	5-29
Adjusting Timing	5-29
DDIS (DIGITAL DISTRIBUTORLESS	
IGNITION SYSTEM)	5-31

6 ELECTRICAL

INTRODUCTION	6-1
BATTERIES	6-1
JUMPER CABLES	6-5
DUAL BATTERY INSTALLATION	6-6
GAUGES AND HORNS	6-7
Oil and Temperature Gauges	6-7
Warning Lights	6-7
Fuel Gauges	6-8
Troubleshooting	6-10
Tachometer	6-10
Horns	6-11
CHARGING SYSTEM	6-11
Alternator	6-12
Troubleshooting	6-13
Servicing Charging System	
with Separate Regulator	6-16
Servicing Delcotron Alternator	6-18
Servicing Valeo Alternator	6-21
Troubleshooting	6-21
Removal	6-22
Cleaning & Testing Brushes	6-23
Testing Alternator	6-23
Assembling & Installation	6-26
CRANKING SYSTEM	6-27
Troubleshooting	6-27
Delco-Remy Cranking Motor	6-31
Description & Operation	6-31
Servicing	6-32
Testing	6-32
Assembling	6-36
Autolite Cranking Motor	6-37
Description & Operation	6-38
Disassembling	6-38
Bench Tests	6-39
Assembling	6-41
Prestolite Cranking Motor	6-42
Description & Operation	6-42
Disassembling	6-42
Assembling	6-44

7 REMOTE CONTROLS

INTRODUCTION	7-1
SHIFT/STEERING CABLE	7-1
EARLY TYPE SHIFT CABLE	
SERVICE -- PRIOR TO 1973	7-2

7 REMOTE CONTROLS (CONTINUED)

EARLY TYPE SHIFT (Continued)	
Attaching Shift Cable Mounted on Starboard Side	7-2
Adjusting Shift Cable Mounted on Starboard Side	7-2
Attaching Shift Cable Mounted on Port Side	7-3
Adjusting Shift Cable Mounted on Port Side	7-4
LATE TYPE SHIFT CABLE SERVICE	
1973 TO 1982	7-5
Installation Dimensions	7-5
Shift Cable Installation	7-5
Shift Cable Adjustment	7-5
SHIFT CABLES SINCE 1983	
MODELS R, MR, AND ALPHA	7-6
Upper Shift Cable Installation	7-6
Lower Shift Cable Installation	7-7
BRAVO SHIFT CABLE SERVICE	7-7
Shift Cable Adjustment	
Stern Drive Removed	7-8
Shift Cable Adjustment	
Stern Drive Installed	7-9
Cut-Out Switch -- Lever	
Position Adjustment	7-11
Reverse Lock Valve Adjustment	7-12
COMMANDER CONTROL	
SHIFT BOX	7-13
Removal/Disassembling	7-13
Cleaning & Inspecting	7-20
Assembling	7-22
STEERING SYSTEMS	7-32
DIRECTIONAL INDICATOR SYS.	7-32
Disassembling	7-32
Cleaning & Inspecting	7-34
Assembling	7-34
ROTARY STEERING SERVICE	7-35
Disassembling	7-37
Cleaning & Inspecting	7-37
Assembling	7-38
POWER STEERING	
DESCRIPTION & OPERATION	7-39
SYSTEM MAINTENANCE	7-40
Adding Hydraulic Fluid	7-40
Bleeding System	7-41
Belt Adjustment	7-41
Actuator Valve Adjustment	7-43
POWER STEERING COOLER	7-44

8 TRIM/TILT

INTRODUCTION	8-1
MECHANICAL TILT MECHANISM	8-1
HYDRAULIC SYSTEM	8-2
System Operation	8-2
UP Circuit	8-2
UP and DOWN Circuit	8-4
Trailing/Launching	8-4
GENERAL SERVICE INSTRUCTIONS	8-6
TROUBLESHOOTING	8-7
Mechanical Problems	8-7
Electrical Problems	8-9
TESTING SYSTEM COMPONENTS	8-10
PURGING AIR ("BLEEDING") SYS.	8-10
Early Model Systems -- Both	
Hoses Connected to Fwd.	
End of Cylinder	8-10
Late Model Systems -- One	
Hose connected to Each	
End of Cylinder	8-12
TRIM SENDER SYSTEMS	8-14
Disassembling	8-14
Assembling	8-14
Adjustments	8-15
REVERSE LOCK VALVE	8-16
Description	8-16
Disassembling	8-16
Assembling	8-16
Adjustment	8-17
PUMP MOTOR	8-17
Troubleshooting	8-17
Disassembling	8-18
Cleaning & Testing	8-18

9 COOLING

DESCRIPTION	9-1
TROUBLESHOOTING	9-4
SERVICE	9-5
DRAINING	9-6
In-Line Engines w/Std. Sys.	9-8
In-Line Engines w/Closed Sys.	9-8
V8 Engines w/Std. Sys.	9-10
V8 Engines w/Closed Sys.	9-11
WATER PUMP	9-11
THERMOSTAT	9-12

HEAT EXCHANGER		Reverse Bearing Carrier	10-30
In-Line Engines	9-14	Propeller Shaft	10-31
V8 Engines	9-14	Lower Unit Assembling	10-33
		Forward Gear Backlash	10-37
FILLING SYSTEM	9-15	Reverse Gear Backlash	10-37
EXHAUST MANIFOLD		Pinion Gear Shimming	10-40
GMC In-Line Engines	9-17	Forward & Reverse	
470 Engine	9-18	Gear Shimming	10-42
Ford V8 Engines	9-19	Water Pump Installation	10-46
GMC V8 Engines	9-20	Lower Unit Installation	10-48
		UPPER GEAR HOUSING TO	
EXHAUST SHUTTER	9-22	LOWER UNIT ASSEMBLING	10-51
STERN DRIVE WATER PUMP	9-22	STERN DRIVE INSTALLATION	10-53
Lower Unit Removal	9-22	TRIM CYLINDER INSTALLATION	10-57
Pump Installation	9-24		
Lower Unit Installation	9-25	PROPELLER INSTALLATION	10-57
		STERN DRIVE LUBRICATION	10-57
BRAVO WATER PUMP ON ENGINE	9-26		
Disassembling	9-26	BRAVO STERN DRIVE	10-59
Cleaning & Inspecting	9-27	INTRODUCTION	10-59
Assembling	9-29	OPERATION	10-59
		TROUBLESHOOTING	10-60
10 STERN DRIVE		BRAVO SERVICE	10-63
		Propeller Removal	10-63
NOTE		Draining Lubricant	10-64
PAGES 10-2 THRU 10-58 COVER		Separating Stern Drive	
ALL UNITS, EXCEPT BRAVO		From Bell Housing	10-65
PAGES 10-58 THRU 10-110 COVER		Separating Upper Gear Case	
BRAVO STERN DRIVE		Housing From Lower Unit	10-66
		Upper Gear Case Service	10-67
INTRODUCTION	10-1	Rear & Top Cover Removal	10-68
OPERATION	10-2	Bearing Removal	10-69
TROUBLESHOOTING	10-3	U-Joint Shaft Removal	10-70
SERVICE PRECAUTIONS	10-4	Clutch Disassembling	10-74
PROPELLER REMOVAL	10-5	Shifter Bushings & Seal	10-76
TRIM CYLINDER REMOVAL	10-6	Cleaning & Inspecting	10-77
STERN DRIVE REMOVAL	10-7	Assembling	10-79
UPPER GEAR HOUSING		Bearing & Sleeve Instl.	10-79
Disassembling	10-11	Shifter Bushing & Seal	10-80
Cleaning & Inspecting	10-12	Clutch Assembly	10-81
U-Joint, Drive Gear		U-Joint Shaft Assembly	10-82
and Bearing Disassembling	10-15	Spacer & Rolling Torque	10-84
Assembling	10-16		
Upper Gear Housing Assemb.	10-18	Lower Unit Service	10-90
Upper Driveshaft and Driven		Disassembling	10-90
Gear Assembling	10-19	Bearing Carrier and	
Adjustments	10-19	Propeller Shaft	10-91
Bearing Preload Adjust.	10-19	Driveshaft	10-92
Driven Gear Shimming	10-21	Propeller Shaft Bearing	10-95
U-Joint Bearing & Bearing		Cleaning & Inspecting	10-96
Assembly Installation	10-21	Assembling Lower Unit	10-96
Drive Gear Shimming	10-22	Driveshaft	10-96
		Bearing Carrier	10-98
LOWER UNIT		Drive Gear & Bearing	10-99
Housing Removal	10-23	Driveshaft Bearing Races	10-99
Disassembling	10-23	Drive Gear & Driveshaft	10-100
Cleaning & Inspecting	10-30		

10 STERN DRIVE (CONTINUED)

BRAVO LOWER UNIT Continued)

Shimming 10-102

Pinion Gear Height 10-102

Driveshaft Preload 10-102

Backlash & Rolling Torque 10-103

Mating Lower Unit To

Upper Gear Case Housing 10-106

Mating Stern Drive to

Bell Housing 10-107

Propeller Installation 10-109

Stern Drive Lubrication 10-110

11 BELL HOUSING

INTRODUCTION 11-1

TROUBLESHOOTING 11-1

SERVICE PROCEDURES 11-1

GIMBAL HOUSING BALL BEARING

Removal 11-2

Installation 11-3

TRANSOM SHIFT CABLE

Removal 11-4

Installation 11-7

EXHAUST BELLOWS

Removal 11-9

Installation 11-10

U-JOINT BELLOWS

Removal 11-12

Installation 11-13

BELL HOUSING

Removal 11-14

Disassembling 11-14

GIMBAL RING

Removal 11-15

Disassembling 11-18

Cleaning & Inspecting 11-18

Assembling & Installation 11-19

BELL HOUSING

Assembling & Installation 11-21

12 GIMBAL HOUSING

INTRODUCTION 12-1

TRANSOM PLATE

Removal 12-1

Cleaning & Inspecting 12-2

GIMBAL HOUSING ASSEMBLING 12-2

GIMBAL HOUSING & TRANSOM

PLATE INSTALLATION 12-3

CONNECTING HYDRAULIC HOSES

In-Line Engines 12-4

V8 Engines 12-4

13 ENGINE REMOVAL/INSTALLATION

INTRODUCTION 13-1

REMOVAL 13-2

INSTALLATION

In-Line Engine 13-3

Throttle Cable Installation
and Adjustment 13-5

V8 Engine 13-6

Throttle Cable Installation
and Adjustment 13-8

14 MAINTENANCE

INTRODUCTION 14-1

ENGINE SERIAL NUMBERS 14-1

STERN DRIVE IDENTIFICATION
AND SERIAL NUMBERS 14-2

SHIFT IDENTIFICATION ALL UNITS,
EXCEPT BRAVO 14-5

BELOW WATERLINE SERVICE 14-6

ENGINE FLUIDS 14-7

OFF-SEASON STORAGE 14-8

STERN DRIVE LUBRICATION 14-14

Filling/Draining 14-12

Models 1, 1A, 1B, 1C 14-14

All Others, Incl. Bravo 14-15

PRE-SEASON PREPARATION 14-17

APPENDIX

CONVERSIONS

Metric A-2

Drill Size A-3

TORQUE VALUES A-4

TUNE-UP SPECIFICATIONS A-6

CARBURETOR SPECIFICATIONS A-14

ENGINE SPECIFICATIONS

MCM888/225S/223/250/260/320 A-16

150/160/165 6-Cyl. In-Line A-20

APPENDIX (CONTINUED)**ENGINE SPECIFICATION (Continued)**

MCM470/485/488/165/170MR/ 180/190MR/MCM185R/ 185MR/205MR	A-22
MCM110/120/120MR 4-Cyl. MCM140 6-Cyl. In-Line MCM140/140MR 4-Cyl.	A-26
MCM898/228/200MR/230MR MCM250/260/270/260MR 330IITR/IITRS/340 MCM330TR	A-30
UPPER DRIVESHAFT GEAR RATIO	A-34
LOWER UNIT BACKLASH	A-36
WIRE IDENTIFICATION AND ROUTING	

Instrument Cluster with Warning Light Thunderbolt Ignition	A-37
Instrument Panel Model 120, 140, 165 (Check Serial Numbers)	A-38 A-39
Model 898	A-40
Model 888, 225-S, 233 (Check Serial Numbers)	A-41
Model 470 & 485 w/air-cooled voltage regulator	A-42

Model 470 & 485 w/water-cooled voltage regulator	A-43
Model 120R/140R	A-44
MCM 120R/140R & 3.0 Litre without fuse	A-45
MCM 120R/140R & 3.0 Litre with fuse	A-46
MCM 470/488	A-47
MCM 470R/488R w/o fuse	A-48
MCM 470R/488R with fuse	A-49
MCM 898R/228R/260R/230 also 5.0 & 5.7 Litre	A-50
MCM 200 and 898R with fuse	A-51
MCM 165/170MR/180/190MR	A-52
MCM 185/185R V6	A-53
MCM 205 V6	A-54
MCM 230/228R/260R, also 5.0 & 5.7 Litre with fuse	A-55
MCM 320 with EFI	A-56
MCM 330 & 7.4 Litre w/o fuse	A-57
MCM 330 & 7.4 Litre with fuse	A-58

DDIS (DIGITAL DISTRIBUTORLESS IGNITION SYSTEM)	A-59
Power Trim circuit w/double solenoid	A-60
Power Trim circuit w/one solenoid	A-61
Power Trim w/late push button w/two solenoids	A-62
Prestolite Power Trim	A-63
Oil Dyne Series IV Since 1983	A-64
Commander side mount controls w/power trim/tilt	A-65