



Presents

Repair Manuals from

SELOC.

Contents of this manual:

1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, POLISHING	1-1
CONTROLLING CORROSION	1-1
PROPELLERS	1-3
FUEL SYSTEM	1-8
LOADING	1-10
HORSEPOWER	1-11
FLOTATION	1-11
EMERGENCY EQUIPMENT	1-13
COMPASS	1-15
POWER STEERING SYSTEM	1-18
ANCHORS	1-18
MISCELLANEOUS EQUIPMENT	1-18
BOATING ACCIDENT REPORTS	1-19
NAVIGATION	1-19

2 TUNING

INTRODUCTION	2-1
TUNING FOR PERFORMANCE	2-1
MECHANICAL TASKS	2-1
IGNITION	2-5
FUEL SYSTEM	2-9

3 ENGINE

GENERAL PRINCIPLES	3-1
CHAPTER ORGANIZATION	3-3
TROUBLESHOOTING CHECK	3-4
ENGINE REMOVAL	3-8
ENGINE INSTALLATION	3-12
INTAKE/EXHAUST MANIFOLD	
IN-LINE ENGINES	3-16
INTAKE & EXHAUST MANIFOLDS	
DOUBLE OHC (DOHC) ENGINE	3-17
Exhaust Manifold Removal	3-18
Intake Manifold Removal	3-19
Cleaning & Inspecting	3-20
Intake Installation	3-20
Exhaust Installation	3-21

INTAKE MANIFOLD	
V6 OR V8 ENGINE	3-23

EXHAUST MANIFOLD	
V6 OR V8 ENGINE	3-24

ROCKER ARM SERVICE	3-25
--------------------	------

CYLINDER HEAD	
Removal/Installation	
In-line Pushrod Engine	3-25
Removal/Installation	
Single OHC Engine	3-28
Removal/Installation	
Double OHC (DOHC) Engine	3-29
Removal/Installation	
V6 or V8 Engine	3-33

Head Reconditioning	
Disassembling	3-34
Valve Guides	3-36
Valve Springs	3-36
Valves	3-37
Hydraulic Lifters	3-38
Valve Seats	3-38
Head Assembling	3-40

CAMSHAFT SERVICE	
In-Line Pushrod Engine	3-41
Single OHC Engine	3-44
Double OHC (DOHC) Engine	3-49
V6 and V8 Engines	3-53

VALVE LASH ADJUSTMENT	
In-Line Pushrod Engine	3-55
Single OHC Engine	3-55
Double OHC (DOHC) Engine	3-57
GMC V6 and V8 Engines	3-57
Ford V8 Engines	3-58

TIMING BELT SERVICE	
Single OHC Engine	3-59
Double OHC (DOHC) Engine	3-63

3 ENGINE (Continued)

TIMING CHAIN SERVICE	
V6 and V8 Engines	3-65
PISTON, RING, AND ROD SERVICE	3-68
CRANKSHAFT AND MAIN BEARINGS	3-78
Pushrod and OHC Engines	3-81
V6 and V8 Engines	3-88
OIL PUMP SERVICE	
Pushrod and OHC Engines	3-91
V6 and V8 Engines	3-93

4 FUEL

INTRODUCTION	4-1
Single Diaphragm Pump	4-1
Dual-Diaphragm Pump	4-1
TROUBLESHOOTING	4-1
Rough Engine Idle	4-2
Excessive Fuel Consumption	4-3
Engine Surge	4-3
FUEL LINE AND FUEL PUMP TESTS	4-3
Fuel Line Test	4-4
Fuel Pump Tests	4-4
Pump Pressure Test	4-5
Pump Volume Test	4-5
VOLVO FUEL PUMP SERVICE	4-5
Removal	4-5
Disassembling	4-6
Cleaning & Inspecting	4-7
Assembling	4-7
CARTER FUEL PUMP SERVICE	4-10
Removal	4-10
Installation	4-10
FUEL SYSTEM ACCESSORIES	4-11
Fuel Filter Replacement	4-11
Flame Arrester	4-11
CARBURETORS	
Introduction	4-11
"Sour" Fuel	4-12
SOLEX DOWNDRAFT	4-12
Description & Operation	4-12
Removal & Disassembling	4-13
Cleaning & Inspecting	4-17
Assembling	4-17
Adjustments	4-23

SOLEX SIDE-DRAFT	4-25
Description & Operation	4-25
Removal & Disassembling	4-25
Cleaning & Inspecting	4-28
Assembling	4-28
ROCHESTER 2GC	4-33
Disassembling	4-33
Cleaning & Inspecting	4-36
Assembling	4-36
Bench Adjustments	4-39
ROCHESTER 4MV	4-41
Description	4-41
Disassembling	4-45
Cleaning & Inspecting	4-47
Bench Adjustments	4-51

HOLLEY CARBURETORS	
2300 - TWO-BARREL	
4150, 4160 & 4011 - FOUR-BARREL	4-55
Description	4-55
Disassembling -- Model 2300, 4150 & 4160	4-61
Cleaning & Inspecting	4-62
Assembling	4-64
Tuning Adjustments	4-67
Disassembling - Model 4011	4-70
Cleaning & Inspecting	4-77
Assembling	4-79
Tuning Adjustments	4-86

CARBURETOR SPECIFICATIONS	4-90
---------------------------	------

5 IGNITION

DESCRIPTION	5-1
Ballast Resistor	5-2
Ignition Timing	5-2
IGNITION TROUBLESHOOTING	5-3
Compression	5-3
System Tests	5-3
Voltage Tests	5-6
SPARK PLUG TROUBLESHOOTING	5-9
Evaluation	5-10
Polarity Check	5-12
DISTRIBUTOR SERVICE	5-12
DISTRIBUTOR REMOVAL	5-14
Bosch	5-14
Mallory	5-14
Autolite/Prestolite	5-14
BOSCH DISTRIBUTOR SERVICE	5-14
Disassembling	5-14
Cleaning and Inspecting	5-16
Assembling	5-17

5 IGNITION (Continued)

MALLORY DISTRIBUTOR SERVICE	5-19
Removal & Disassembling	5-19
Cleaning & Inspecting	5-19
Assembling	5-21
AUTOLITE/PRESTOLITE	5-22
Disassembling	5-22
Cleaning & Inspecting	5-23
Assembling	5-25
ADJUSTING POINT GAP	
ALL DISTRIBUTORS	5-25
DISTRIBUTOR INSTALLATION	5-27
Adjusting the Dwell	5-28
Adjusting Ignition Timing	5-29
RENIX ELECTRONIC IGNITION	
SYSTEM -- MODEL AQ171 SERIES	5-30
Description & Operation	5-30
Checking Renix System	5-32
Troubleshooting Renix	5-32
STANDARD ELECTRONIC IGNITION	
SYSTEM -- Late Model V6 & V8	5-35
Description	5-35
Operation	5-36
Troubleshooting	5-36

6 ELECTRICAL

INTRODUCTION	6-1
BATTERIES	6-1
Construction	6-2
Location	6-2
Service	6-2
Jumper Cables	6-5
Storage	6-5
Dual Battery Installation	6-5
GAUGES AND LIGHTS	6-7
Constant Voltage System	6-7
Oil & Temp. Gauges	6-7
Warning Lights	6-7
Thermomelt Sticks	6-8
Fuel Gauges	6-8
Tachometer	6-10
HORNS	6-11
CHARGING SYSTEM	6-11
Alternator -- Description	
and Operation	6-12
Alternator Protection	
During Service	6-13
Troubleshooting	6-13

SERVICING CHARGING SYSTEM	
WITH SEPARATE REGULATOR	
PRESTOLITE	6-16
Disassembling	6-16
Cleaning & Testing	6-16

SERVICING CHARGING SYSTEM	
WITH INTEGRAL REGULATOR	
PRESTOLITE	6-18
Disassembling	6-19
Cleaning & Testing	6-19

SERVICING CHARGING SYSTEM	
WITH SEPARATE REGULATOR	
SEV MARCHAL ALTERNATOR	6-21
Removal & Disassembling	6-21
Bench Testing	6-21
Assembling & Installation	6-24

SERVICING CHARGING SYSTEM	
WITH INTEGRAL REGULATOR	
DELCOTRON	6-25
Disassembling	6-26
Cleaning & Testing	6-26

SERVICING CHARGING SYSTEM	
WITH INTEGRAL REGULATOR	
MOTOROLA	6-28
Disassembling	6-31
Cleaning & Testing	6-31

SERVICING CHARGING SYSTEM	
WITH INTEGRAL REGULATOR	
VALEO	6-34
Troubleshooting	6-34
Removal	6-35
Cleaning & Testing Brushes	6-36
Alternator Testing	6-36
Assembling & Installation	6-39

CRANKING SYSTEM	6-40
Troubleshooting	6-40

AUTOLITE CRANKING MOTOR	6-44
Disassembling	6-44
Cleaning & Inspecting	6-45
Bench Testing	6-45
Assembling	6-47

PRESTOLITE CRANKING MOTOR	6-48
Disassembling	6-48
Cleaning & Inspecting	6-49
Assembling	6-49

BOSCH CRANKING MOTOR	6-51
Removal	6-51
Tests	6-52

6 ELECTRICAL (Continued)

BOSCH CRANKING MTR. (Cont.)

Disassembling	6-53
Cleaning & Inspecting	6-55
Assembling	6-56
Testing Completed Work	6-59
Installation	6-59

DELCO CRANKING MOTOR	6-62
Servicing & Testing	6-62
Assembling	6-64

7 COOLING

DESCRIPTION	7-1
"RAW" WATER STRAINER	7-4
HEAT EXCHANGER	7-5
"RAW" WATER PUMP	7-7
THERMOSTAT	7-9
OIL COOLER	7-9

8 STERN DRIVE

INTRODUCTION	8-1
Operation	8-1
TROUBLESHOOTING	8-2
Stern Drive Noises	8-2
Service Precautions	8-3
PROPELLER SERVICE	8-3
Removal	8-3
"Frozen" Propeller	8-4
Change Propeller Rotation	8-5
Retaining Pawl Adjustment	8-5
Propeller Installation	8-6

STERN DRIVE	
Removal	8-8
Installation	8-10

UPPER GEAR ASSEMBLY	8-12
Disassembling	8-13
Cleaning & Inspecting	8-19
Assembling	8-21

INTERMEDIATE HOUSING	
Disassembling	8-36
Cleaning & Inspecting	8-41
Assembling	8-42

STANDARD PROPELLER LOWER UNIT	8-47
Preparation	8-47
Disassembling	8-48
Cleaning & Inspecting	8-52
Assembling	8-54
EXTENSIONS	8-62

DUOPROP LOWER UNIT	8-63
Propeller Service	8-63
Propeller Removal	8-63
Propeller Installation	8-65
Preparation for Service	8-67
Disassembling	8-68
Cleaning & Inspecting	8-75
Assembling	8-77
Shim Calculations	8-79
Assembling Continues	8-83
Checking Backlash	8-87

9 TILT/TRIM

INTRODUCTION	9-1
Tilt	9-1
Trim	9-1
TROUBLESHOOTING	9-2

TILT SYSTEM SERVICE	
Removal & Disassembling	9-4
Cleaning & Inspecting	9-9
Assembling & Installation	9-9

TRIM SYSTEM SERVICE	
Removal & Disassembling	9-13
Cleaning & Inspecting	9-14
Assembling & Installation	9-15

TRIM SENDER SERVICE	
Replace Wire	9-16

10 STEERING

DESCRIPTION	10-1
SERVO VALVE ADJUSTMENT	10-3
POWER STEERING COOLER	10-4
POWER STEERING KIT	10-4

11 MAINTENANCE

IN-SEASON MAINTENANCE	11-1
Before Starting - First Time	11-1
Every 2 Weeks	11-1
Every 50 Hours	11-1
Every 100 Hours	11-4
Retaining Pawl Adjustment	11-5
OFF-SEASON STORAGE	11-5
PRE-SEASON PREPARATION	11-8
ADJUSTING BOAT TRIM	11-10
ADJUSTING TRIM TAB	11-10
FIBERGLASS HULLS	11-10
BELOW WATERLINE SERVICE	11-11

GIMBAL HOUSING -- EXPLODED DRAWING	11-12
------------------------------------	-------

APPENDIX

METRIC CONVERSION CHART	A-1	Engine AQ190A & 240A	A-49
DRILL SIZE CONVERSION CHART	A-2	Complete AQ205, AQ211A, AQ231, AQ271C & AQ311A & B	A-50
REPLACEMENT PISTONS			
AQ125 AND AQ145 ENGINES	A-3	Model 431	A-51
VALVE ADJUSTING KIT			
AQ125 AND AQ145 ENGINES	A-3	Instrument Panel AQ200AB & AQ290A with ammeter	A-52
TUNE-UP ADJUSTMENTS	A-4		
ENGINE SPECIFICATIONS			
4-Cylinder OHC		Engine AQ200AB, AQ225AB, & AQ290A with ammeter	A-53
AQ120B, AQ125A, AQ140A, AND AQ145A	A-8	Instrument Panel AQ200AB, AQ225AB & AQ290A with voltmeter	A-54
4-Cylinder OHC & DOHC		Engine AQ200AB, AQ225AB & AQ290A with voltmeter	A-55
AQ125B, AQ131A, AQ145B, AQ151A, AND AQ171A	A-14	Complete AQ200C, AQ225C, & AQ225A with ammeter	A-56
4- & 6-Cylinder In-Line		Complete AQ200C AQ225C, & AQ225A with voltmeter	A-57
AQ105A, AQ115A, AQ130A, B, C & D, AQ165A, and AQ170A, B & C	A-20	Instrument Panel AQ280A & AQ225A	A-58
GMC V6 AQ175A	A-25	Engine AQ280A & AQ225A	A-59
GMC V6 Model 431	A-28	Complete Model 740	A-60
GMC V6 305CID, 307CID, 350CID & 454CID	A-32	Instrument Panel with ammeter and with voltmeter -- AQ200D, AQ225D, AQ260A & D, AQ290A, and all other GMC V6, V8, and Ford V8	A-61
Ford V8 AQ190A & AQ240A	A-37	Power Tilt -- USA	A-62
HOLLEY CARBURETOR SPECS.	A-41	Power Tilt -- all except USA	A-63
TORQUE SPECS. AQ190A AND AQ240A	A-41	Power Trim -- Single Station with trim gauge and trim limit switch	A-64
WIRE IDENTIFICATION DWGS.		Power Trim -- Dual Station with trim gauge and trim limit switch	A-65
AQ105A, AQ115A, AQ130A, B, C, & D, AQ165A, & AQ170A	A-42	Power Trim -- Late Type -- Single Station with trim gauge and trim limit switch	A-66
Complete AQ120B, AQ125A & B, AQ140A, AQ145A & B	A-43		
Complete AQ131A, AQ151A & B	A-44		
Complete AQ171A	A-45		
Complete AQ175A	A-46		
Early Model AQ200D, AQ225D, AND AQ255D	A-47		
Instrument Panel AQ190A & AQ240A with voltmeter	A-48		