



Presents

Repair Manuals from

SELOC.

Contents of this manual:

1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, AND POLISHING	1-1
CONTROLLING CORROSION	1-2
PROPELLERS	1-3
FUEL SYSTEM	1-8
LOADING	1-10
HORSEPOWER	1-11
FLOTATION	1-11
EMERGENCY EQUIPMENT	1-13
COMPASS	1-15
POWER STEERING SYSTEM	1-18
ANCHORS	1-18
MISCELLANEOUS EQUIPMENT	1-18
BOATING ACCIDENT REPORTS	1-19
NAVIGATION	1-19

2 TUNING

INTRODUCTION	2-1
TUNING FOR PERFORMANCE	2-1
MECHANICAL TASKS	2-1
IGNITION	2-5
FUEL SYSTEM	2-9
Carburetor Adjustment	2-9
Calibration for High Altitudes	2-10

3 ENGINE

GENERAL PRINCIPLES	3-1
Piston Stroke & Combustion	3-1
Valve Timing	3-3
Engines Covered	3-3
Chapter Organization	3-3
TROUBLESHOOTING	3-3
Cranking System	3-4
Ignition System	3-4

Fuel System	3-4
Compression	3-5
MECHANICAL PROBLEMS	3-6
Leak Test	3-6
Dynamometer Testing	3-6
Excessive Oil Consumption	3-7
Engine Noises	3-7
ENGINE REMOVAL	3-8
General Information	3-8
Removal	3-8
ENGINE INSTALLATION	3-12
INTAKE & EXHAUST MANIFOLDS	
SINGLE OHC ENGINES	3-16
INTAKE & EXHAUST MANIFOLDS	
DOHC ENGINES	3-17
HEAD SERVICE -- SINGLE OHC	3-23
HEAD SERVICE -- DOHC	3-24
HEAD RECONDITIONING	3-28
Valve Guides	3-30
Valve Springs	3-30
Valves	3-31
Valve Mechanism	3-32
Hydraulic Lifters	3-32
CAMSHAFT SERVICE -- SINGLE	
OHC ENGINE	3-35
CAMSHAFT SERVICE -- DOHC	3-39
VALVE LASH ADJUSTMENT	
SINGLE OHC ENGINE	3-43
VALVE LASH ADJUSTMENT	
DOHC ENGINE	3-45
TIMING BELT SERVICE	
SINGLE OHC ENGINE	3-46
TIMING BELT SERVICE	
DOHC ENGINE	3-49
PISTON, RING, AND	
ROD SERVICE	3-51
Removal & Disassembling	3-52
Cleaning & Inspecting	3-53
Pistons and Pins	3-54

3 ENGINE (Continued)		Primary Circuit Test	5-4
Piston Assembling	3-56	Contact Point Test	5-4
Cylinder Bores	3-57	Condenser Test	5-5
Rod Bolts & Nuts	3-58	Secondary Circuit Test	5-6
Rings	3-58	Rotor Test	5-6
All Blocks, Including DOHC	3-60	Ignition Voltage Tests	5-6
CRANKSHAFT & MAIN BEARINGS	3-62	Spark Plug Evaluation	5-9
Checking Main Brg. Clearance	3-63	BOSCH DISTRIBUTOR SERVICE	5-11
Crankshaft Removal	3-66	Removal	5-13
Cleaning	3-67	Disassembling	5-13
Installation	3-68	Cleaning & Inspecting	5-15
BELL HOUSING SERVICE	3-71	Assembling	5-16
OIL PUMP SERVICE	3-72	Installation	5-20
		Adjusting Dwell	5-20
4 FUEL		Adjusting Ignition Timing	5-20
		RENIX ELECTRONIC IGNITION	5-21
INTRODUCTION	4-1	Description and Operation	5-21
Single Diaphragm Fuel Pump	4-1	Checking Renix System	5-22
Cold & Hot Engine Start System	4-1	Troubleshooting	5-23
TROUBLESHOOTING	4-2		
Rough Engine Idle	4-2	6 ELECTRICAL	
Excessive Fuel Consumption	4-3	INTRODUCTION	6-1
Engine Surge	4-3	BATTERIES	6-1
FUEL LINE & FUEL PUMP TESTS	4-3	Marine Batteries	6-1
Fuel Line Test	4-4	Battery Construction	6-2
Fuel Pump Testing	4-4	Battery Ratings	6-2
Fuel Pump Pressure Test	4-4	Battery Location	6-2
Fuel Pump Volume Test	4-5	Battery Service	6-2
VOLVO FUEL PUMP SERVICE	4-5	Jumper Cables	6-5
FUEL SYSTEM ACCESSORIES	4-6	Storage	6-5
CARBURETORS	4-6	Dual Battery Installation	6-5
Introduction	4-6	GAUGES AND LIGHTS	6-7
"Sour" Fuel	4-7	Constant Voltage System	6-7
Carburetor Service	4-7	Oil & Temperature Gauges	6-7
SOLEX DOWNDRAFT		Warning Lights	6-7
CARBURETOR	4-7	Thermomelt Sticks	6-8
Description and Operation	4-7	Fuel Gauges	6-8
Removal	4-8	Fuel Gauge Hookup	6-9
Disassembling	4-8	Fuel Gauge Troubleshooting	6-9
Cleaning & Inspecting	4-12	Tachometer	6-10
Assembling	4-12	HORNS	6-11
Critical Plate & Gasket Words	4-18	CHARGING SYSTEM	6-11
Adjustments -- Single Carburetor	4-19	Alternator Description	
Critical Idle & Mixture		and Operation	6-12
Adjustment Words	4-19	Alternator Protection	
5 IGNITION		During Service	6-13
		Troubleshooting	6-13
DESCRIPTION	5-1	SERVICE PRESTOLITE	
Ballast Resistor	5-2	CHARGING SYSTEM WITH	
Ignition Timing	5-2	INTEGRAL REGULATOR	6-16
TROUBLESHOOTING	5-3	Disassembling	6-17
System Tests	5-3	Cleaning & Testing	6-17
General Tests	5-4		

CRANKING SYSTEM	6-19
Troubleshooting	6-19
BOSCH CRANKING MOTOR	6-22
Description and Operation	6-22
Servicing	6-22
Disassembling	6-24
Cleaning & Inspecting	6-26
Assembling	6-27
Testing Completed Work	6-30
Installation	6-30

7 COOLING

DESCRIPTION	7-1
"RAW" WATER STRAINER	7-3
HEAT EXCHANGER	7-3
Disassembling	7-5
Assembling	7-5
"RAW" WATER PUMP	7-6
THERMOSTAT	7-7
OIL COOLER	7-8

8 STERN DRIVE

INTRODUCTION	8-1
OPERATION	8-1
TROUBLESHOOTING	8-2
SERVICE PRECAUTIONS	8-3
PROPELLER SERVICE	8-3
Removal	8-3
Change Propeller Rotation	8-5
Retaining Pawl Adjustment	8-5
Installation	8-6
STERN DRIVE REMOVAL	8-8
STERN DRIVE INSTALLATION	8-10
UPPER GEAR ASSEMBLY	8-12
Disassembling	8-13
Cleaning & Inspecting	8-19
Assembling	8-21
INTERMEDIATE HOUSING	8-36
Disassembling	8-36
Cleaning & Inspecting	8-41
Assembling	8-42
LOWER UNIT	8-47
Preparation	8-47
Disassembling	8-48
Cleaning & Inspecting	8-52
Assembling	8-54
Shim Calculation	8-55
Checking "Backlash"	8-59
EXTENSIONS	8-62
TRANSOM SHIELD	8-62

9 TILT/TRIM

INTRODUCTION	9-1
Tilt	9-1
Trim	9-1
TROUBLESHOOTING	9-2
Tilt System	9-2
Tilt/Trim System	9-3
TILT SYSTEM SERVICE	9-4
Removal & Disassembling	9-4
Cleaning & Inspecting	9-9
Assembling & Installation	9-9
TRIM SYSTEM SERVICE	9-13
Removal & Disassembling	9-13
Cleaning & Inspecting	9-14
Assembling & Installation	9-15
TRIM SENDER SERVICE	9-16

10 STEERING

DESCRIPTION	10-1
SYSTEM MAINTENANCE	10-3
SERVO VALVE ADJUSTMENT	10-3
POWER STEERING COOLER	10-4
POWER STEERING KIT	10-4

11 MAINTENANCE

IN-SEASON MAINTENANCE	11-1
OFF-SEASON STORAGE	11-5
PRE-SEASON PREPARATION	11-8
ADJUSTING BOAT TRIM	11-10
ADJUSTING TRIM TAB	11-10
FIBERGLASS HULLS	11-10
BELOW WATERLINE SERVICE	11-11

APPENDIX

METRIC CONVERSION CHART	A-1
DRILL SIZE CONVERSION CHART	A-2
TORQUE VALUES	A-3
TUNE-UP ADJUSTMENTS	A-4
ENGINE SPECIFICATIONS	A-6 to A-17
CARBURETOR SPECIFICATIONS	A-18
WIRING DIAGRAMS	
AQ131 & AQ230 (Model 230 & 250	A-19
Model 230 & 250 w/control panel layout No. 2	A-20
AQ171 (Model 251) DOHC w/control panel layout No. 1	A-21
Model 251 DOHC w/control panel layout No. 2	A-22