

CONTENTS

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-17
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-28
<hr/>			
2	ENGINE AND DRIVE MAINTENANCE	ENGINE AND DRIVE MAINTENANCE	2-2
		LUBRICATION POINTS	2-44
		BOAT MAINTENANCE	2-45
		WINTER STORAGE	2-50
		FIRING ORDERS	2-52
		SPRING COMMISSIONING	2-52
		SPECIFICATIONS	2-53
<hr/>			
3	ENGINE MECHANICAL - 4 CYLINDER INLINE ENGINES	ENGINE MECHANICAL	3-2
		EXPLODED VIEWS	3-19
		SPECIFICATIONS	3-23
<hr/>			
4	ENGINE MECHANICAL - V6 AND V8 ENGINES	ENGINE MECHANICAL	4-2
		EXPLODED VIEWS	4-35
		SPECIFICATIONS CHARTS	4-49
<hr/>			
5	ENGINE OVERHAUL	ENGINE RECONDITIONING	5-2
<hr/>			
6	FUEL SYSTEM - CARBURETORS	FUEL AND COMBUSTION	6-2
		CARBURETOR - HOLLEY 2300 2BBL	6-6
		WIRING DIAGRAMS	6-19
		SPECIFICATIONS	6-20
<hr/>			
7	FUEL & IGNITION SYSTEMS - FUEL INJECTION	FUEL AND COMBUSTION	7-2
		GM MULTI-POINT FUEL INJECTION (MPI)	7-3
		SYSTEM DIAGNOSIS	7-24
		WIRING SCHEMATICS	7-73
		ECM PIN LOCATIONS	7-129
		DTC CHARTS	7-131
		SPECIFICATIONS	7-132

CONTENTS

COOLING SYSTEMS	8-2
MAINTENANCE AND TESTING	8-3
EXPLODED VIEWS	8-6
FLOW DIAGRAMS	8-16

COOLING SYSTEM

8

UNDERSTANDING AND TROUBLESHOOTING	
ELECTRICAL SYSTEMS	9-2
BATTERY	9-9
CHARGING SYSTEM	9-11
STARTER CIRCUIT	9-16
ELECTRONIC SPARK (EST) SYSTEM	9-19
BREAKERLESS INDUCTIVE DISTRIBUTOR (BID) SYSTEM	9-25
INSTRUMENTS AND GAUGES	9-29
SENDING UNITS AND SWITCHES	9-32
WIRING DIAGRAMS	9-33
SPECIFICATIONS	9-64

IGNITION AND ELECTRICAL SYSTEMS

9

STERN DRIVE UNIT - SX & DP-S	10-2
UPPER GEAR HOUSING - SX & DP-S	10-6
LOWER GEAR CASE (LOWER UNIT) SX & DP-S	10-28
TRANSOM ASSEMBLY - SX & DP-S	10-55
STERN DRIVE UNIT - XDP	10-74
SPECIFICATIONS	10-93

STERN DRIVE - SX, DP-S & XDP

10

POWER TRIM AND TILT	11-2
---------------------	------

TRIM AND TILT

11

POWER STEERING SYSTEM	12-2
TROUBLESHOOTING	12-10

STEERING SYSTEM

12

REMOTE CONTROL CABLES	13-2
-----------------------	------

REMOTE CONTROLS

13

MASTER INDEX	13-11
--------------	-------

MASTER INDEX

<p>ANODES 2-46</p> <p> GENERAL INFORMATION 2-46</p> <p> INSPECTION 2-46</p> <p> SERVICING 2-46</p> <p>ALTERNATOR 9-13</p> <p> DISASSEMBLY & ASSEMBLY 9-15</p> <p> INSPECTION 9-13</p> <p> PRECAUTIONS 9-13</p> <p> REMOVAL & INSTALLATION 9-15</p> <p> TESTING 9-13</p> <p>AUDIO WARNING SYSTEM 9-32</p> <p> TESTING 9-32</p> <p>BACKLASH & SHIM ADJUSTMENTS - SX & DP-S 10-18</p> <p> READ THIS FIRST 10-18</p> <p> GEAR LASH & CONTACT PATTERN 10-21</p> <p> OUTPUT GEAR SHIMMING 10-19</p> <p> PINION BEARING CARRIER SHIMMING 10-19</p> <p> THRUST PLATE SHIMMING 10-19</p> <p> TOP COVER SHIMMING 10-21</p> <p> VERTICAL SHAFT END PLAY 10-20</p> <p>BACKLASH & SHIM ADJUSTMENTS - XDP 10-80</p> <p> READ THIS FIRST 10-80</p> <p> FORWARD & REVERSE GEAR SHIMMING 10-80</p> <p> GEAR LASH & CONTACT PATTERN 10-82</p> <p> PINION BEARING CARRIER SHIMMING 10-81</p> <p> TOP COVER SHIMMING 10-81</p> <p> VERTICAL SHAFT END PLAY 10-81</p> <p>BALANCE SHAFT 4-30</p> <p> REMOVAL & INSTALLATION 4-30</p> <p>BASIC ELECTRICAL THEORY 9-2</p> <p> HOW ELECTRICITY WORKS 9-2</p> <p> OHM'S LAW 9-2</p> <p>BASIC OPERATING PRINCIPLES 1-13</p> <p> 2-STROKE MOTORS 1-13</p> <p> 4-STROKE MOTORS 1-15</p> <p> COMBUSTION 1-16</p> <p>BATTERY</p> <p> CABLES 2-50, 9-11</p> <p> CHARGERS 2-49, 9-11</p> <p> CLEANING 2-47</p> <p> CONSTRUCTION 9-9</p> <p> DESCRIPTION & OPERATION 9-9</p> <p> DUAL BATTERY INSTALLATION 9-10</p> <p> GENERAL INFORMATION 2-46</p> <p> LOCATION 9-10</p> <p> MARINE BATTERIES 9-9</p> <p> PRECAUTIONS 2-49</p> <p> RATINGS 9-9</p> <p> SPECIFIC GRAVITY 2-47</p> <p> STORAGE 2-50</p> <p> TERMINALS 2-48</p> <p>BATTERY GAUGE 9-31</p> <p> REMOVAL & INSTALLATION 9-31</p> <p> TESTING 9-31</p> <p>BELTS 2-9</p> <p> ADJUSTMENT 2-10</p> <p> INSPECTION 2-9</p> <p> REMOVAL & INSTALLATION 2-12</p> <p> ROUTING DIAGRAMS 2-10</p> <p>BOAT MAINTENANCE 2-45</p> <p> ANODES (ZINCS) 2-46</p> <p> BATTERIES 2-46</p> <p> INSIDE THE BOAT 2-45</p> <p> THE BOAT'S EXTERIOR 2-45</p>	<p>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) ... 1-10</p> <p> ANCHORS 1-10</p> <p> BAILING DEVICES 1-10</p> <p> COMPASS 1-10</p> <p> FIRST AID KIT 1-10</p> <p> OAR/PADDLE (SECOND MEANS OF PROPULSION) 1-10</p> <p> TOOLS AND SPARE PARTS 1-12</p> <p> VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4</p> <p> COURTESY MARINE EXAMINATIONS 1-10</p> <p> REGULATIONS FOR YOUR BOAT 1-4</p> <p> REQUIRED SAFETY EQUIPMENT 1-5</p> <p>BREAKERLESS INDUCTIVE DISTRIBUTOR (BID) SYSTEM 9-25</p> <p> DESCRIPTION 9-25</p> <p> DISTRIBUTOR 9-27</p> <p> DISTRIBUTOR CAP 9-27</p> <p> IGNITION COIL 9-29</p> <p> TROUBLESHOOTING 9-26</p> <p>BUY OR REBUILD? 5-3</p> <p>CAMSHAFT (V6/V8) 4-31</p> <p> CHECKING LIFT 4-31</p> <p> REMOVAL & INSTALLATION 4-32</p> <p>CAMSHAFT, BEARINGS AND GEAR (3.0L) 3-16</p> <p> CHECKING LIFT 3-16</p> <p> REMOVAL & INSTALLATION 3-16</p> <p>CAMSHAFT POSITION SENSOR 7-10</p> <p> REMOVAL & INSTALLATION 7-10</p> <p>CARBURETED FUEL SYSTEM 6-3</p> <p> CARBURETOR - HOLLEY 2300 2 BBL 6-6</p> <p> ELECTRIC FUEL PUMP 6-16</p> <p> FUEL FILTER 6-14</p> <p> MECHANICAL FUEL PUMP 6-14</p> <p> OPERATION 6-4</p> <p> TROUBLESHOOTING 6-3</p> <p>CARBURETOR - HOLLEY 2300 2 BBL 6-6</p> <p> ADJUSTMENT 6-12</p> <p> ASSEMBLY 6-11</p> <p> CLEANING & INSPECTION 6-9</p> <p> DISASSEMBLY 6-7</p> <p> REMOVAL & INSTALLATION 6-6</p> <p>CHARGING SYSTEM 9-11</p> <p> ALTERNATOR 9-13</p> <p> GENERAL INFORMATION 9-11</p> <p> TROUBLESHOOTING 9-12</p> <p>CHEMICALS 1-17</p> <p> CLEANERS 1-18</p> <p> LUBRICANTS & PENETRANTS 1-17</p> <p> SEALANTS 1-17</p> <p>CIRCUIT BREAKER 7-11</p> <p> REMOVAL & INSTALLATION 7-11</p> <p>COMBINATION MANIFOLD 3-10</p> <p> REMOVAL & INSTALLATION 3-10</p> <p>COMPASS 1-10</p> <p> COMPASS PRECAUTIONS 1-11</p> <p> INSTALLATION 1-11</p> <p> SELECTION 1-10</p> <p>COOLANT CROSSOVER 4-34</p> <p> REMOVAL & INSTALLATION 4-34</p> <p>COOLANT EXPANSION TANK 8-5</p> <p> REMOVAL & INSTALLATION 8-5</p> <p>COOLANT FLOW DIAGRAMS 8-16</p> <p> SX-A & DP-SA 8-16</p> <p> SX-M & DP-SM 8-16</p> <p> XDP 8-17</p> <p> 3.0L 8-18</p> <p> 4.3GL (RAW WATER) 8-19</p> <p> 4.3GX/OSi (RAW WATER) 8-20</p>
--	---

13-12 MASTER INDEX

4.3GXi/OSi (CLOSED)	8-21	CODE 81 - INJECTOR DRIVER B CIRCUIT	7-58
5.0GL/5.7GL (RAW WATER)	8-22	CODE 81 - 5 VOLT REFERENCE CIRCUIT	7-58
5.0GXi-A, 5.7Gi-A & 5.7GXi-A/B (RAW WATER)	8-23	CODE 81 - DEPOWER CIRCUIT	7-58
ALL OTHER 5.0GXi/OSi, 5.7Gi & 5.7GXi/OSi/OSXi (RAW WATER)	8-24	ENGINE PROTECTION MODE CIRCUIT	7-59
5.0L & 5.7L (CLOSED)	8-25	DIAGNOSTIC TROUBLE CODE SCHEMATICS	7-60
8.1L (RAW WATER)	8-26	DISTRIBUTOR - BID	9-27
8.1L (CLOSED)	8-25	DISASSEMBLY & ASSEMBLY	9-28
COOLING SYSTEM	2-33	INSTALLATION - ENGINE DISTURBED	9-28
DESCRIPTION & OPERATION	8-2	INSTALLATION - ENGINE NOT DISTURBED	9-27
DRAINING & FILLING	2-36	REMOVAL	9-27
DRAINING, FLUSHING & FILLING	8-3	DISTRIBUTOR - EST	9-22
FLUSHING	2-34	DISASSEMBLY & ASSEMBLY	9-23
GENERAL INFORMATION	2-33	INSTALLATION - ENGINE DISTURBED	9-23
LEVEL CHECK	2-33	INSTALLATION - ENGINE NOT DISTURBED	9-22
MAINTENANCE AND TESTING	8-3	REMOVAL	9-22
PRESSURE CAP TESTING	2-35	DISTRIBUTOR - MPI	7-12
PRESSURE TEST	2-35	REMOVAL & INSTALLATION	7-12
RAW WATER COOLING TEST	8-4	DISTRIBUTOR AIR GAP	2-24
RAW WATER FLOW TEST	8-4	ADJUSTMENT	2-24
TROUBLESHOOTING	8-3	GENERAL INFORMATION	2-24
COOLING SYSTEM MAINTENANCE AND TESTING	8-3	DISTRIBUTOR CAP	7-11
COOLANT CROSSOVER	8-4	BID	9-27
COOLANT EXPANSION TANK	8-5	EST	9-22
COOLING SYSTEM	8-3	MPI	7-11
HEAT EXCHANGER	8-5	DTC CHARTS	7-131
IMPELLER/RAW WATER PUMP	8-6	ECM PIN LOCATIONS	7-129
NEUTRA-SALT TANK	8-6	ELECTRIC FUEL PUMP	
THERMOSTAT	8-6	COMPONENT REPLACEMENT	6-18
WATER (ENGINE) CIRCULATING PUMP	8-6	DESCRIPTION	6-16
CRANKSHAFT POSITION SENSOR	7-11	FUEL SYSTEM CHECKS	6-18
REMOVAL & INSTALLATION	7-11	PRESSURE TEST	6-18
CYLINDER COMPRESSION	2-16	REMOVAL & INSTALLATION - CARB	6-16
CHECKING COMPRESSION	2-16	REMOVAL & INSTALLATION - MPI	7-17
GENERAL INFORMATION	2-16	ELECTRICAL COMPONENTS	9-2
CYLINDER HEAD		CONNECTORS	9-4
ASSEMBLY	5-12	GROUND	9-3
DISASSEMBLY	5-6	LOAD	9-4
INSPECTION	5-7	POWER SOURCE	9-2
REFINISHING & REPAIRING	5-10	PROTECTIVE DEVICES	9-3
REMOVAL & INSTALLATION - 3.0L	3-18	SWITCHES & RELAYS	9-3
REMOVAL & INSTALLATION - V6/V8	4-32	WIRING & HARNESSSES	9-4
CYLINDER HEAD COVER	3-7	ELECTRONIC CONTROL MODULE (ECM)	7-14
3.0L	3-7	REMOVAL & INSTALLATION	7-14
V6/V8	4-8	ELECTRONIC SPARK TIMING (EST) SYSTEM	9-19
DETERMINING ENGINE CONDITION	5-2	DESCRIPTION	9-19
DIAGNOSTIC TROUBLE CODES (DTC)	7-47	DISTRIBUTOR	9-22
GENERAL INFORMATION	7-47	DISTRIBUTOR CAP	9-22
READING CODES	7-47	IGNITION COIL	9-25
CLEARING CODES	7-47	TROUBLESHOOTING	9-21
GENERAL SYSTEM DIAGNOSIS	7-47	ELECTRONIC TOOLS	1-23
CODE 14 - ECT SENSOR	7-48	BATTERY CHARGERS	
CODE 15 - ECT SENSOR	7-49	BATTERY TESTERS	1-23
CODE 21 - TP CIRCUIT	7-49	GAUGES	1-24
CODE 22 - TP CIRCUIT	7-49	MULTI-METERS (DVOMS)	1-23
CODE 23 - MAT SENSOR CIRCUIT	7-50	ENGINE & DRIVE MAINTENANCE	2-2
CODE 25 - MAT SENSOR CIRCUIT	7-50	BELTS	2-9
CODE 33 - MAP SENSOR CIRCUIT	7-51	CYLINDER COMPRESSION	2-16
CODE 34 - MAP SENSOR CIRCUIT	7-52	DISTRIBUTOR AIR GAP	2-24
CODE 41 - IGNITION SYSTEM	7-53	FLAME ARRESTOR	2-4
CODE 41 - IGNITION COIL (1-8) CONTROL	7-53	FUEL FILTER	2-6
CODE 44 - KS 1/STBD CIRCUIT	7-54	IDLE SPEED & MIXTURE	2-25
CODE 44 - KS 2/PORT CIRCUIT	7-54	IGNITION TIMING	2-22
CODE 51 - CALIBRATION CHECKSUM FAILURE	7-54	IMPELLER/RAW WATER PUMP	2-16
CODE 81 - CKP CIRCUIT	7-54	OVERVIEW	2-2
CODE 81 - CMP CIRCUIT	7-55	PCV VALVE	2-25
CODE 81 - FUEL PUMP RELAY DRIVER	7-57	PROPELLER	2-26
CODE 81 - INJECTOR DRIVER A CIRCUIT	7-57	SERIAL NUMBER IDENTIFICATION	2-2

SPARK PLUG WIRES	2-22	ENGINE CIRCULATING PUMP	4-33
SPARK PLUGS	2-18	ENGINE COUPLER & FLYWHEEL	4-23
THERMOSTAT	2-13	ENGINE IDENTIFICATION	4-2
VALVE ADJUSTMENT	2-26	EXHAUST ELBOW	4-18
ENGINE - 3.0L	3-3	EXHAUST HOSES (BELLOWS) & INTERMEDIATE EXHAUST PIPE	4-18
DETERMING MINIMUM ENGINE HEIGHT	3-5	EXHAUST MANIFOLD	4-17
ENGINE ALIGNMENT	3-5	EXHAUST VALVE (FLAPPER)	4-19
PRIMING THE ENGINE	3-6	FRONT COVER & OIL SEAL	4-27
REMOVAL & INSTALLATION	3-3	FRONT ENGINE MOUNTS	4-7
ENGINE - V6/V8	4-4	GENERAL INFORMATION	4-2
DETERMING MINIMUM ENGINE HEIGHT	4-6	HARMONIC BALANCER, PULLEY & HUB	4-26
ENGINE ALIGNMENT	4-6	HYDRAULIC VALVE LIFTERS	4-11
PRIMING THE ENGINE	4-7	INTAKE MANIFOLD	4-14
REMOVAL & INSTALLATION	4-4	LOWER EXHAUST PIPE (Y-PIPE)	4-18
ENGINE BLOCK	5-12	OIL FILTER BYPASS VALVE	4-23
ASSEMBLY	5-17	OIL PAN	4-20
DISASSEMBLY	5-13	OIL PUMP	4-22
GENERAL INFORMATION	5-12	REAR ENGINE MOUNTS	4-7
INSPECTION	5-13	REAR MAIN OIL SEAL	4-24
REFINISHING	5-17	REAR MAIN OIL SEAL HOUSING/RETAINER	4-25
ENGINE CIRCULATING PUMP	3-18	ROCKER ARMS & PUSH RODS	4-9
3.0L	3-18	TIMING CHAIN & SPROCKETS	4-29
V6/V8	4-33	ENGINE MOUNTS	
ENGINE COOLANT TEMPERATURE SENSOR (ECT)	7-12	FRONT - 3.0L	3-6
REMOVAL & INSTALLATION	7-12	FRONT - V6/V8	4-7
ENGINE COUPLER	3-13	REAR - 3.0L	3-7
3.0L	3-13	REAR - V6/V8	4-7
V6/V8	4-23	ENGINE OVERHAUL TIPS	5-3
ENGINE IDENTIFICATION - 3.0L	3-2	CLEANING	5-4
ENGINE	3-2	OVERHAUL TIPS	5-3
ENGINE MODEL DESIGNATIONS	3-3	REPAIRING DAMAGED THREADS	5-4
ENGINE IDENTIFICATION - V6/V8	4-2	TOOLS	5-3
ENGINE	4-2	ENGINE PREPARATION	5-5
ENGINE MODEL DESIGNATIONS	4-3	ENGINE RECONDITIONING	5-2
ENGINE MECHANICAL - 3.0L	3-2	BUY OR REBUILD?	5-3
CAMSHAFT, BEARINGS AND GEAR	3-16	CYLINDER HEAD	5-5
COMBINATION MANIFOLD	3-10	DETERMING ENGINE CONDITION	5-2
CYLINDER HEAD	3-18	ENGINE BLOCK	5-12
CYLINDER HEAD (VALVE) COVER	3-7	ENGINE OVERHAUL TIPS	5-3
ENGINE	3-3	ENGINE PREPARATION	5-5
ENGINE CIRCULATING (WATER) PUMP	3-18	ENGINE START-UP & BREAK-IN	5-20
ENGINE COUPLER & FLYWHEEL	3-13	ENGINE START-UP & BREAK-IN	5-20
ENGINE IDENTIFICATION	3-2	BREAKING IT IN	5-20
EXHAUST ELBOW	3-10	KEEP IT MAINTAINED	5-20
EXHAUST HOSE (BELLOWS)	3-11	STARTING THE ENGINE	5-20
EXHAUST PIPE	3-11	EXHAUST BELLOWS - SX & DP-S	10-25
EXHAUST VALVE (FLAPPER)	3-12	REMOVAL & INSTALLATION	10-25
FRONT COVER & OIL SEAL	3-15	EXHAUST BELLOWS - XDP	10-83
FRONT ENGINE MOUNTS	3-6	REMOVAL & INSTALLATION	10-83
GENERAL INFORMATION	3-2	EXHAUST ELBOW	
HARMONIC BALANCER, PULLEY & HUB	3-14	3.0L	3-10
HYDRAULIC VALVE LIFTER	3-9	V6/V8	4-18
OIL FILTER BYPASS VALVE	3-13	EXHAUST HOSE (BELLOWS)	
OIL PAN	3-12	3.0L	3-11
OIL PUMP	3-12	V6/V8	4-18
PUSH ROD COVER	3-8	EXHAUST MANIFOLD	4-17
REAR ENGINE MOUNTS	3-7	REMOVAL & INSTALLATION	4-17
REAR MAIN OIL SEAL	3-14	EXHAUST PIPE	
REAR MAIN OIL SEAL HOUSING/RETAINER	3-14	3.0L	3-11
ROCKER ARMS & PUSH RODS	3-8	V6/V8	4-18
ENGINE MECHANICAL - V6/V8	4-2	EXHAUST VALVE (FLAPPER)	
BALANCE SHAFT	4-30	3.0L	3-12
CAMSHAFT	4-31	V6/V8	4-19
COOLANT CROSSOVER	4-34	FASTENERS, MEASUREMENTS AND CONVERSIONS	1-26
CYLINDER HEAD	4-32	BOLTS, NUTS AND OTHER THREADED RETAINERS	1-26
CYLINDER HEAD (VALVE) COVER	4-8	STANDARD AND METRIC MEASUREMENTS	1-27
ENGINE	4-4	TORQUE	1-27

13-14 MASTER INDEX

FIRING ORDERS	2-52	FUEL & COMBUSTION - MPI	7-2
FLAME ARRESTOR	2-4	COMBUSTION	7-2
GENERAL INFORMATION	2-4	FUEL	7-2
REMOVAL & INSTALLATION	2-5	FUEL & OIL RECOMMENDATIONS	2-28
FLAPPER VALVE		ENGINE OIL	2-28
3.0L	3-12	FUEL	2-28
V6/V8	4-19	OIL LEVEL CHECK	2-29
FLUID DISPOSAL	2-28	OIL & FILTER CHANGE	2-30
FLUIDS AND LUBRICANTS	2-28	GENERAL MPI DIAGNOSTIC TESTS	7-33
COOLING SYSTEM	2-33	AUDIBLE WARNING HORN DIAGNOSIS	7-39
FLUID DISPOSAL	2-28	DATA LINK CONNECTOR DIAGNOSIS	7-36
FUEL & OIL RECOMMENDATIONS	2-28	DIAGNOSTIC TEST SCHEMATICS	7-43
POWER STEERING	2-32	ENGINE CRANKS BUT WILL NOT RUN	7-36
POWER TRIM PUMP	2-43	FUEL INJECTOR BALANCE TEST	7-39
STERN DRIVE UNIT	2-39	FUEL INJECTOR COIL TEST	7-38
FLYWHEEL		FUEL PUMP RELAY CIRCUIT DIAGNOSIS	7-37
3.0L	3-13	FUEL SYSTEM DIAGNOSIS	7-37
V6/V8	4-23	GENERAL INFORMATION	7-33
FRONT COVER & OIL SEAL		IDLE AIR CONTROL (IAC) FUNCTION TEST	7-39
3.0L	3-15	IGNITION RELAY DIAGNOSIS	7-37
V6/V8	4-27	OBD SYSTEM CHECK	7-36
FRONT ENGINE MOUNTS		GIMBAL BEARING - XDP UNITS	10-92
3.0L	3-6	REMOVAL & INSTALLATION	10-92
V6/V8	4-7	GIMBAL HOUSING/TRANSOM SHIELD - SX & DP-S	10-64
FUEL - CARBURETOR	6-2	DISASSEMBLY & ASSEMBLY	10-64
ALCOHOL-BLENDED FUELS	6-2	REMOVAL & INSTALLATION	10-72
HIGH ALTITUDE OPERATION	6-2	SHIFT CABLE SLEEVE REPLACEMENT	10-73
OCTANE RATING	6-2	GIMBAL HOUSING/TRANSOM SHIELD - XDP	10-92
RECOMMENDATIONS	6-2	DISASSEMBLY & ASSEMBLY	10-92
VAPOR PRESSURE	6-2	GIMBAL RING - SX-M/DP-SM	10-60
FUEL - MPI	7-2	REMOVAL & INSTALLATION	10-60
ALCOHOL-BLENDED FUELS	7-2	GIMBAL RING - XDP UNITS	10-91
OCTANE RATING	7-2	REMOVAL & INSTALLATION	10-91
RECOMMENDATIONS	7-2	GM MULTI-POINT FUEL INJECTION (MFI)	7-3
VAPOR PRESSURE	7-2	CAMSHAFT POSITION SENSOR (CMP)	7-10
FUEL CELL	7-15	CIRCUIT BREAKER	7-11
REMOVAL & INSTALLATION	7-15	CRANKSHAFT POSITION SENSOR (CKP)	7-11
FUEL FILTER	2-6	DESCRIPTION & OPERATION	7-3
GENERAL INFORMATION	2-6	DISTRIBUTOR	7-12
REMOVAL & INSTALLATION	2-7	DISTRIBUTOR CAP	7-11
FUEL GAUGE	9-30	ECM	7-14
HOOK-UP	9-30	ECT SENSOR	7-12
REMOVAL & INSTALLATION	9-31	FUEL CELL	7-15
TESTING	9-30	FUEL FILTER	7-16
TROUBLESHOOTING	9-30	FUEL INJECTORS	7-16
FUEL INJECTORS	7-16	FUEL LINE QUICK-CONNECT FITTINGS	7-16
REMOVAL & INSTALLATION	7-16	FUEL PRESSURE REGULATOR	7-17
FUEL LINE QUICK-CONNECT FITTINGS	7-16	FUEL PUMP	7-17
REMOVAL & INSTALLATION	7-16	FUEL PUMP RELAY	7-19
FUEL PRESSURE REGULATOR	7-17	FUEL RAIL	7-19
REMOVAL & INSTALLATION	7-17	IAC VALVE	7-20
FUEL PUMP		IAT SENSOR	7-22
ELECTRIC - CARBURETOR	6-16	IGNITION COILS	7-21
ELECTRIC - MPI	7-17	IGNITION COIL & CONTROL MODULE	7-22
MECHANICAL	6-14	KS SENSOR	7-22
FUEL PUMP RELAY	7-19	MAP/MAT SENSOR	7-22
REMOVAL & INSTALLATION	7-19	RELIEVING FUEL PRESSURE	7-10
FUEL RAIL	7-19	THROTTLE BODY	7-23
REMOVAL & INSTALLATION	7-19	TP SENSOR	7-24
FUEL & COMBUSTION - CARB	6-2	HAND TOOLS	1-19
COMBUSTION	6-2	BREAKER BARS	1-20
FUEL	6-2	HAMMERS	1-22
		PLIERS	1-21
		SCREWDRIVERS	1-21
		SOCKET SETS	1-19
		TORQUE WRENCHES	1-20
		WRENCHES	1-21

HARMONIC BALANCER, PULLEY & HUB	3-14	LOWER EXHAUST PIPE (Y-PIPE)	4-18
3.0L	3-14	REMOVAL & INSTALLATION	4-18
V6/V8	4-26	LOWER GEAR CASE (LOWER UNIT) - SX & DP-S	10-28
HEAT EXCHANGER	8-5	DESCRIPTION & OPERATION	10-28
REMOVAL, DISASSEMBLY & INSTALLATION	8-5	LOWER GEAR HOUSING (LOWER UNIT)	10-28
HORIZONTAL & UPPER VERTICAL SHAFT - XDP	10-76	PROPELLER	10-54
ASSEMBLY & INSTALLATION	10-78	LOWER GEAR HOUSING - SX & DP-S	10-28
BACKLASH & SHIM ADJUSTMENTS	10-80	DISASSEMBLY & ASSEMBLY	10-29
REMOVAL & DISASSEMBLY	10-76	REMOVAL & INSTALLATION	10-28
HOW TO USE THIS MANUAL	1-2	LOWER UNIT - SX & DP-S	10-28
AVOIDING THE MOST COMMON MISTAKES	1-3	DISASSEMBLY & ASSEMBLY	10-29
AVOIDING TROUBLE	1-2	REMOVAL & INSTALLATION	10-28
CAN YOU DO IT?	1-2	LOWER VERTICAL DRIVESHAFT & PROPELLER SHAFT - XDP	10-85
DIRECTIONS AND LOCATIONS	1-2	ASSEMBLY & INSTALLATION	10-88
MAINTENANCE OR REPAIR?	1-2	REMOVAL & DISASSEMBLY	10-85
PROFESSIONAL HELP	1-3	LUBRICATION POINTS	2-44
PURCHASING PARTS	1-3	GIMBAL BEARING & U-JOINTS	2-44
WHERE TO BEGIN	1-2	PROPELLER SHAFT	2-44
HYDRAULIC LINES & MANIFOLD	11-11	SHIFT CABLE & TRANSMISSION LINKAGE PIVOT POINTS	2-44
REMOVAL & INSTALLATION	11-11	STEERING SYSTEM	2-44
HYDRAULIC VALVE LIFTER - 3.0L	3-9	THROTTLE CABLE	2-44
REMOVAL & INSTALLATION	3-9	MANIFOLD ABSOLUTE PRESSURE SENSOR	7-22
HYDRAULIC VALVE LIFTERS - V6/V8	4-11	REMOVAL & INSTALLATION	7-22
NOISY LIFTERS	4-11	MANIFOLD AIR TEMPERATURE SENSOR	7-22
REMOVAL & INSTALLATION	4-11	REMOVAL & INSTALLATION	7-22
HYDRAULIC & MECHANICAL PROBLEMS	11-5	MANIFOLDS - V6/V8	
ERRATIC MOTION DURING OPERATION	11-7	EXHAUST	4-17
GENERAL	11-5	INTAKE	4-14
TRIM-IN/TILT-DOWN - COMPLETE CIRCUIT	11-6	MEASURING TOOLS	1-24
TRIM-IN/TILT-DOWN - PUMP ISOLATION	11-6	DEPTH GAUGES	1-26
TRIM-OUT/TILT-UP - COMPLETE CIRCUIT	11-6	DIAL INDICATORS	1-25
TRIM-OUT/TILT-UP - PUMP ISOLATION	11-6	MICROMETERS & CALIPERS	1-25
IDLE AIR CONTROL VALVE	7-20	TELESCOPING GAUGES	1-26
REMOVAL & INSTALLATION	7-20	MECHANICAL FUEL PUMP	6-14
IDLE SPEED & MIXTURE	2-25	DESCRIPTION	6-14
ADJUSTMENT	2-25	FUEL LINE TEST	6-15
IGNITION COIL		PRESSURE TEST	6-25
BID	9-29	REMOVAL & INSTALLATION	6-14
EST	9-25	VACUUM TEST	6-15
MPI	7-21	NEUTRA-SALT TANK	8-6
IGNITION COIL & CONTROL MODULE	7-22	REMOVAL & INSTALLATION	8-6
REMOVAL & INSTALLATION	7-22	NEUTRAL START SWITCH	13-10
IGNITION SWITCH	9-32	ELECTRICAL TEST	13-10
TESTING	9-32	MECHANICAL TEST	13-10
IGNITION SYSTEM		OIL FILTER BYPASS VALVE	
BID SYSTEM	9-25	3.0L	3-13
EST SYSTEM	9-19	V6/V8	4-23
IGNITION TIMING	2-22	OIL PAN	
ADJUSTMENT	2-23	3.0L	3-12
GENERAL INFORMATION	2-22	V6/V8	4-20
IMPELLER	2-16	OIL PRESSURE SENDING UNIT	9-32
REMOVAL & INSTALLATION	2-16	TESTING	9-32
INSIDE THE BOAT	2-45	OIL PUMP	3-12
INSTRUMENTS & GAUGES	9-29	REMOVAL & INSTALLATION	3-12
BATTERY GAUGE	9-31	OIL & TEMPERATURE GAUGES	9-29
FUEL GAUGE	9-30	REMOVAL & INSTALLATION	9-30
OIL AND TEMPERATURE GAUGES	9-29	TESTING	9-29
SPEEDOMETER	9-31	TROUBLESHOOTING	9-29
TACHOMETER	9-31	PCV VALVE	2-25
INTAKE AIR TEMPERATURE SENSOR	7-22	GENERAL INFORMATION	2-25
REMOVAL & INSTALLATION	7-22	INSPECTION	2-26
INTAKE MANIFOLD	4-14	REMOVAL & INSTALLATION	2-26
REMOVAL & INSTALLATION	4-14	PIVOT HOUSING - SX-M/DP-SM	10-5
INTERMEDIATE EXHAUST PIPE	4-18	REMOVAL & INSTALLATION	10-58
REMOVAL & INSTALLATION	4-18	PIVOT HOUSING/GIMBAL RING ASSEMBLY - SX-A/DP-SA	10-61
KNOCK SENSOR	7-22	REMOVAL & INSTALLATION	10-61
REMOVAL & INSTALLATION	7-22	POWER STEERING	2-32

13-16 MASTER INDEX

BLEEDING	2-32	REMOTE CONTROL CABLES	13-2
FLUID LEVEL	2-32	NEUTRAL START SWITCH	13-10
POWER TRIM PUMP	2-43	SHIFT CABLE	13-5
FLUID LEVEL	2-43	THROTTLE CABLE	13-2
POWER TRIM & TILT	11-2	REQUIRED SAFETY EQUIPMENT	1-5
DESCRIPTION & OPERATION	11-2	FIRE EXTINGUISHERS	1-6
HYDRAULIC LINES & MANIFOLD	11-11	PERSONAL FLOTATION DEVICES	1-7
SERVICE PRECAUTIONS	11-8	SOUND PRODUCING DEVICES	1-8
SYSTEM TESTING	11-8	TYPES OF FIRES	1-5
SYSTEM BLEEDING	11-8	VISUAL DISTRESS SIGNALS	1-8
TRIM SENDER	11-9	WARNING SYSTEM	1-7
TRIM LIMITER	11-11	ROCKER ARMS & PUSH RODS - 3.0L	3-8
TRIM/TILT CYLINDER	11-14	REMOVAL & INSTALLATION	3-8
TRIM/TILT PUMP ASSEMBLY	11-12	VALVE LASH ADJUSTMENT	3-8
TROUBLESHOOTING	11-5	ROCKER ARMS & PUSH RODS - V6/V8	4-9
POWER STEERING COOLER	12-8	REMOVAL & INSTALLATION	4-9
REMOVAL & INSTALLATION	12-8	SAFETY IN SERVICE	1-12
POWER STEERING PUMP	12-6	DO'S	1-12
REMOVAL & INSTALLATION	12-6	DON'TS	1-12
POWER STEERING SYSTEM	12-2	SAFETY TOOLS	1-17
STEERING CABLE	12-4	EYE AND EAR PROTECTION	1-17
STEERING CYLINDER	12-5	WORK CLOTHES	1-17
DESCRIPTION & OPERATION	12-2	WORK GLOVES	1-17
MAINTENANCE PROCEDURES	12-4	SEAWATER PUMP	2-16
POWER STEERING COOLER	12-8	REMOVAL & INSTALLATION	2-16
POWER STEERING PUMP	12-6	SENDING UNITS & SWITCHES	9-32
TESTING	12-3	AUDIO WARNING SYSTEM	9-32
TIE BAR (TWIN ENGINES)	12-9	IGNITION SWITCH	9-32
PREPPING FOR STORAGE	2-50	OIL PRESSURE SENDING UNIT	9-32
ETHANOL DEBATE	2-50	WATER TEMPERATURE SENDER	9-32
WHERE TO STORE	2-50	SERIAL NUMBER IDENTIFICATION	2-2
PROPELLER - SX & DP-S	10-54	EMISSION CONTROL LABEL	2-3
REMOVAL & INSTALLATION	10-54	ENGINE	2-2
PROPELLER - XDP	10-91	ENGINE MODEL DESIGNATIONS	2-3
REMOVAL & INSTALLATION	10-91	GENERAL INFORMATION	2-2
PUSH ROD COVER	3-8	STERN DRIVE	2-4
REMOVAL & INSTALLATION	3-8	TRANSOM ASSEMBLY	2-4
PUSH RODS - 3.0L	3-8	SHIFT CABLE	13-5
REMOVAL & INSTALLATION	3-8	GENERAL INFORMATION	13-5
VALVE LASH ADJUSTMENT	3-8	REMOVAL & INSTALLATION	13-6
PUSH RODS - V6/V8	4-9	SHIFT CABLE SLEEVE REPLACEMENT	13-9
REMOVAL & INSTALLATION	4-9	SHIFT CABLE STROKE CHECK	13-9
RAW WATER PUMP	2-16	SHIFT MECHANISM - SX & DP-S	10-25
REMOVAL & INSTALLATION	2-16	DISASSEMBLY, ASSEMBLY & SHIMMING	10-26
REAR ENGINE MOUNTS		REMOVAL & INSTALLATION	10-25
3.0L	3-7	SHIFT MECHANISM - XDP	10-83
V6/V8	4-7	DISASSEMBLY, ASSEMBLY & SHIMMING	10-84
REAR MAIN OIL SEAL		REMOVAL & INSTALLATION	10-83
3.0L	3-14	SHOP EQUIPMENT	1-17
V6/V8	4-24	CHEMICALS	1-17
REAR MAIN OIL SEAL HOUSING/RETAINER		SAFETY TOOLS	1-17
3.0L	3-14	SPARK PLUG WIRES	2-22
V6/V8	4-25	REMOVAL & INSTALLATION	2-22
REGULATIONS FOR YOUR BOAT	1-4	TESTING	2-22
CAPACITY INFORMATION	1-4	SPARK PLUGS	2-18
CERTIFICATE OF COMPLIANCE	1-5	GENERAL INFORMATION	2-18
DOCUMENTING OF VESSELS	1-4	HEAT RANGE	2-18
HULL IDENTIFICATION NUMBER	1-4	INSPECTION & GAPPING	2-22
LENGTH OF BOATS	1-4	READING PLUGS	2-21
NUMBERING OF VESSELS	1-4	REMOVAL & INSTALLATION	2-19
REGISTRATION OF BOATS	1-4	SERVICE	2-19
SALES AND TRANSFERS	1-4		
VENTILATION	1-5		
VENTILATION SYSTEMS	1-5		
RELIEVING FUEL PRESSURE	7-10		

SPECIFICATIONS	
ALTERNATOR	9-64
CAPACITIES	2-57
CONVERSION FACTORS	1-27
DRIVE MODEL APPLICATIONS	10-96
ENGINE - 3.0L	3-24
ENGINE - V6/V8	4-55
ENGINE MODEL APPLICATIONS	2-53
HOLLEY 2300 2 BBL	6-20
MAINTENANCE INTERVALS	2-58
TORQUE - 3.0L	3-23
TORQUE - V6/V8	4-49
TORQUE - CARBURETOR	6-20
TORQUE - MPI	7-132
TORQUE - STERNDRIVE	10-93
TROUBLESHOOTING	2-62
TUNE-UP	2-55
TYPICAL TORQUE VALUES - METRIC BOLTS	1-28
TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS	1-28
SPEEDOMETER	9-31
REMOVAL & INSTALLATION	9-31
TESTING	9-31
SPRING COMMISSIONING	2-52
GENERAL INFORMATION	2-52
SPRING COMMISSIONING CHECKLIST	2-52
SPRING COMMISSIONING CHECKLIST	2-52
STARTER CIRCUIT	9-16
DESCRIPTION & OPERATION	9-16
STARTER MOTOR	9-16
TROUBLESHOOTING	9-16
STARTER MOTOR	9-16
DESCRIPTION & OPERATION	9-16
DISASSEMBLY & ASSEMBLY	9-19
PRECAUTIONS	9-17
REMOVAL & INSTALLATION	9-18
TESTING	9-18
TROUBLESHOOTING	9-17
STEERING CABLE	12-4
CABLE INSTALLATION PROBLEMS	12-4
MAINTENANCE	12-4
REMOVAL & INSTALLATION	12-4
STEERING CYLINDER	12-5
REMOVAL & INSTALLATION	12-5
STERN DRIVE UNIT - SX & DP-S	
CHECKING FOR WATER	2-40
DESCRIPTION & OPERATION	10-2
DRAIN & REFILL	2-40
FLUID LEVEL	2-39
REMOVAL & INSTALLATION	10-2
STERN DRIVE UNIT	10-2
TRIM SENDING UNIT ADJUSTMENT	10-6
TROUBLESHOOTING	10-2
STERN DRIVE UNIT - XDP	
CHECKING FOR WATER	2-40
DESCRIPTION & OPERATION	10-74
DRAIN & REFILL	2-40
FLUID LEVEL	2-39
GIMBAL BEARING	10-92
GIMBAL HOUSING/TRANSOM SHIELD	10-92
GIMBAL RING	10-91
EXHAUST BELLOWS	10-83
HORIZONTAL & UPPER VERTICAL SHAFT	10-76
LOWER VERTICAL DRIVESHAFT & PROPELLER SHAFT	10-85
PRESSURE & VACUUM TEST	10-76
PROPELLER	10-91
REMOVAL & INSTALLATION	10-74
SHIFT MECHANISM	10-83
STERN DRIVE UNIT	10-74
U-JOINT BELLOWS	10-83
U-JOINT/DRIVESHAFT ASSEMBLY	10-82
SYMPTOM TESTS	7-26
SYSTEM BLEEDING - PTT	11-8
FILLING & BLEEDING A DRY SYSTEM	11-8
GENERAL	11-8
SYSTEM DIAGNOSIS	7-24
GENERAL DIAGNOSTIC TESTS	7-33
GENERAL INFORMATION	7-24
PRECAUTIONS	7-25
SYMPTOM TESTS	7-26
DIAGNOSTIC TROUBLE CODES	7-47
DTC SCHEMATICS	7-60
TACHOMETER	9-31
REMOVAL & INSTALLATION	9-31
TESTING	9-31
TEST EQUIPMENT	9-4
JUMPER WIRES	9-4
MULTI-METERS	9-6
TEST LIGHTS	9-5
THE BOAT'S EXTERIOR	2-45
ABOVE WATERLINE	2-45
BELOW WATERLINE	2-45
THERMOSTAT	2-13
GENERAL INFORMATION	2-13
REMOVAL & INSTALLATION	2-13
TESTING	2-16
THROTTLE BODY	7-23
REMOVAL & INSTALLATION	7-23
THROTTLE CABLE	13-2
GENERAL INFORMATION	13-2
REMOVAL & INSTALLATION	13-2
THROTTLE POSITION SENSOR (TP)	7-24
REMOVAL & INSTALLATION	7-24
TIE BAR (TWIN ENGINES)	12-9
ADJUSTMENT	12-9
TIMING CHAIN & SPROCKETS	4-29
REMOVAL & INSTALLATION	4-29
TOOLS	1-18
ELECTRONIC TOOLS	1-23
HAND TOOLS	1-19
MEASURING TOOLS	1-24
OTHER COMMON TOOLS	1-22
SPECIAL TOOLS	1-23
TORTIONAL DAMPER, PULLEY & HUB	3-14
REMOVAL & INSTALLATION	3-14
TRANSOM ASSEMBLY - SX & DP-S	10-55
DESCRIPTION & OPERATION	10-55
GIMBAL HOUSING/TRANSOM SHIELD	10-64
GIMBAL RING	10-60
PIVOT HOUSING	10-5
PIVOT HOUSING/GIMBAL RING ASSEMBLY	10-61
TRIM LIMITER	11-11
TRIM SENDER	11-9
ADJUSTMENT	11-9
REMOVAL & INSTALLATION	11-10
TRIM/TILT CYLINDER	11-14
DISASSEMBLY & ASSEMBLY	11-17
REMOVAL & INSTALLATION	11-14
TRIM/TILT PUMP ASSEMBLY	11-12
DESCRIPTION & OPERATION	11-12
DISASSEMBLY & ASSEMBLY	11-13
REMOVAL & INSTALLATION	11-12
TROUBLESHOOTING	
BASIC OPERATING PRINCIPLES	1-13
BID SYSTEM	9-26

13-18 MASTER INDEX

CARBURETOR.....	6-20	DISASSEMBLY.....	10-8
CHARGING SYSTEM.....	9-12	EXHAUST BELLOWS.....	10-25
COMBUSTION RELATED PISTON FAILURES.....	6-4	PRESSURE & VACUUM TEST.....	10-7
COMMON PROBLEMS.....	6-3	REMOVAL & INSTALLATION.....	10-6
ELECTRICAL.....	9-6	UPPER GEAR HOUSING.....	10-6
ENGINE OVERHEATS - CLOSED.....	8-3	SHIFT MECHANISM.....	10-25
ENGINE OVERHEATS - MECHANICAL.....	8-3	U-JOINT/DRIVE SHAFT ASSEMBLY.....	10-24
ENGINE OVERHEATS - RAW WATER.....	8-3	U-JOINT BELLOWS.....	10-25
EST SYSTEM.....	9-21	VALVE ADJUSTMENT	
FUEL GAUGE.....	9-30	3.0L.....	2-26
OIL & TEMP GAUGES.....	9-29	4.3L V6 & 8.1L V8.....	4-11
POWER STEERING.....	12-10	5.0L/5.7L V8.....	4-11
POWER TRIM & TILT.....	11-5	VALVE COVER	
STARTER.....	9-17	3.0L.....	3-7
STARTING SYSTEM.....	9-16	V6/V8.....	4-8
SX & DP-S.....	10-2	VALVE LIFTERS.....	4-11
WATER IN CYLINDERS.....	8-3	NOISY LIFTERS.....	4-11
WATER IN OIL.....	8-3	REMOVAL & INSTALLATION.....	4-11
U-JOINT BELLOWS		WATER PUMP	
SX & DP-S.....	10-25	ENGINE CIRCULATING PUMP.....	3-18
XDP.....	10-83	RAW WATER.....	2-16
U-JOINT/DRIVE SHAFT ASSEMBLY - SX & DP-S.....	10-24	WATER TEMPERATURE SENDER.....	9-32
DISASSEMBLY & ASSEMBLY.....	10-24	TESTING.....	9-32
REMOVAL & INSTALLATION.....	10-24	WINTER STORAGE..... 2-50	
U-JOINT/DRIVESHAFT ASSEMBLY - XDP.....	10-82	GENERAL INFORMATION.....	2-50
DISASSEMBLY & ASSEMBLY.....	10-82	PREPPING FOR STORAGE.....	2-50
REMOVAL & INSTALLATION.....	10-82	WINTER STORAGE CHECKLIST.....	2-51
UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS. 9-2		WIRE & CONNECTOR REPAIR.....	9-8
BASIC ELECTRICAL THEORY.....	9-2	WIRING DIAGRAMS	
ELECTRICAL COMPONENTS.....	9-2	CARBURETOR.....	6-19
TEST EQUIPMENT.....	9-4	ELECTRICAL.....	9-33
TROUBLESHOOTING.....	9-6	MPI.....	7-73
WIRE AND CONNECTOR REPAIR.....	9-8	ZINCS.....	2-46
UPPER GEAR HOUSING - SX & DP-S		GENERAL INFORMATION.....	2-46
ASSEMBLY.....	10-16	INSPECTION.....	2-46
BACKLASH & SHIM ADJUSTMENTS.....	10-18	SERVICING.....	2-46
DESCRIPTION & OPERATION.....	10-6		