

INDEX

	Page
Carburetors	4B-1
Pressure Type	4B-1
Troubleshooting	4B-1
Removal and Installation	4B-1
Disassembly	4B-2
Fuel Filter	4B-2
Idle Adjustment Screw	4B-2
Idle Restriction	4B-2
Main Discharge Nozzle	4B-2
Fixed High Speed Jet	4B-2
Float	4B-2
Throttle Shutter	4B-2
Choke Shutter	4B-2
Cleaning and Inspection	4B-4
Reassembly	4B-4
Float	4B-4
Float Level and Drop Adjustment	4B-4
Fuel Filter	4B-4
Choke Shutter	4B-4
Throttle Shutter	4B-4
Main Discharge Nozzle	4B-4
Fixed High Speed Jet	4B-4
Idle Restriction Tube	4B-4
Idle Adjustment Screw	4B-4
Adjustments	4B-5
High Speed Adjustment	4B-5
Idle Adjustment	4B-5
Integral Fuel Pump Type	4B-6
Troubleshooting	4B-6
Removal and Installation	4B-6
Disassembly	4B-7
Cleaning and Inspection	4B-8
Reassembly	4B-9
Adjustments	4B-10