


ELECTRIC STARTER WIRING DIAGRAM

4-CYL. SINGLE LEVER REMOTE CONTROL

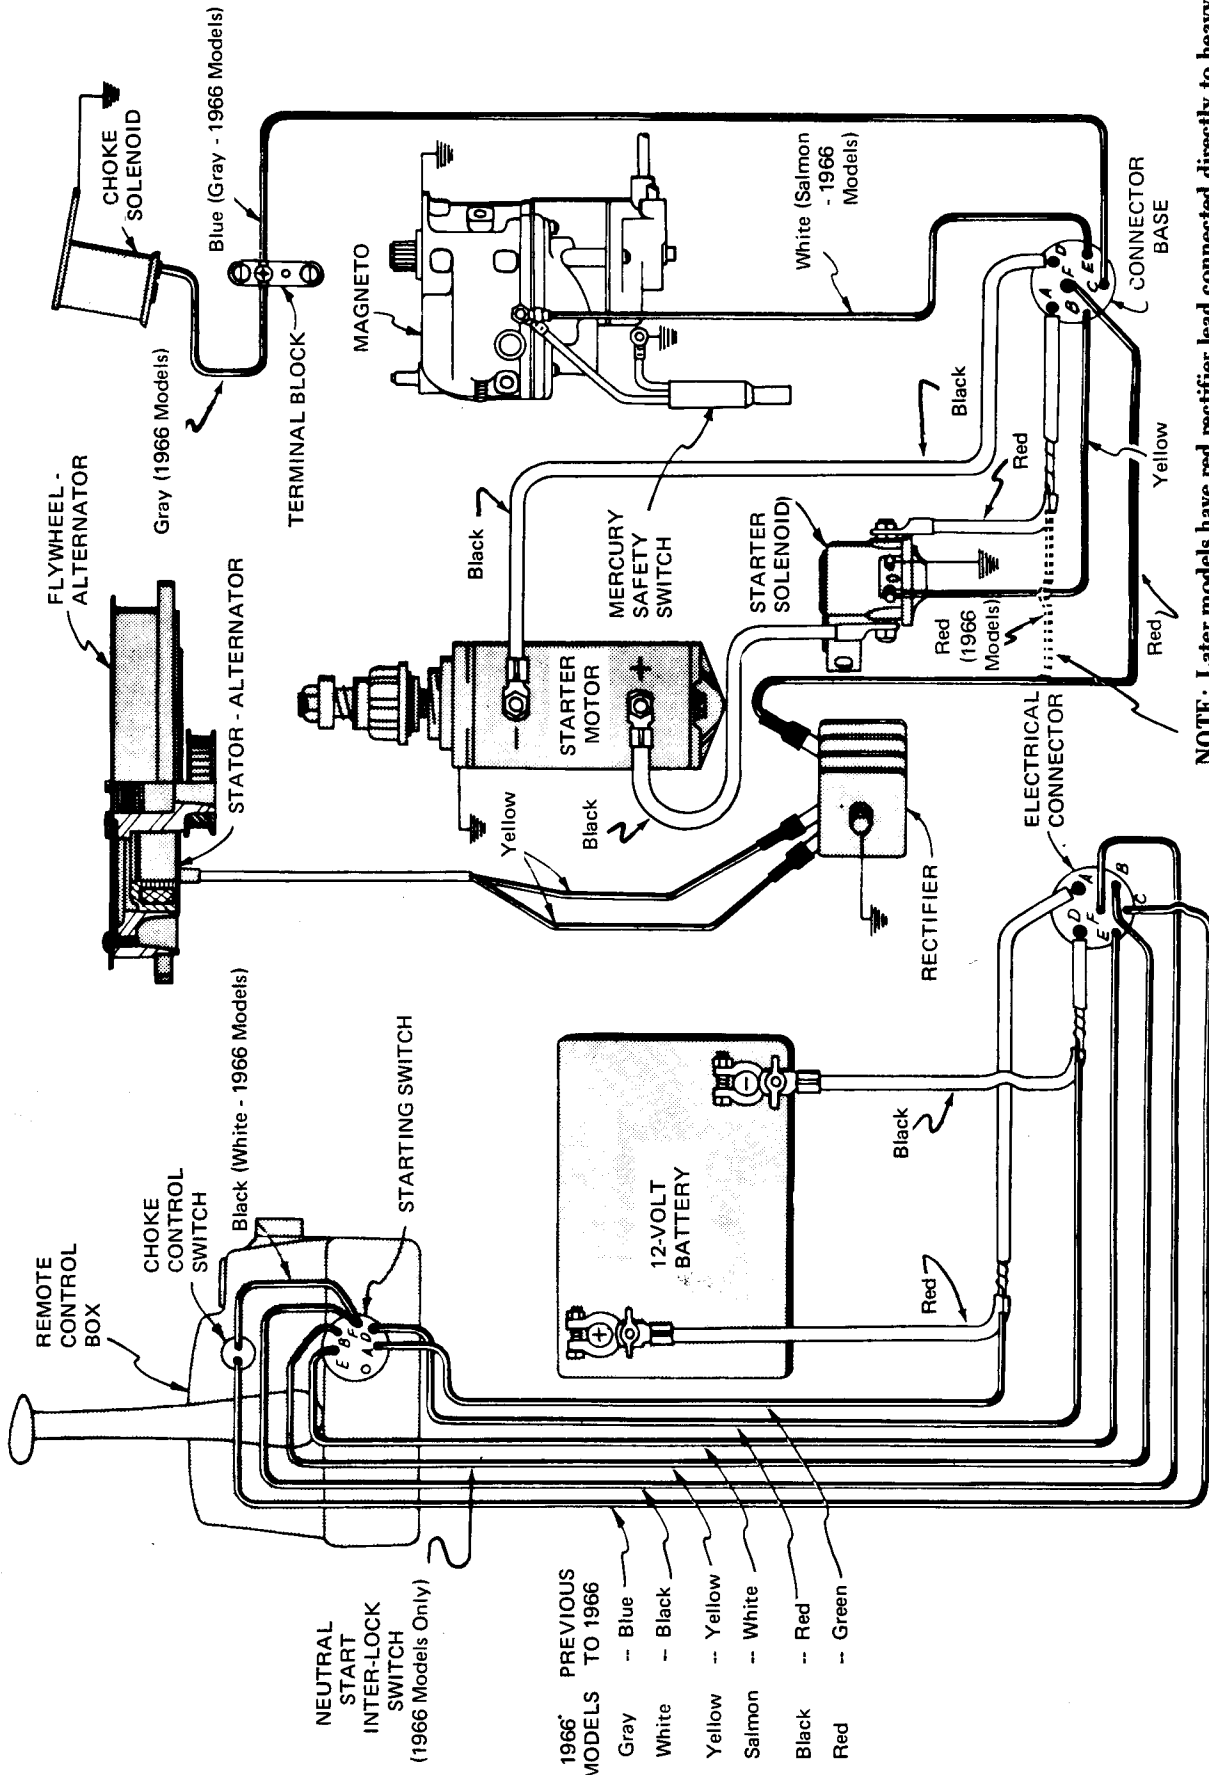

NOTE: Later models have red rectifier lead connected directly to heavy red cable. This will permit ignition switch to be turned to "OFF" position at any engine RPM without damage to rectifier.