

B. Adjusting Detents

1. Forward Detent

- a. Insert harness connector into connector.
- b. With control handle in vertical position, and with ignition switch on, depress starting button on underside of handle and slowly move handle forward (while holding switch depressed) until starter motor cranks engine.
- c. With handle in this position, turn adjusting screw in "slow" direction until handle moves.
- d. Now turn adjusting screw in "fast" direction 6 full turns. (Figure 12)

2. Reverse Detent

- a. Adjust in same manner as "Forward Detent", preceding.
- b. Handle mechanism of this control is side-

loaded and must be moved toward operator to move past starting detents for either

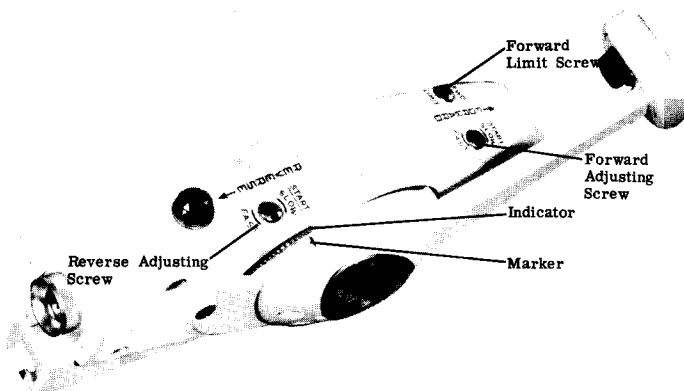


Figure 12. Forward Limit Adjustment

full forward or full reverse operation. (Refer to Section I for operation.)

1. If spark plug burning or pre-ignition is experienced, it is recommended that J2J (33-32433) spark plugs be installed.